

Installation Instructions

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS

Warning! To reduce the risk of FIRE OR INJURY TO PERSONS:

1. Do not touch luminaire while lamp is on. Turn off/unplug and allow to cool before replacing lamp.
2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
3. Do not touch hot lens, body, or cap.
4. Keep lamp away from materials that may burn.
5. Do not touch lamp at any time. Use a soft cloth. Oil from your skin may damage lamp.
6. Do not operate the luminaire with damaged or missing parts.
7. Do not disassemble luminaire beyond cap removal to facilitate lamp and/or accessory installation or replacement.
8. Remove any debris accumulated in the cap periodically.
9. Do not install luminaire within 10 feet of a pool, spa, or fountain.
10. Have fixture installed in accordance with all applicable installation codes and standards by a person familiar with the construction and operation of the fixture and the hazards involved.
11. Consult a qualified electrician to ensure correct branch circuit conductor.
12. Use only cable rated for proper voltage.

Installation

1. Unpack the WM16 Dual PAR30/PAR38 Metal Halide Wall Mount from its shipping container and inspect.
2. Install and wire the Outlet Box (not included) per applicable standards and codes.
3. Unscrew the two (2) Mount Screws with a 5/32" hex wrench to remove the Universal Mounting Ring.
4. Mount the Universal Mounting Ring to the Outlet Box using appropriately sized Mounting Ring Screws (not supplied). Note: adjust the Universal Mounting Ring so the fixture will be properly oriented when mounted.
5. Connect the socket leads to the power supply wires using appropriate connectors (not supplied) per applicable codes. Note: This fixture requires the use of a Vision3 Lighting remote ballast for each lamp. Each set of socket leads must be wired to its own ballast. Each blue lead should connect to the "Lamp Post" output lead from its' respective ballast (usually blue). Each white lead should connect to the "Lamp Shell" output lead from its' respective ballast (usually white).
6. Using the supplied Mount Screws, and a 5/32" hex wrench, mount the WM16 to the Universal Mounting Ring.
7. If the WM16 is not oriented correctly, remove, adjust the Universal Mounting Ring, and re-install.
8. Install lamp and accessories as described below.

Lamp Maintenance

1. Remove power from fixture and let cool before touching. **Caution! Luminaire may still be hot!**
2. Using a 5/32" hex wrench unscrew the Faceplate Screws. Note: The Faceplate Screws are captive and should not be removed from the Faceplate.
3. Remove Lens, Lens Seal, and Accessories. Note: If necessary, use a flat blade screwdriver to pry out the Lens Seal, being careful to not puncture or cut the seal.
4. Un-thread the lamp and pull straight out. **Caution! Lamp may still be hot! Be sure lamp has cooled before touching.**
5. Clean lenses and inside of fixture with a clean dry cloth.
6. Inspect Socket for any damage.
7. Inspect Lens Seal for damage or dirt. Replace or clean if necessary.
8. Thread new lamp in to Socket. Note: Replacement lamps must not exceed ratings of the luminaire. Read the label inside of the

luminaire body for appropriate lamp type and ratings.
9. Replace the Lens, Lens Gasket, and Lens Accessories.

Accessory Maintenance

1. Remove Faceplate as explained in Lamp Maintenance above.
2. Remove Lens, Lens Seal, and any Accessories that may be contained in the Lens Seal. Note: If necessary, use a flat blade screwdriver to pry out the Lens Seal, being careful to not puncture or cut the seal.
3. Remove Accessories from Lens Gasket, being careful not to damage Lens Gasket.
4. Inspect Lens Gasket, Lens, and Accessories for damage. Replace if necessary.
5. Clean Faceplate and Accessories with a clean, damp cotton cloth.
6. Carefully install new Accessories into Lens Gasket, being very careful to not damage it.
7. Install Faceplate as explained in Lamp Maintenance above.

