

CARE AND MAINTENANCE:

Soap residues and mineral deposits are the enemies of your bathtub, particularly in areas where there is hard water. However, by cleaning your Waterworks whirlpool bathtub at regular intervals and using proper cleaning agents, you can help your bathtub retain its original sparkling look. DO NOT USE abrasive cleaners, as these products will damage the bathtub surface and metallic finishes. A nonabrasive cleaner is recommended.

Your bathtub does not require the use of special cleaning agents or chemicals.

Normal cleaning is simple and easy. Just use warm water, a soft sponge, and mild liquid detergent or nonabrasive cleaner to wipe the surfaces clean, then rinse thoroughly.

Waterworks recommends the use of Jet Fresh® whirlpool cleaner and hibernation solution to maintain your whirlpool system.

WARRANTY:**LIMITED LIFETIME MECHANICAL WARRANTY:**

Waterworks warrants to the initial purchaser all plumbing and accessory products sold by Waterworks, which are installed in a residence to be used in a residential application, to be free from manufacturing defects in materials and workmanship for as long as the purchaser continues to own and maintain the residence where the products are initially installed.

FIVE-YEAR FINISH WARRANTY:

Waterworks warrants to the purchaser the finish of all plumbing and accessory products sold by Waterworks, which are installed in a residence to be used in a residential application, to be free from manufacturing defects in materials and workmanship for a period of five years from installation of the products. Waterworks must receive notice of any warranty claim within the five-year warranty period.

REPAIR OR REPLACEMENT:

If within the applicable warranty period the covered products shall be proved to the satisfaction of Waterworks to be defective, Waterworks will repair or replace such products, at its expense (provided that such repair or replacement shall not include installation costs). Waterworks' obligation shall be limited to such repair and replacement and shall be conditioned upon Waterworks' receiving notice of any alleged defect within the applicable warranty period. [Purchaser shall be responsible for all shipping charges for returned products.]

LIMITATIONS ON WARRANTY COVERAGE:

The warranties set forth above shall be extended only to the purchaser and do not apply to any purchaser where the products are used for commercial applications and usage. Furthermore, the warranties do not cover installation or any other labor charges and do not apply to:

- (i) products which have been repaired, altered or modified in any way by purchaser or any person other than Waterworks or not using original Waterworks spare parts, unless previously authorized in writing by Waterworks;
- (ii) products which have not been installed, used, maintained or stored in accordance with the instructions provided to purchaser by Waterworks;
- (iii) products which have been used for purposes other than or in a manner contrary to their intended and normal use;
- (iv) products which have been damaged as a result of misuse, negligence, freezing, accident or faulty installation or maintenance; and
- (v) products damaged by the effects of dirt, salt water air, hard water, limescale, or abrasive or aggressive cleaners. If the normal life span of any product is shorter than the applicable warranty period, the warranty shall apply only during the period of such shorter life span.

 
NOTICE OF WARRANTY CLAIMS:

For all warranty claims please call Waterworks Product Support at 800-927-2120, or write to Waterworks Product Support at 60 Backus Avenue, Danbury, Connecticut 06810.

The warranties provided herein are conveyed only to the purchaser of products sold by Waterworks after January 1, 2000, and installed in a residential application.

Except as specifically set forth above, Waterworks does not make any other warranty, express or implied, including without limitation, any implied warranty of merchantability or fitness for a particular purpose. In no event will Waterworks be liable to any person or entity for any indirect, special, incidental or consequential damages or loss (including damages for loss of business, loss of profits, or the like), whether based on breach of contract, tort (including negligence), product liability or otherwise, even if it has been advised of the possibility of such damages. Waterworks' liability on any claim of any kind, including negligence, will in no case exceed the contract price paid by the purchaser for the product claimed to be defective or unsuitable.

CLWP 20 / CLWP 21

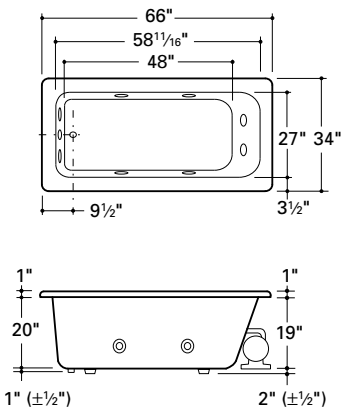

Whirlpool note:
1-horsepower motor 115 volt/20 amp
In-line heater (optional)
requires additional 115-volt line

Must have access panel
with minimum dimensions of
16"H x 20" W at pump location

INSTALLATION GUIDELINES:

The bath is assembled complete and ready for installation. Immediately after receiving the bath and removal of packing, INSPECT the unit for freight damage. Any claims for damage, whether apparent or hidden, must be made to the carrier immediately in order for them to assume all associated costs. Should inspection reveal any defect in the finish, do not install the bath. Damage or defect to the finish claimed after the bath is installed is excluded from the warranty. The warranty DOES NOT cover labor or materials to remove or reinstall the bath.

PRIOR TO INSTALLATION, CHECK TO ENSURE THAT:

The installation will be in compliance with all applicable federal, state, and local building codes and regulations.

The unit is the correct model and there is no shipping damage.

The installer has read and thoroughly understands "notice" or "warning" tags on the bathtub.

The tub is free of leaks (see "Testing System Operation").

The interior of the tub will be protected during installation.

Undermount applications: When installing as an undermount, the on/off sensor post must be replaced with the extended version. This will accommodate a deck thickness up to 2" (to remove the existing sensor; remove nut and wire from underside of deck and lift sensor). Now the extended-length sensor post can be fitted in the same manner as the original.

NOTE: Extended post item number is CLPAR4.

BATHTUB INSTALLATION:

Be sure to take any necessary precautions to keep the tub protected during installation.

If subfloor is not level, some shimming of the tub will be required.

Do not lift the bathtub by the circulation piping.

Apply a generous amount of construction adhesive to the bottom of the support feet. Set the bath in the desired location.

If desired, a traditional mortar "wetbed" may be used to support the tub.

Do not hang the bathtub by the rim. Bath must be supported from the floor (bottom of tub) and resting on all support feet (see Figure 1, left).

Level the top of the bathtub in both directions using a 4-foot level to ensure proper drainage. Test for drainage.

Be sure to test the tub while pump, electrical, and piping systems are accessible.

An access panel with minimum dimensions of 16" height by 20" width is required at the pump end of the bathtub to allow for pump accessibility in the event that maintenance or servicing is necessary. The area surrounding the pump must have sufficient air movement.

For drop-in applications: Bring the tile or finish surface to the inside edge of the tub rim and seal with silicone caulk (as shown in Figure 2, left).

For tiled-in applications: Bring the tile or finish surface down over face of optional tile flange and seal with silicone caulk (as shown in Figure 3, left).

Cover the bathtub surface with a bathtub liner or other form of protection.

FIGURE 1

Apply construction adhesive to support feet

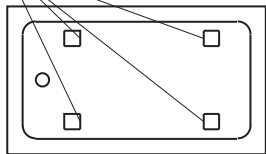 


FIGURE 2


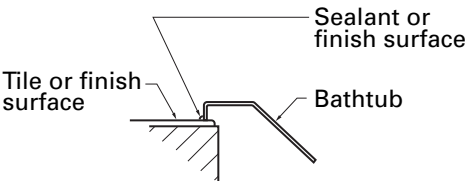 


FIGURE 3

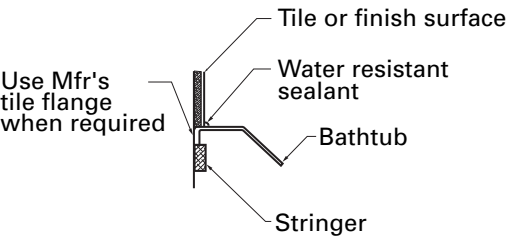 

These guidelines have been prepared for the professional contractor to aid in the installation of:
CLASSIC II WHIRLPOOL BATHTUB (CLWP 20 / CLWP 21)

All dimensions are based on original specifications and are subject to change and variation. Please consult your Design Associate for current specifications.

ELECTRICAL REQUIREMENTS:

Manufacturer recommends a dedicated 20-amp circuit breaker for each power cord supplied on the whirlpool bathtub.

Supply 110-volt electrical outlet. This circuit must be protected by a ground fault circuit interrupter (GFCI).

Plug supply cord(s) into electrical outlet.

To test the GFCI, do the following: (1) Push the test button; check that the power has been interrupted, and (2) Push the reset button; check that the power has been restored.

IF THE GFCI DOES NOT OPERATE PROPERLY DURING THE TEST, THERE IS A GROUND CURRENT FLOWING, WHICH INDICATES THE RISK OF ELECTRIC SHOCK.

DO NOT USE THE BATHTUB. DISCONNECT THE BATHTUB IMMEDIATELY AND HAVE THE POWER SOURCE SERVICED BY QUALIFIED PERSONNEL.

For permanently connected units which are protected with a ground fault breaker: A green-colored terminal (or a wire connector marked "G," "Gr", "Ground", or "Grounding") is provided within the terminal compartment. To reduce the risk of electrical shock, connect this terminal or connector to the grounding terminal of your electrical service or supply panel with a conductor equivalent in size to the circuit conductors supplying this equipment.

CLEAN-UP AFTER INSTALLATION:

When cleaning up after installation, do not use abrasive cleaners as they may scratch and dull the surface. Use warm water and a liquid nonabrasive detergent to clean the surface.

Stubborn stains, paint, or tar can be removed with turpentine or paint thinner. Do not allow cleaners containing petroleum distillates to remain in contact with the bath surface for long periods of time. Plaster can be removed by scraping with a wood edge. Do not use metal scrapers, wire brushes, or other metal tools. One of the powder-type detergents may be used on a damp cloth to provide mild abrasive action to the residual plaster.

TESTING SYSTEM OPERATION:

To check proper function of your newly installed whirlpool bathtub, take the following steps:

Remove all debris and residue before filling the tub with water.

Fill the tub until the water level sensor button (1/2" metal disc approx. 2" above the jets) is covered. (Do not run pump without water in the tub.)

Examine the tub and system carefully for leaks.

Position the jets downward. Turn on system and allow the tub to run approximately 2-3 minutes.

Allow water to sit for 10 minutes and check for leaks.

Reactivate the pump three additional times for 2-3 minute cycles to ensure that the pump is priming properly.

Open drain and empty tub.

Wipe up excess water with a soft, damp sponge.

TECHNICAL SERVICE:

Read the product identification tag (located on bathtub near pump). This tag includes all pertinent information specific to your product, including the model, size, date of manufacture, and ID number.

Have information available when contacting Waterworks Product Support at 1-800-927-2120 (8am-7pm EST).

OPERATING INSTRUCTIONS:

Whirlpool System

When power is applied, the electronic switch will require approximately 30 seconds to balance before it will operate correctly.

Fill the tub with water until the water level sensor button ($\frac{1}{2}$ " metal disc approx. 2" above jets) is covered. With the water level sensor submerged, the on/off sensor (1" metal disc on tub deck) becomes operational.

Touch the on/off sensor to start the pump.

Touch the on/off sensor a second time to stop the pump.

The unit is equipped with a built-in 20-minute timer that will turn off the unit automatically. To continue your bath, simply touch the on/off sensor to repeat the cycle.

The touch control may take $\frac{1}{2}$ second between touches to operate properly. If the water in the bathtub drops below the water level sensor at any time during the whirlpool operation, the tub motor will instantly shut off all functions. If the touch pads are not touched for approximately 20 minutes, the built-in timer will turn off the system.

WARNINGS:

The following basic safety precautions should always be followed when using your bathtub.

CAREFULLY READ AND FOLLOW ALL INSTRUCTIONS BEFORE ATTEMPTING TO OPERATE YOUR WHIRLPOOL BATHTUB.

Caution should always be exercised when entering or leaving the bathtub.

DANGER: To reduce the risk of injury, do not permit children or persons with a disability to use this unit unless they are closely supervised at all times.

This product is intended for indoor use only. Use the bathtub only for its intended purpose and do not use attachments or accessories that are not recommended by the manufacturer.

Never drop or insert any objects into any openings.

Due to the hazard of suction, persons with long hair should demonstrate extra caution.

Do not use the bathtub without the suction covers in place. Do not block off the suction fittings.

The bathtub must be connected to an electrical supply circuit that is protected by a ground fault circuit interrupter (GFCI), which is provided by the installer. The GFCI should be tested periodically to ensure that it is working properly.

Keep all electrical appliances, such as radios and hair driers, a safe distance from the bathtub.

Failure to comply with all instructions, requirements, and warnings contained in this manual creates a serious hazard to the bathtub user and may result in serious personal injury.

Do not use the bathtub when sleepy or drowsy, under the influence of alcohol or prescription medications, or when overheated. Pregnant women and persons with medical conditions should consult their physicians for advice before use.