


110300, 108455
THE POUCH/PURSE WRAP

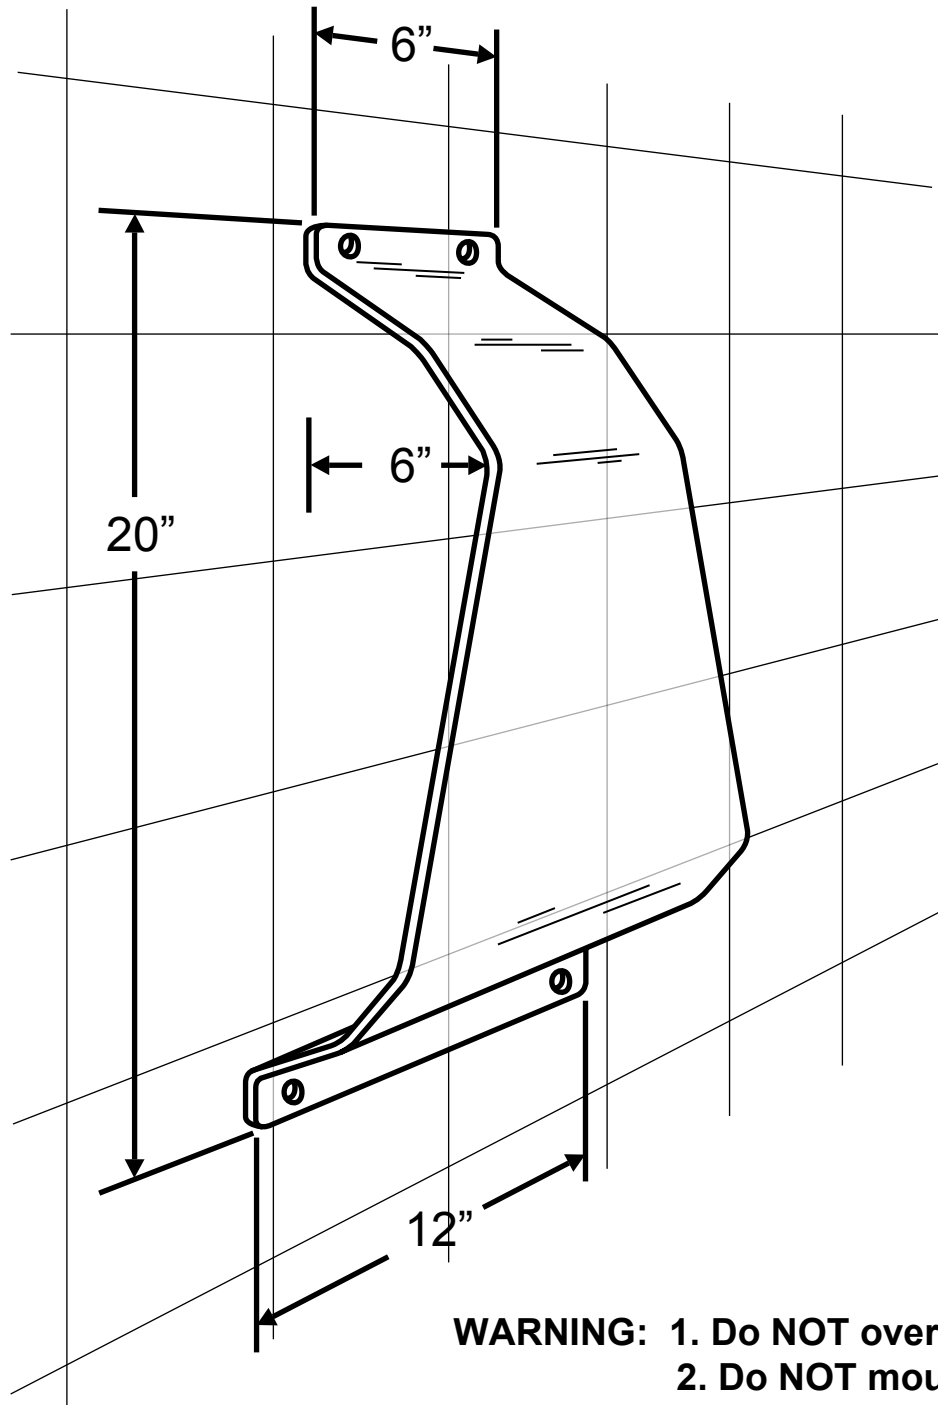

WARNING: 1. Do NOT over tighten.
2. Do NOT mount behind door or within door's swing.

Material: 3/16" Acrylic
Mounting Holes (4) - 1/4" Dia.