


INSTRUCTIONS FOR INSTALLING 7893 SURFACE MOUNTED HINGES

1/16" space between
door and pilaster

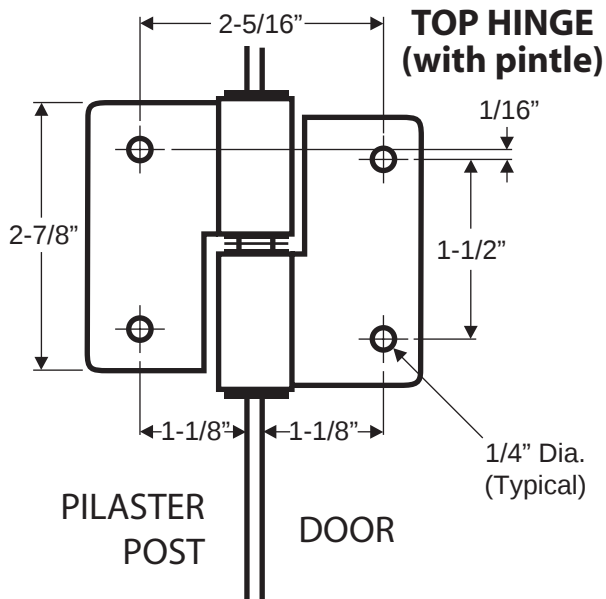

1. Locate and set hinges to pilaster post as per drawing.
2. With door in "at rest" position, locate and set **upper, middle** and **lower** hinges on door as per drawing. This is to allow for the rise of the door when opening.
3. To adjust position of door closing, drive pintle from bottom leaf of top & middle door hinge and turn to desired position.

