

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2

Ulster Park, NY 12487

Office hours: 9-5 EST

Phone (800) 777-4244

Fax (800) 336-5948

(845) 572-3468

www.CommunityPlaythings.com



J900, J901, J910, J911 Community Glider

Recommended Use

These durable hardwood Gliders are designed for general nursery, classroom, or home use.



⚠ WARNING

- ▲ Keep nearby children under supervision at all times.
- ▲ Keep children from reaching under Glider. Although this product has been designed to eliminate major entrapment and pinch hazards, there are moving parts underneath.
- ▲ Weight limit 240 lbs.

⚠ CAUTION

- ▲ For indoor use only. This Glider is not waterproof.

Assembly

Your Glider comes completely assembled and ready to use. Inside the carton are:

1. A Glider complete with four cushions.
2. This product guide.

If your shipment is incomplete, please call Customer Service.

Accessories

J905/J906 Glider Covers

Maintenance

Periodically inspect for cracks, breaks, loose parts, loose screws, missing parts, and/or malfunctions.

Remove the product from service when any condition develops that might make use unsafe.

Cleaning

For everyday spills: Remove spills quickly with a dry cloth. Wipe spill area with clean water (fabric is water-proof), or follow cleaning instructions below.

The Crypton-covered cushions should be cleaned monthly to avoid dirt build up. Powdered enzyme soaps such as Tide or Cheer provide the most effective cleaning results. Don't use solvent cleaners, as they may harm the fabric. Remove cushions from Glider, and use a brush or soft towel with a soap solution to clean the fabric. Rinse the cushions with plenty of clean water after washing to remove any soap residue. Stubborn or oily stains can be removed with normal household rubbing alcohol and then washed with soap. A 10% bleach solution may be used for disinfecting purposes. The bleach solution should be removed quickly and completely with water, or the fabric may fade over time. Do not machine wash, as seams are not waterproof. Do not attempt to remove Sofa cushion cover from cushion for cleaning. Zipper installed for product assembly only.

For free sample cleaning kit, including EPA-approved disinfectant and DVD with cleaning instructions, call 1-800-Crypton. The free kit may also be ordered online at www.cryptoncare.com

The cushions are reversible.

Clean the wood with a damp cloth and a mild detergent. Too much water may harm the wood finish.

Construction

The wooden components are manufactured from durable hardwood and finished with a clear nontoxic finish. All edges and corners are rounded for safety and ease of cleaning. The upholstery is urethane foam covered with Crypton, a highly durable and stain resistant polyester fabric, which meets the flammability requirements of Cal 117. The J910/J911 has an added flame blocker beneath the Crypton, and meets the flammability requirements of Cal TB 133 and BFD IX-10.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.