

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide.

CUSTOMER SERVICE:

United States

PO Box 2
Ulster Park, NY 12487
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com
Sales@CommunityPlaythings.com



J640, J641, J642, J643 Child's Armchair

Recommended Use

This durable hardwood Armchair is designed for general childcare, classroom, or home use.



Child's Armchair

⚠ WARNING

- ▲ This product is intended for use by children of immature judgement; therefore, adult supervision is required at all times.
- ▲ Weight limit: Armchair: 250 lbs.

⚠ CAUTION

- ▲ For indoor use only. The Armchair is not waterproof.

Assembly

Your Armchair comes completely assembled and ready to use. Inside the carton are:

1. One Armchair, upholstered.
2. This product guide.

If your shipment is incomplete, please call Customer Service.

Maintenance

Periodically inspect for cracks, breaks, loose parts, loose screws, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make use unsafe.

Cleaning

For everyday spills, remove spills quickly with a dry cloth. Wipe spill area with clean water (fabric is waterproof), or follow cleaning instructions below.

The Crypton-covered cushions should be cleaned monthly to avoid dirt build up. Powdered enzyme

soaps such as Tide or Cheer provide the most effective cleaning results. Don't use solvent cleaners, as they may harm the fabric. Remove cushions from Armchair, and use a brush or soft towel with a soap solution to clean the fabric. Rinse the cushions with plenty of clean water after washing to remove any soap residue. Stubborn or oily stains can be removed with normal household rubbing alcohol and then washed with soap. A bleach solution of 1 part bleach to 4 parts water may be used for disinfecting purposes. The bleach solution should be removed quickly and completely with water, or the fabric may fade over time. Do not machine wash, as seams are not waterproof. Do not attempt to remove Sofa cushion cover from cushion for cleaning. Zipper installed for product assembly only.

The cushions are reversible.

For free sample cleaning kit, including EPA-approved disinfectant and DVD with cleaning instructions, call 1-800-Crypton. The free kit may also be ordered online at www.cryptoncare.com.

Clean the wood with a damp cloth and a mild detergent. Too much water may harm the finish of the wood. For disinfection, use a mild dilution of ¼ cup bleach to 1 gallon water.

Construction

The wooden components are manufactured from durable hardwood with a clear nontoxic finish. All edges and corners are rounded for safety and ease of cleaning. The upholstery is urethane foam covered with Crypton, a highly durable and stain resistant polyester fabric, which meets the flammability requirements of Cal TB 117. The J642 and J643 have an added flame blocker beneath the Crypton, and meet the flammability requirements of Cal TB 133 and BFD IX-10.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.