Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide.

F433 4' x 16" Shelf, Plywood Back
F434 4' x 16" Shelf, Open Back
F435 4' x 16" Shelf, Translucent Back
F441 28" X 48" Shelf, Plywood Back
F442 4' X 28" Shelf, Open Back
F443 4' X 28" Shelf, Plywood Back
F444 4' X 28" Shelf, Open Back
F445 4' X 28" Shelf, Translucent Back

Recommended Use

These low, open shelves provide accessible storage space without obstructing windows and walls.

WARNING

▲ This product is intended for use by children of immature judgement. Supervision is required at all times.

A CAUTION

- ▲ For indoor use only. This Storage Shelf is not waterproof.
- ▲ Never change the position of the toe trim with less than two people.
- ▲ Always use the handholds provided at each end of the toe trim (see Figure A).
- ▲ After disengaging the wheels, give item a small sideways push to settle the wheels into place. You will notice the item sitting down securely on its glides.

Assembly

If your shipment is incomplete, please contact Customer Service.

Operation of Mobility Feature

On the straight shelving, the mobility feature can be easily engaged, and disengaged using the following procedure:

1 With one person at each end of the unit, tip slightly forward or back. This allows the toe trim to pivot.

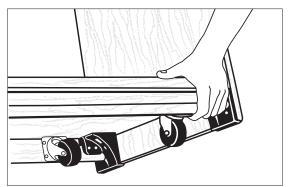


Figure A

- 2 One person keeps the item tipped, while the other rotates the toe trim to the desired position by pulling or pushing on one of the handholds at each end of the toe trim (see Figure A).
- 3 Tip the unit slightly to the other side and repeat the procedure with the other toe trim.

Maintenance

Periodically inspect for cracks, breaks, and loose or missing parts. Remove the product from service when any condition develops that might make use unsafe.

Construction

The wooden components are manufactured from solid maple and are finished with a clear nontoxic finish. The wooden back material is a durable birch plywood. Translucent backs are a durable architectural polymer.

Cleaning

Wipe the wood parts with a damp cloth and a mild detergent. Do not use excessive water. Use a soft rag moistened with rubbing alcohol (70% isopropyl alcohol) on the translucent backs.

User Modifications

We are not responsible for modifications made by customers to our products in the field, without our supervision, testing or evaluation.

Recycling

The foam pads used in packaging this product are reusable/recyclable. If you would like to help us preserve the environment, dispose of them appropriately or return them to Community Playthings, US Rt. 40, Farmington PA 15437.

Ordering Parts

To order replacement parts, contact Customer Service with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.

CUSTOMER SERVICE:

United States

PO Box 2 Ulster Park, NY 12487 Office hours: 9-5 EST Phone (800) 777-4244 Fax (800) 336-5948 (845) 572-3468 www.CommunityPlaythings.com Sales@CommunityPlaythings.com



© 2011 by Community Products, LLC LW33 DC 6157 Revision E