

Product Guide

User and Maintenance Information

IMPORTANT INFORMATION:

Please save this product guide. Consider making a photocopy in order to keep one copy with the product and file the other for future reference.

CUSTOMER CENTERS:

United States

359 Gibson Hill Road
Chester, NY 10918
Office hours: 9-5 EST
Phone (800) 777-4244
Fax (800) 336-5948
(845) 572-3468

www.CommunityPlaythings.com

United Kingdom

Robertsbridge
E. Sussex TN32 5DR
Phone 0800 387 457
01580 883 301
Fax 0800 387 531
01580 883 331

www.CommunityPlaythings.co.uk



community playthings

A510 Classroom Desk A520 Two-Seater Desk A540 Four-Seater Desk

Recommended Use

Classroom Desk

⚠ WARNING

- ▲ This product is intended for use by children of immature judgment, therefore supervision is required at all times.
- ▲ The desk will be unstable if legs are not installed according to directions.
- ▲ The desk must be empty while making adjustments to the legs.

⚠ CAUTION

- ▲ For indoor use on level surface only.

Assembly

This product comes in two cartons:

- This carton contains one desk top and this product guide.
- The second carton contains four legs and instructions for assembly.

If your shipment is incomplete, please call your customer center.

Maintenance

Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions. Remove the product from service when any condition develops that might make operation unsafe.

Cleaning

Wash the desk with mild dishwashing liquid or powdered detergent and warm water, using a soft cloth. Rinse with warm water, and dry with a soft cloth.

Desk top surface only: For more stubborn spots, use an all-purpose household cleaner such as Formula 409®, Windex® or Lestoil®. Follow manufacturers directions. For even more stubborn spots, use mild Lava® soap, rubbing gently. Stains may be removed with undiluted Clorox® (protect your skin), by letting this bleach stand NO MORE THAN 1 ½ MINUTES. Rinse thoroughly with warm water. Repeat if necessary.

Construction

Desk tops are constructed with a high-density particleboard core and top grade laminate on both sides for maximum structural stability. Desk box is made of multi-ply laminated maple with solid maple back-piece. Plastic Sockets are constructed from polypropylene and Friction Rings are polyurethane. All wood parts are covered with a protective lacquer.

User Modifications

We cannot be responsible for modifications made by customers to our products in the field without our supervision, testing, or evaluation.

Ordering Parts

To order replacement parts, contact your Customer Center with a description of the part(s) needed and the ID Code from the product.

Use only replacement parts supplied by Community Playthings.