

base #2 poller IvyLight white





Instructions for use

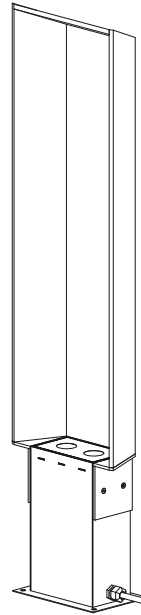
Lamps:

IvyLight
2 x 4W/230V Power LED/3000K

Technical information:

Operating voltage 230V / 50Hz

-  Protection class
-  Safety class 1
-  For mounting on normal inflammable fixture surfaces
-  Conformity mark
- IK10+ Shock protection
- 3000kg static load



Relamping and maintenance:

- Disconnect the electrical installation.
- Empty or clean base inground box.
- Check gaskets and glass, return for repair when damaged.
- Pay attention to care-instructions when cleaning the luminaire.
- Do not use high pressure cleaners for cleaning.

Warnings:

The in-ground luminaire base #2 poller IvyLight may only be operated with the provided base inground box. The inground box may not be installed into heat-insulating- or inflammable materials, nor be filled-in. Position the inground box in/on a solid ground. The foundation should be able to absorb the forces impinging on the luminaire. In spite of the use of high-quality- and stainless materials, corrosion can occur from contact with highly acidic or alkaline soils or from galvanic potentials in the soil or from the use of chemical agents, such as winter anti-icing salt. These are only cosmetic phenomena, which in general do not have any impact on the stability of the luminaire. In special cases, an adjustment of the electric potential in the ground may be necessary, e.g. by separate earthing of the base inground box. No complaints can be accepted for any superficial corrosion of the inground box or of the luminaire body by the manufacturer.

Attention: It is imperative to follow the installation instructions, and please remove the edge protection only after installation.

Care:

See service documents:
Care of stainless steel.

Safety:

- We point out that the connection of luminaires has to be done only by a competent installer.
- We assume no responsibility for eventual damages which might result of non-appropriate mounting or application of the luminaire.
- By belated modifications at the luminaire the warranty expires.

Please reposit the instructions with the service documents!

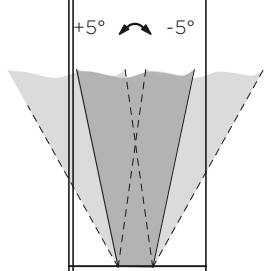
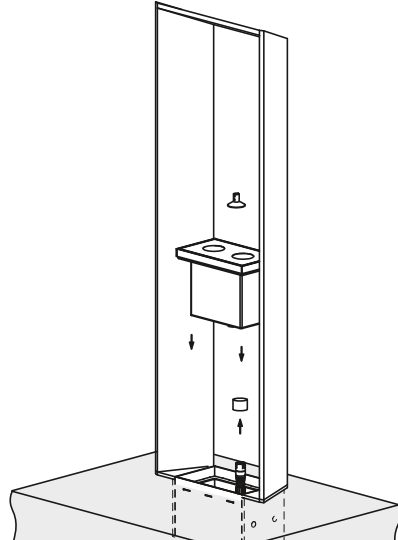
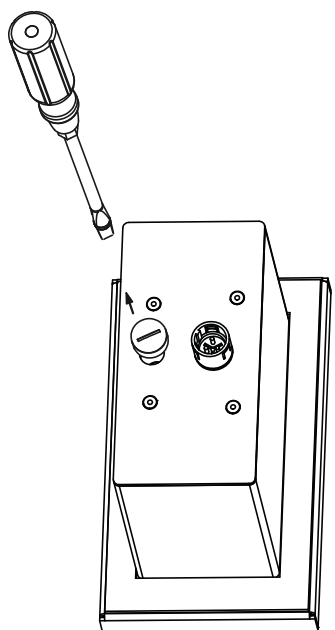
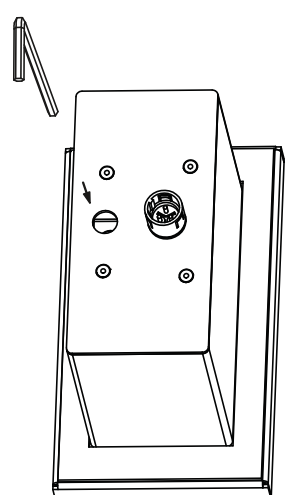
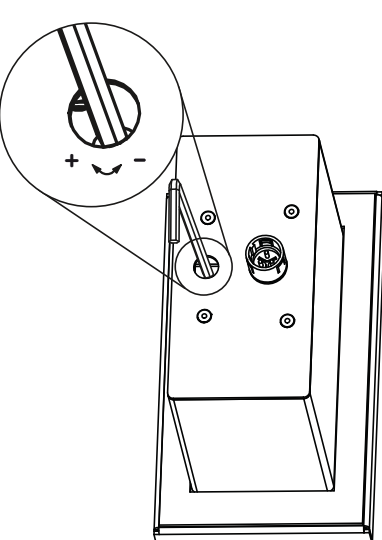
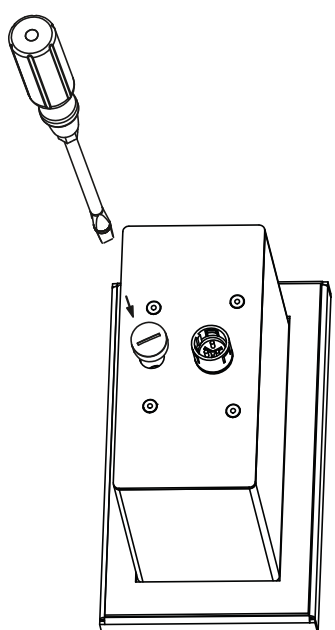
base #2 poller IvyLight white

Installation instructions

<p>1a</p>	<p>2</p>	<p>3</p>
<p>▽ water drainage system Ø=50mm min. each</p>	<p>▽ Length of the connection cable may not be shortened</p>	<p>▽ connection with protection tube and connecting sleeve</p>
<p>1b</p>	<p>▽ install inground box 10 mm - 15 mm above FFL</p>	<p>▽ min. 0,5 m between connecting sleeve and base inground box</p>
<p>▽ connection may <u>not</u> be made inside inground box</p>	<p>5</p>	<p>6</p>
<p>▽ installation with hanger screws adjustment via the nuts</p>	<p>▽ remove protective cover and thoroughly clean supporting surface of the glass</p>	<p>▽ lay the cable in a loop inside the inground box</p>
<p>4</p>		
<p>▽ check protection class before connection</p>		

base #2 poller IvyLight white

Adjustment instructions

<p>1</p> 	<p>2</p> 	<p>3</p> 
<p>▽ adjustable only in transversal direction</p>	<p>▽ removal of luminaire body only with suction cup</p>	<p>▽ before adjustment check disconnection of electrical power supply</p>
<p>4</p> 	<p>5</p> 	<p>6</p> 
<p>▽ do not overtighten threaded bolts</p>	<p>▽ adjustment with Allen key</p>	<p>▽ before installation of the luminaire body, close tightly with plug</p>