




BRETTFORD™

HRES HERE®

END CAPS

Assembly Instructions

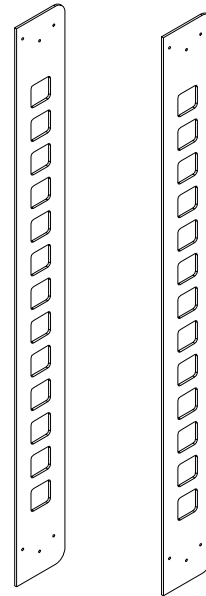

Parts List

Qty.	Part No.	Description
2	010-4167	End Cap, Rail System

Hardware List

Qty.	Part No.	Description
12	030-0689	#6 x 1 1/2" Screw

Tools Required

Phillips Screw Driver

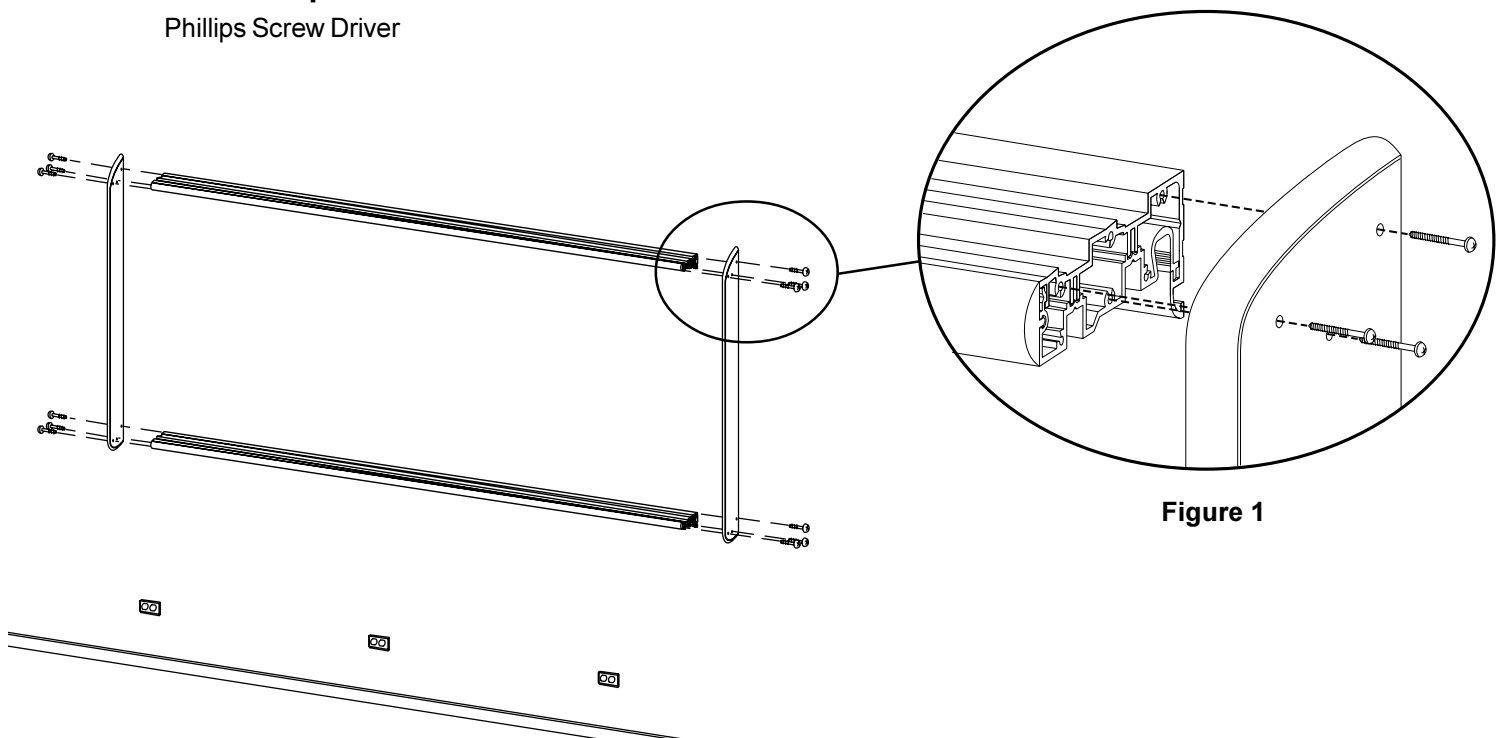


Figure 1

Mount each End Cap with #6 x 1 1/2" screws as shown in Figure 1.

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
Technology House
2 Etongate, 110 Windsor Road
Slough, Berkshire SL1 2JA England
TEL: 01753 53 99 55
FAX: 01753 53 94 78

www.bretford.com

Part#031-6938
11.08.04 CH