


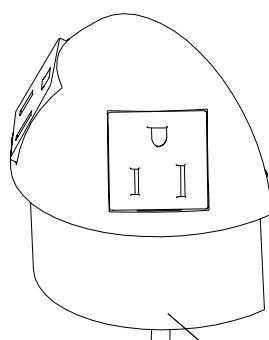


BRETFORD

POWER/DATA SPHERE (RDOME22) POWER/POWER SPHERE (RDOME40)




Sphere Half is ready to install

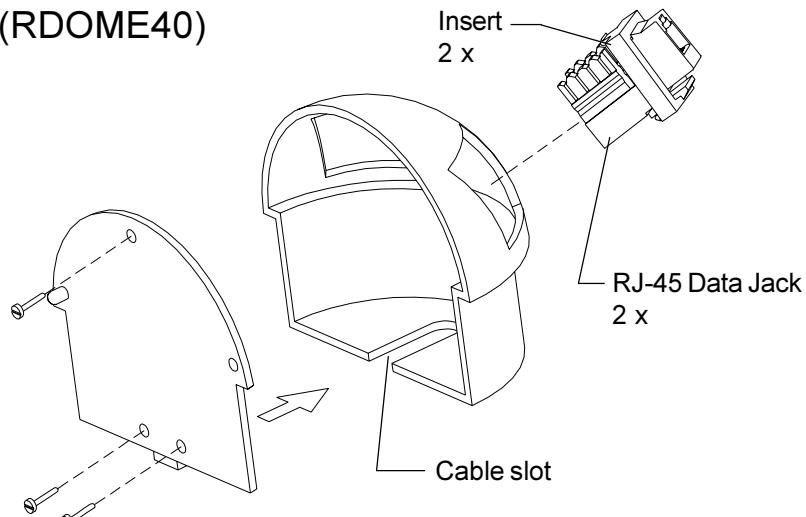


STEP 1

Upon receiving Power/Data Sphere Power half of sphere is ready to install. Other half will require some assembly.
End user will be responsible for wiring Data Jack. After wiring is completed you can take insert & Data Jack and insert into data half as shown.
With data wire aligned in cable slot, attach rear panel onto data sphere half as shown. Attach the two halves together.

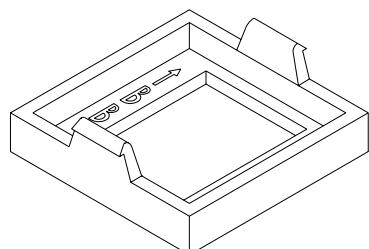


Insert

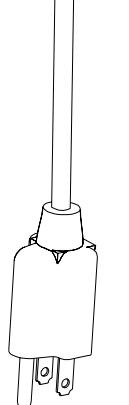


RJ-45 Data Jack

Inserts to be removed

#10 x 1/2" screw
24 x

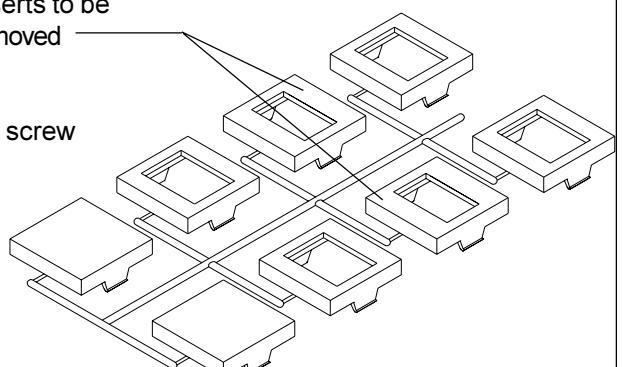

Adapter Kit

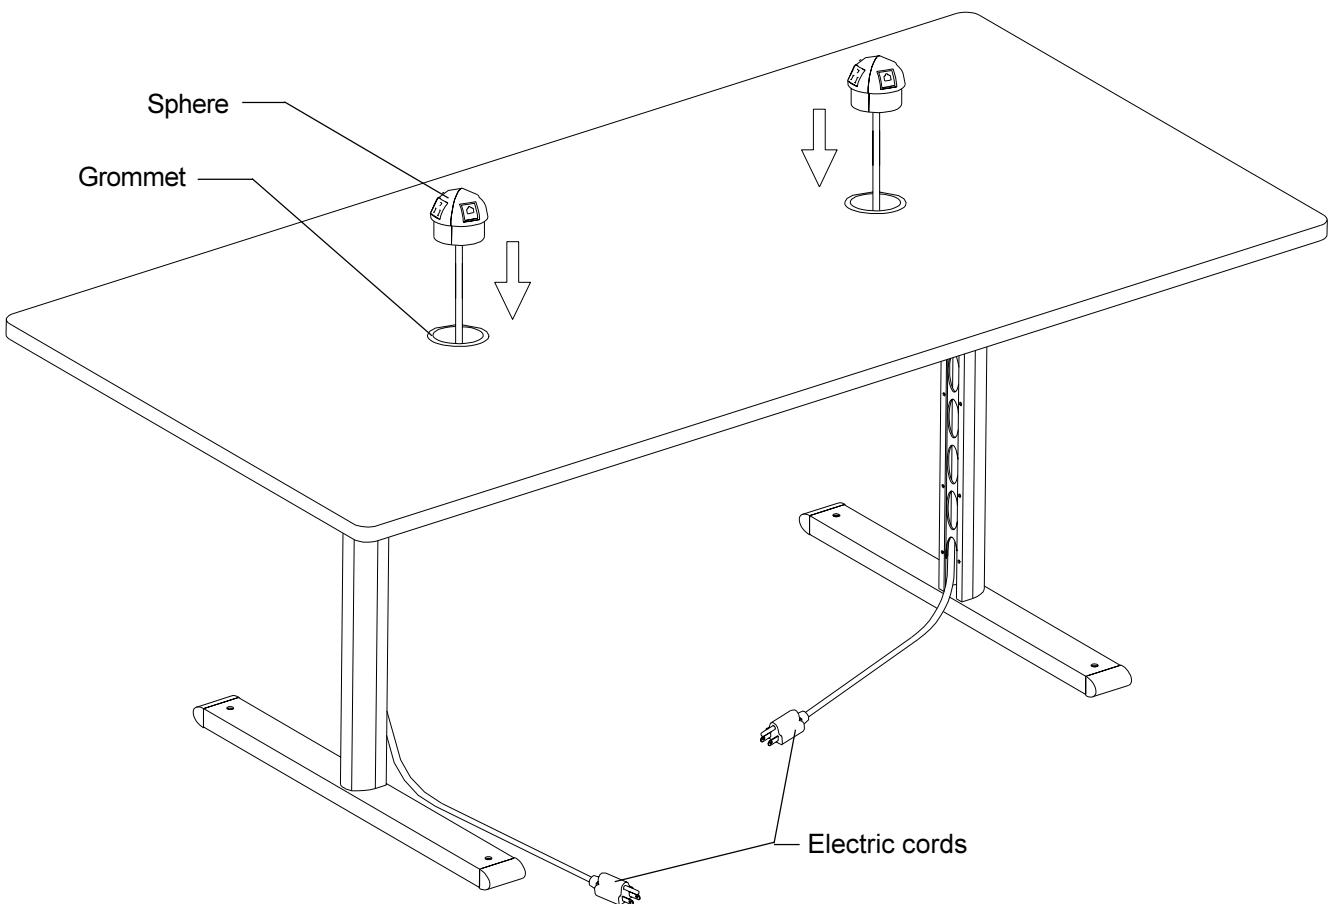

STEP 2

Upon receiving this product the grommets will be already installed in table top. Take electric cords and pull them thru the holes at the top and further thru leg openings.

Install the E-unit into the grommet using mallet (if necessary). The E-unit should be fully seated so entire stem is inside of grommet.

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

www.bretford.com

Part#031-4880
Rev.10.01.01 YP

Presentation Environments® is a registered trademark of Bretford