

4 Leg Collaborative Laptop Tables

Assembly Instructions



 
 
 
 
 
 
 
 
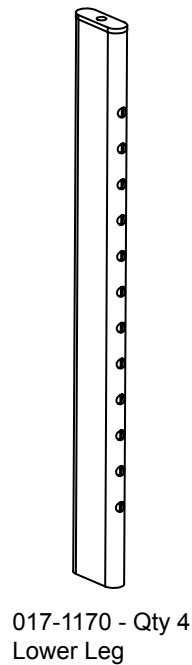 


Table comes with either glides or casters. NOT both.

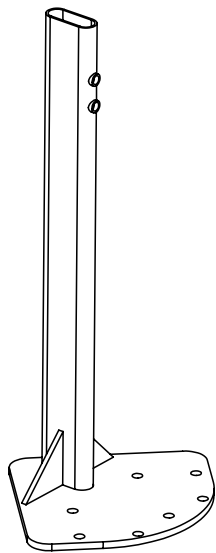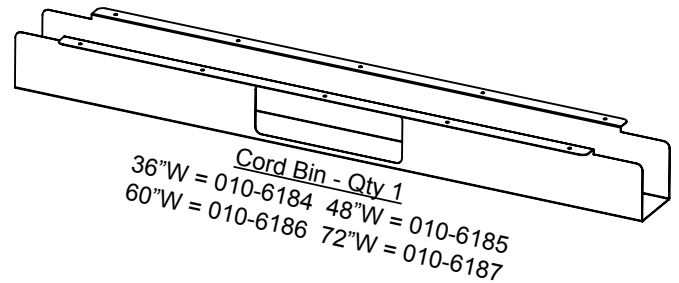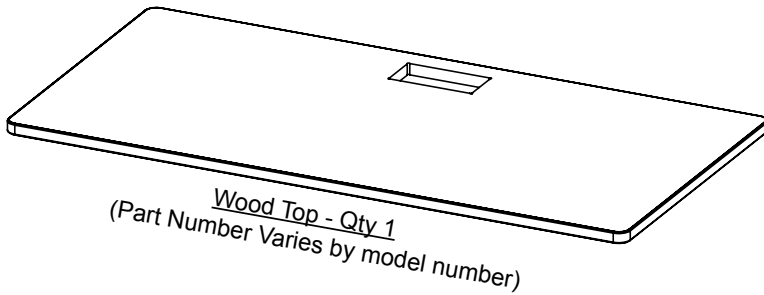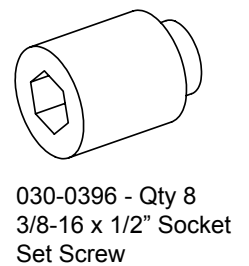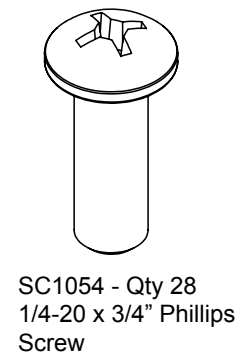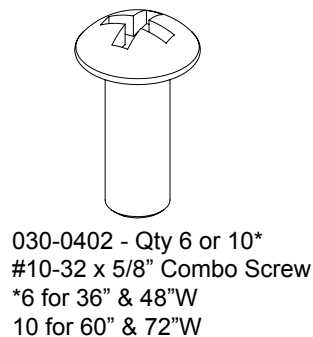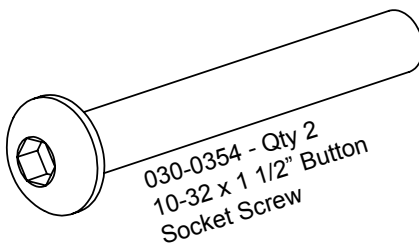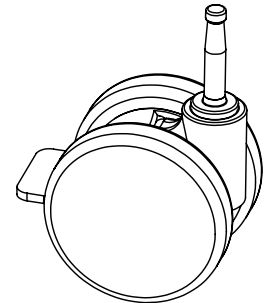
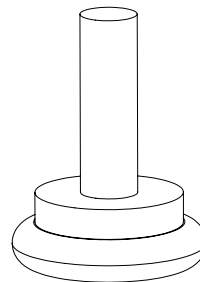 


1

 
THIS STEP IS ONLY FOR TABLES 60"W AND LARGER

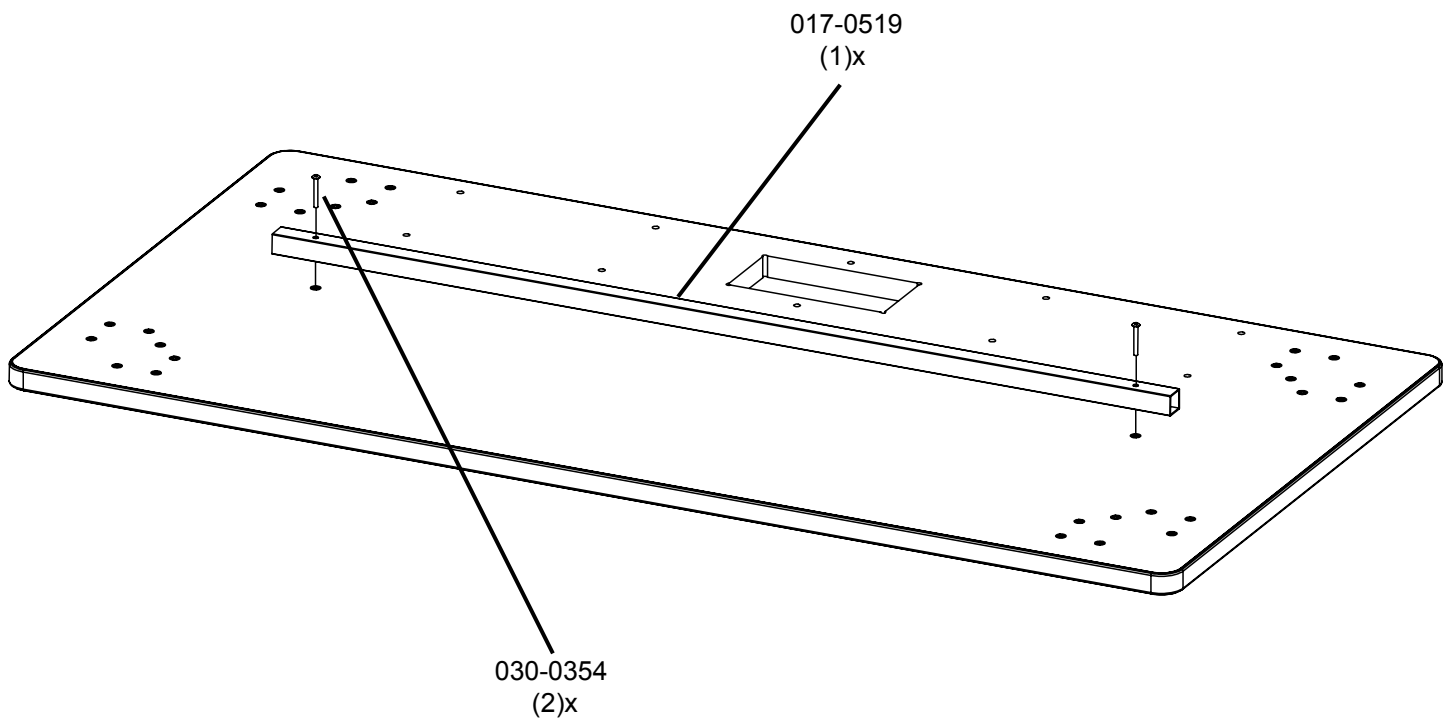

2

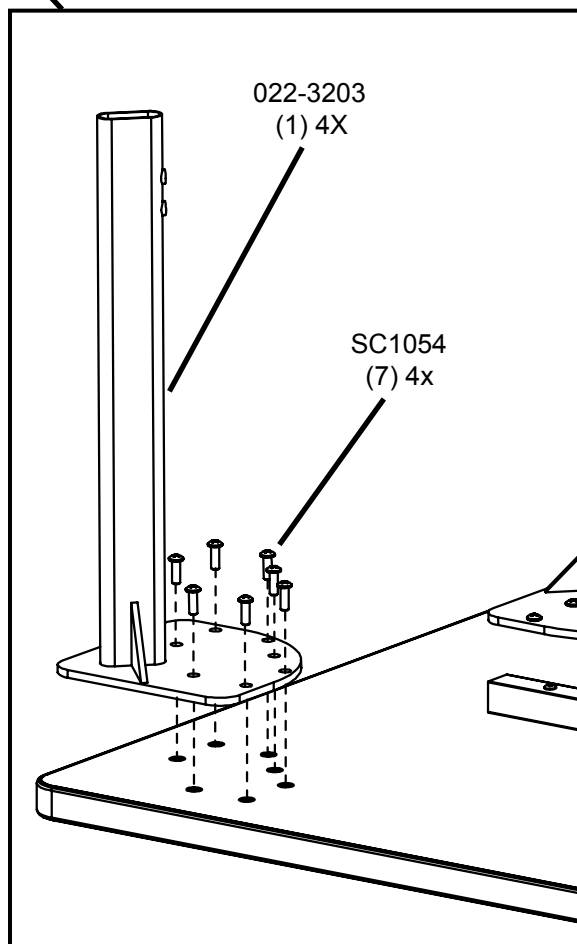 
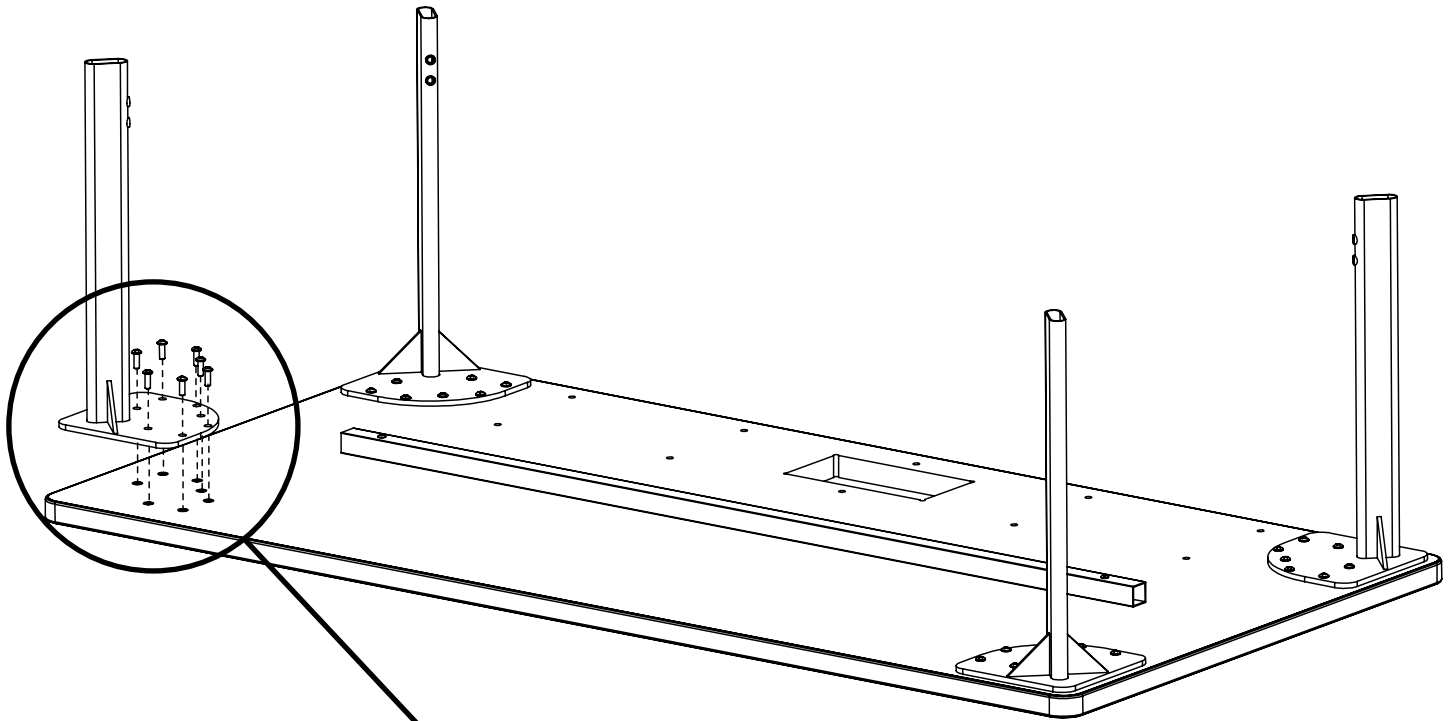 


3

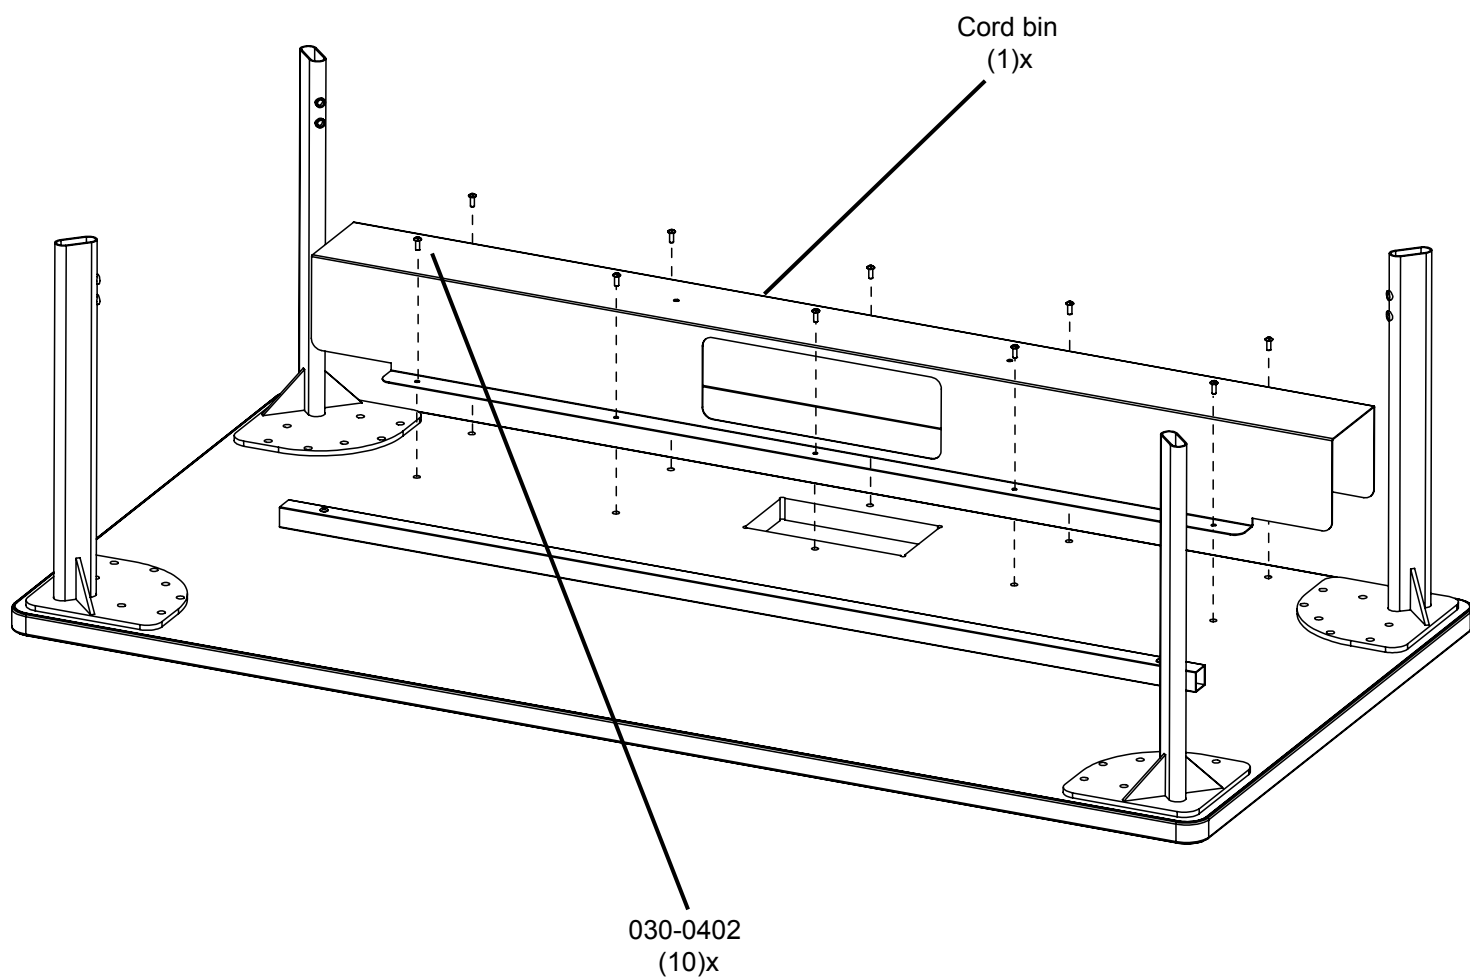 


4

  
DEPENDING ON YOUR MODEL INSTALL EITHER CASTERS OR GLIDES

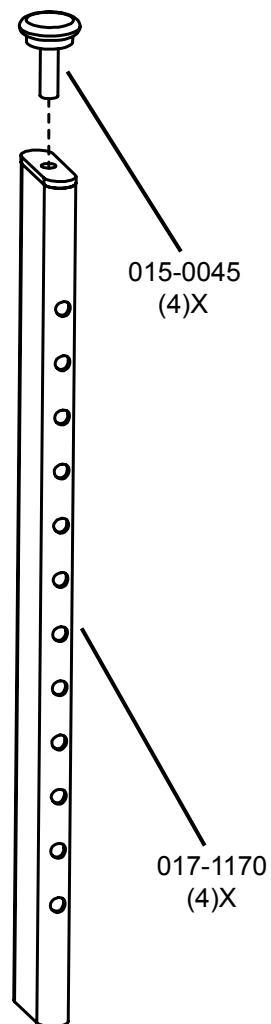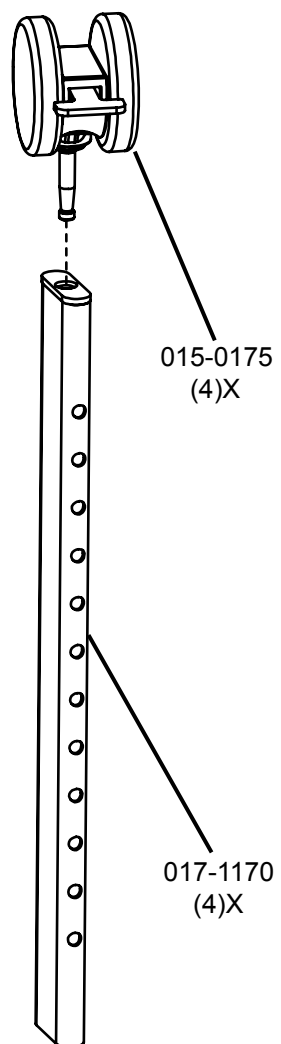

5

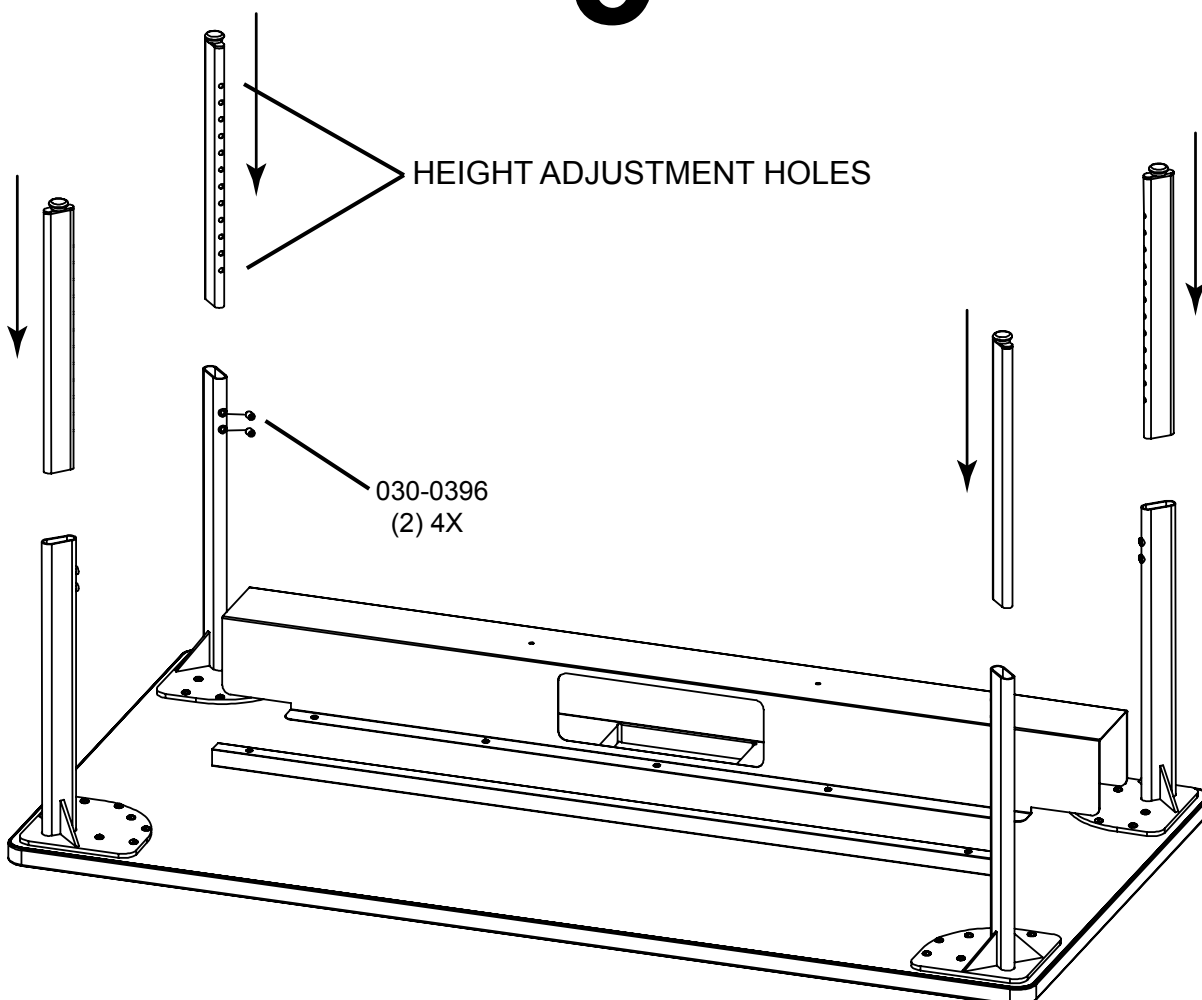 

Fluid Up Power Unit

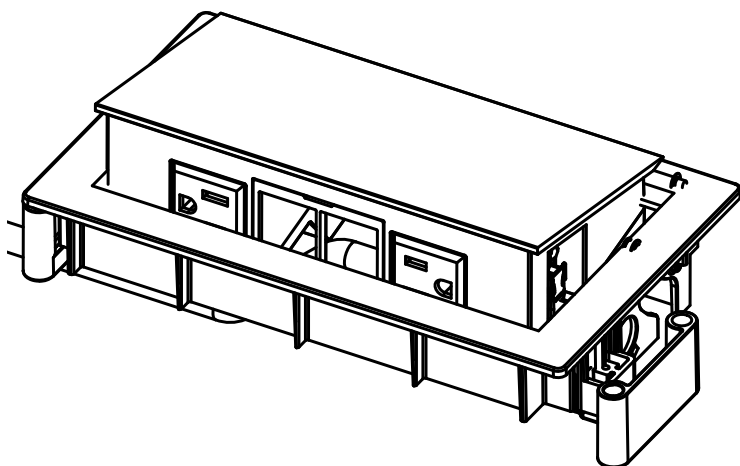 

Mount the unit through the cut out and tighten from the underside using the thumb screws and locator slots. For further information, consult the assembly instructions supplied with the power unit.

Bretford
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
2 Etongate
110 Windsor Road, Slough
Berkshire SL1 2JA England
TEL: 011 44 17 5353 9955
FAX: 011 44 17 5353 9478

www.bretford.com

Part # 031-9230
Rev. 06.21.12 CG 6 of 6