


INSTALLATION MAINTENANCE

Ceiling Suspended Suspension

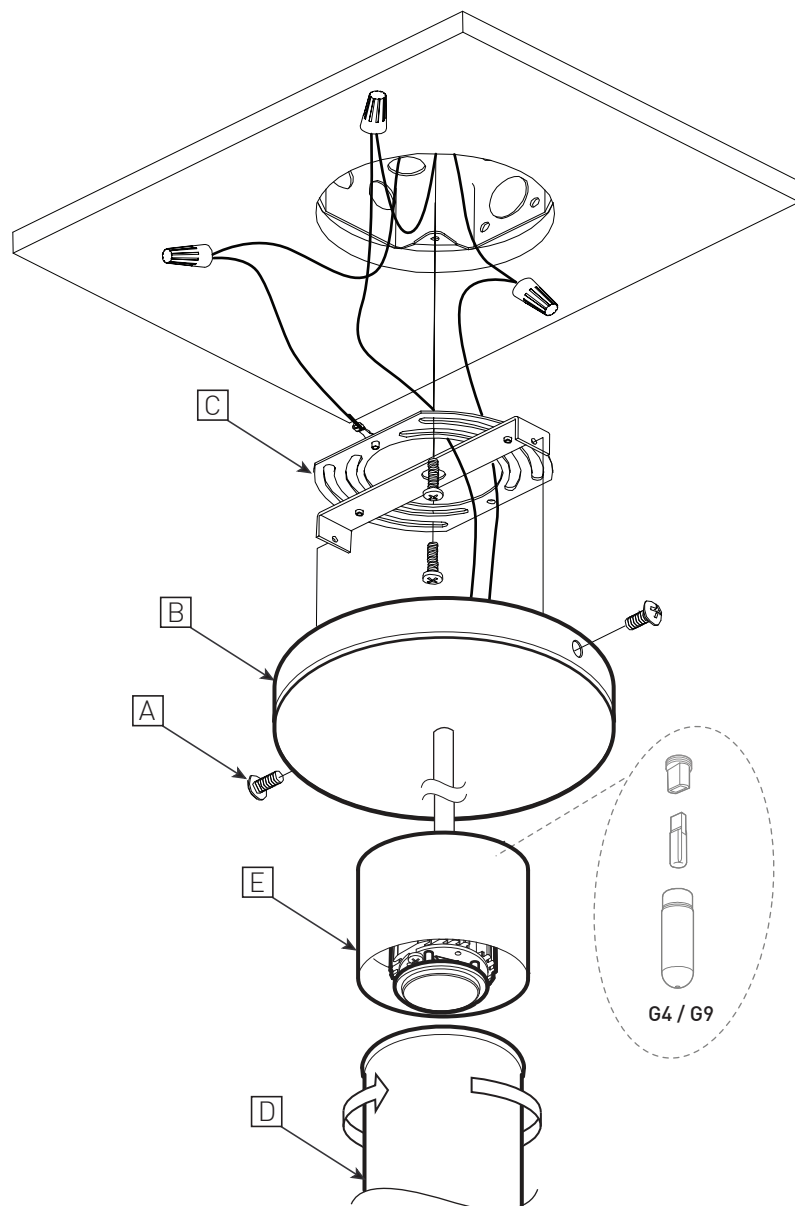

BULBS AMPOULES



CF.D.13/18/26W
CF.S.13W




G4 BIPIN.50W



G9.60W



 LED.4W



CMH.MR16.20W

INSTALLATION

REMOVE SCREWS [A] (8-32 X 3/8in) TO RELEASE THE CANOPY [B] FROM THE UNIVERSAL CROSSBAR [C].

1- INSTALLATION ON 4" JUNCTION BOX

INSTALL THE UNIVERSAL CROSSBAR [C], AND MAKE ALL WIRING CONNECTION.

2- ATTACH THE WALL CANOPY [B] WITH THE MOUNTING SCREWS [A].

3- EXCEPT FOR THE LED VERSION WHERE THE LIGHT SOURCE IS INCLUDED, INSERT LIGHT BULB (NOT INCLUDED) INTO SOCKET AND, FOR HALOGEN VERSION, ADD THE GLASS PROTECTOR.

4- SCREW THE GLASS OR PLASTIC SHADE [D] IN THE SHADE HOLDER [E].

MAINTENANCE

LOOSEN THE SHADE [D] FOR RELAMPING.

INSTALLATION

DÉVISSER LES 2 VIS [A] (8-32 X 3/8in) POUR LIBÉRER LE PAVILLON [B] DE LA PLAQUE UNIVERSELLE [C].

1- INSTALLATION DE LA BOÎTE ÉLECTRIQUE 4"

INSTALLER LA PLAQUE UNIVERSELLE [C] ET FAIRE LA CONNEXION DES FILS.

2- FIXER LE PAVILLON [B] SUR LA BOÎTE ÉLECTRIQUE À L'AIDE DES VIS DE MONTAGE FOURNIES [A].

3- À L'EXCEPTION DE LA VERSION DEL OÙ LA SOURCE LUMINEUSE EST FOURNIE, INSÉRER L'AMPOULE (NON FOURNIE) DANS LA DOUILLE ET, POUR LES VERSIONS HALOGÈNES, AJOUTER LE VERRE DE PROTECTION FOURNI

4- VISSER À LA MAIN L'ABAT-JOUR [D] DE VERRE OU PLASTIQUE DANS LE SUPPORT [E].

MAINTENANCE

DÉVISSER L'ABAT-JOUR [D] POUR CHANGER L'AMPOULE.