



ELEVATIONS


SERIES TR-9800
DOUBLE HUNG TILT WINDOWS

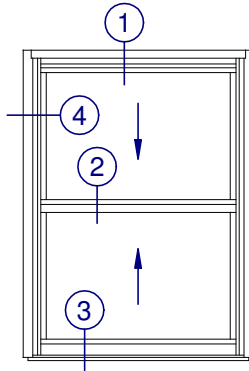


TR-9800

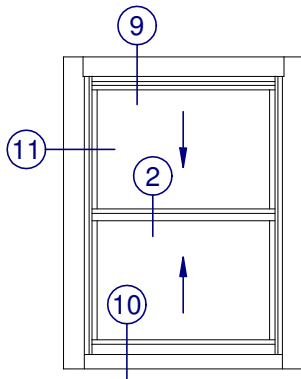

TR-9800F (FLANGED FRAME)

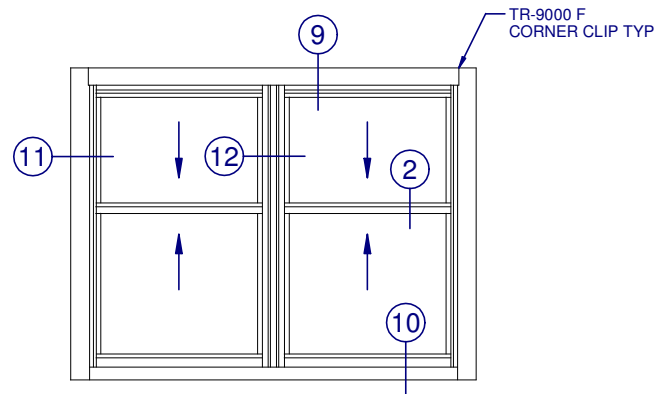


TR-9822F (DH/DH)

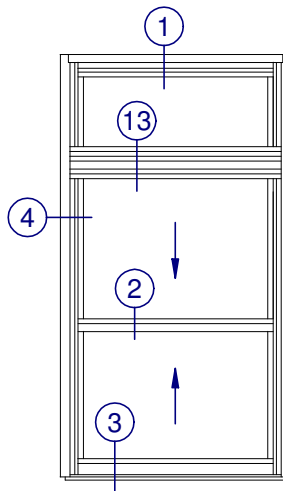


TR-9803
(3 LITE WINDOW)


Half Scale Sections

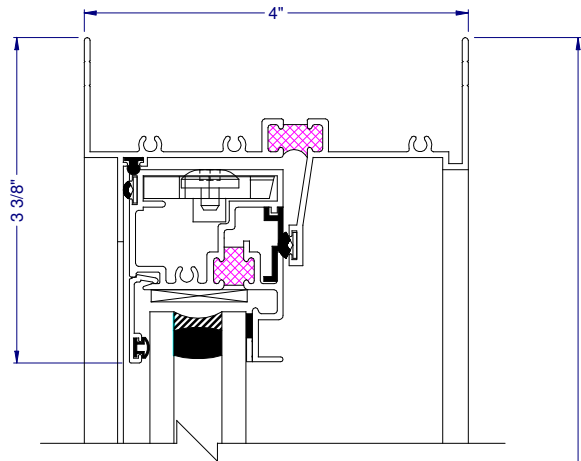


① HEAD

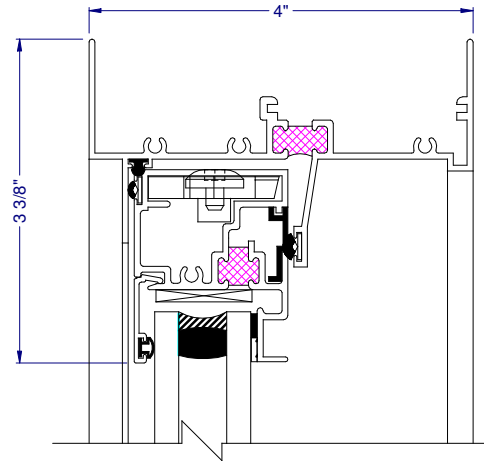


①A OPTIONAL STRAP ANCHORHEAD

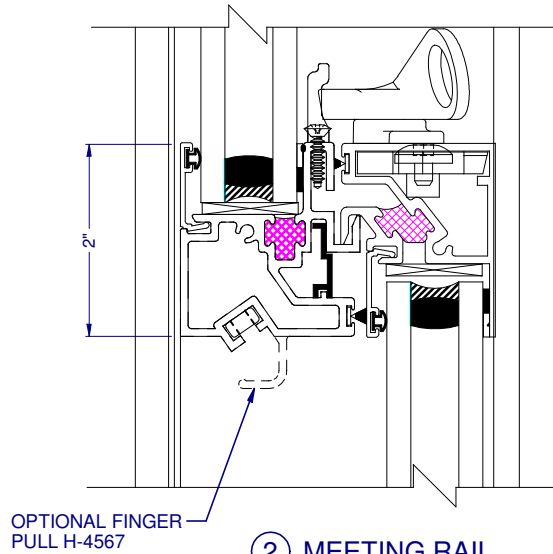


② MEETING RAIL

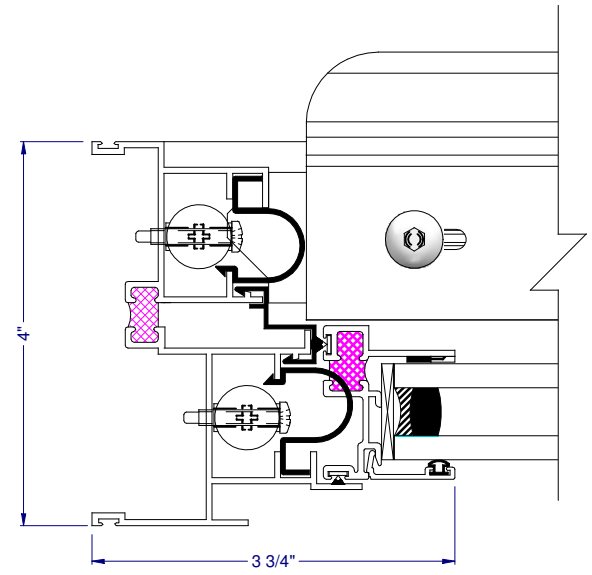

④ JAMB

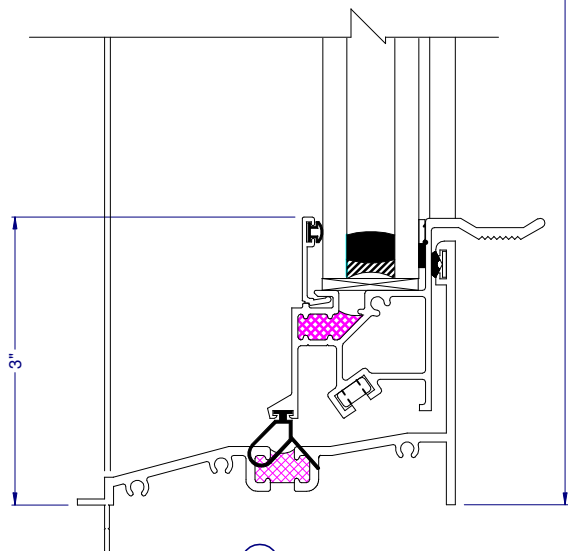


③ SILL

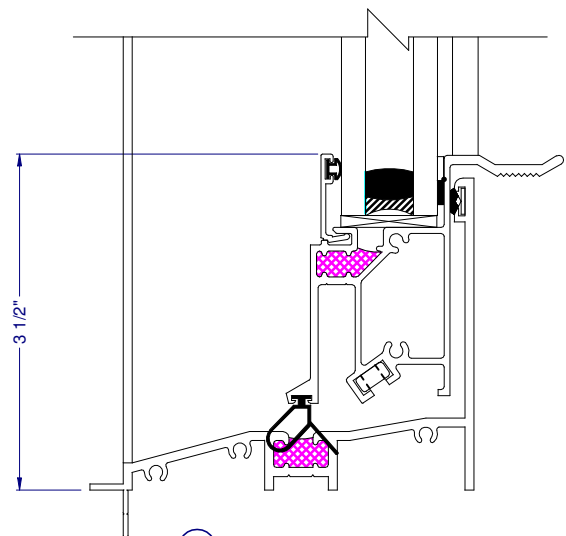


③A OPTIONAL 12# SILL


Half Scale Sections

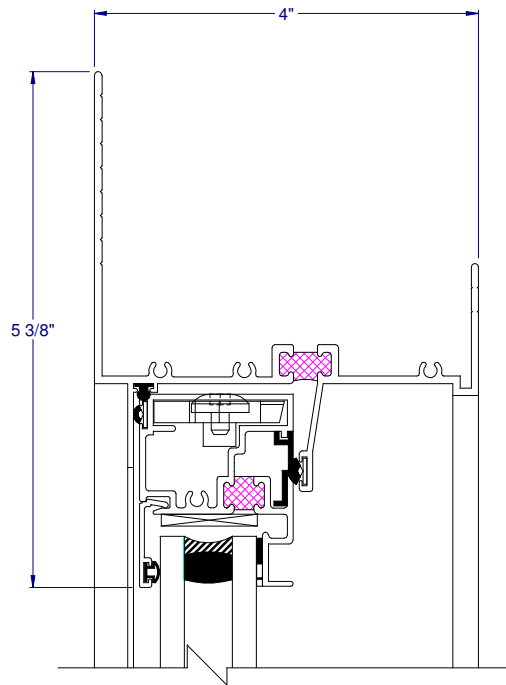


⑨ HEAD (FLANGE)

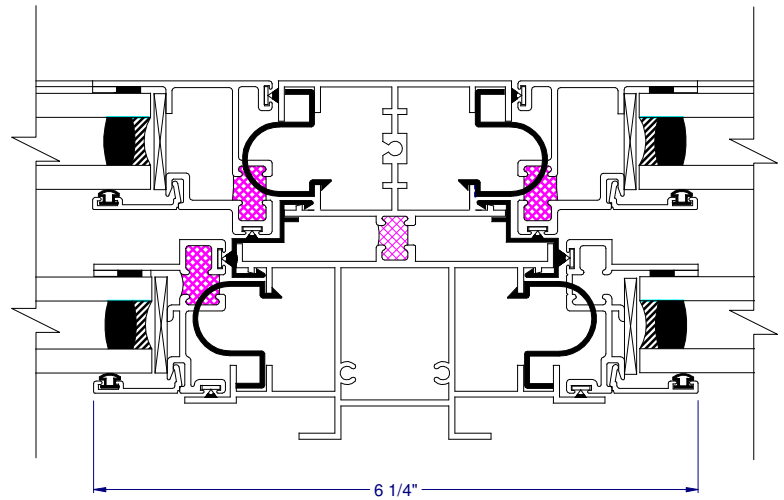


⑫ VERTICAL INTEGRAL MULLION
(HUNG/HUNG)

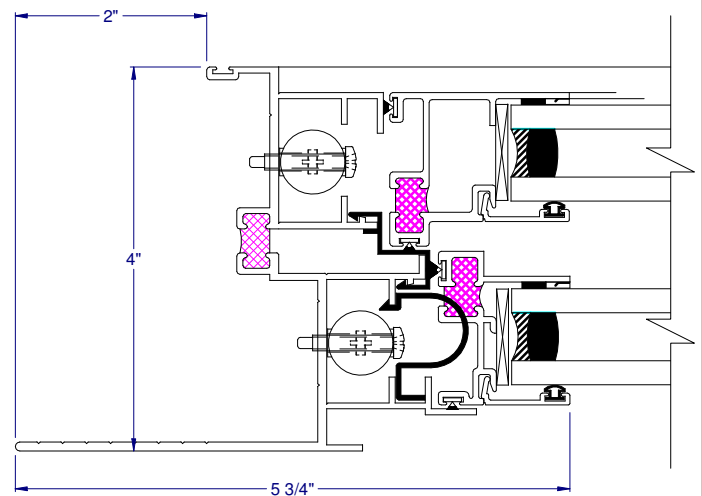

⑪ JAMB (FLANGE)

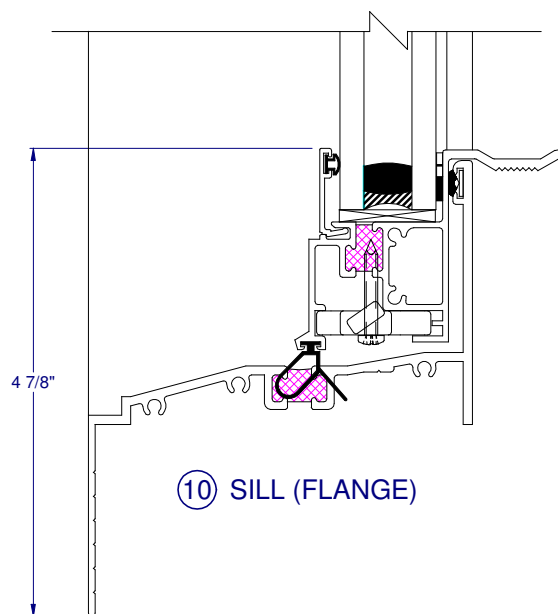


⑩ SILL (FLANGE)

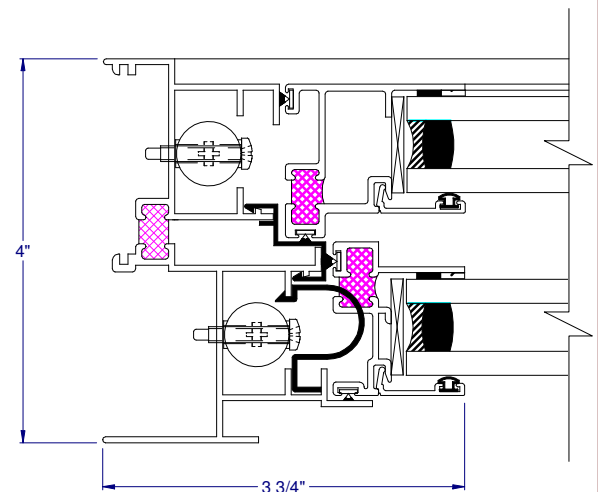

④A OPTIONAL STRAP ANCHOR JAMB


Half Scale Sections

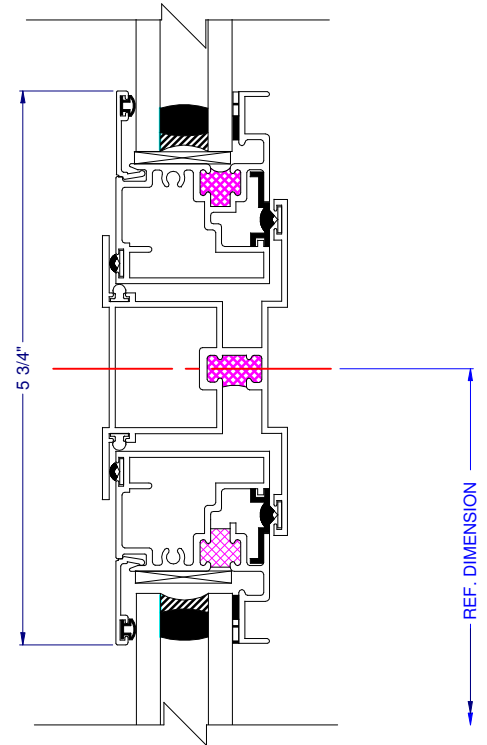

⑬ HORIZONTAL ASTRAGAL





HARDWARE

The TRACO Warranty Label, found on every TRACO product, provides important information

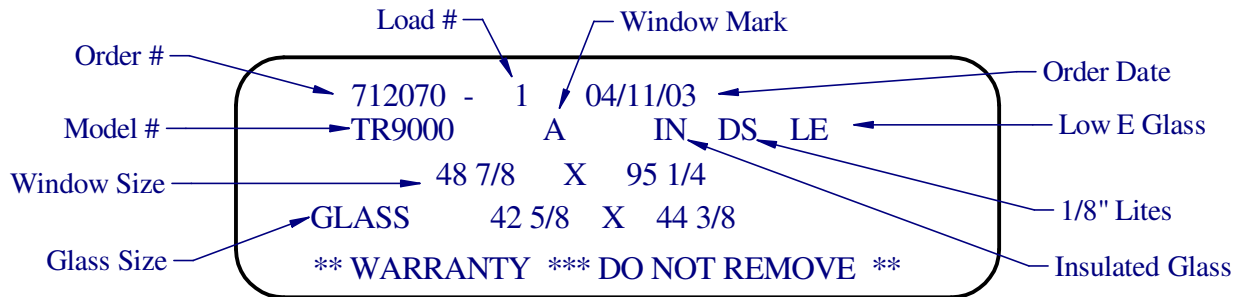

The Warranty Label is located on the top rail of the top sash.

   When ordering parts, please provide Order # from Warranty Label (above), Part #, and Part Name.

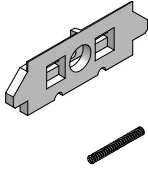 Balance Shoe #30-1015	 Pivot Bar #30-1556	 Sash Stop #20-0003
 Sash Plunger #30-0008	 Release Button #30-0006	 Pole Ring #30-0003
 Sweep Lock #30-0001	 Keeper #30-0002	 Sill Snap Lock #50-0179
 Head Snap Lock #30-1424	 Head Snap Keeper #50-0180	