

nu•vu•rite™ / erase•rite® care & maintenance

Important care before using writing surface:

Clean the surface thoroughly with a non-abrasive household cleaner, such as a glass cleaner. Once cleaned, completely rinse the surface with clean water. The water rinse will remove any residue left behind by the cleaning agent. Dry with a clean soft cloth.

Important maintenance for walltalkers® surfaces:

1. Use the **walltalkers** dry erase markers or Expo® brand for optimal results.
2. Remove dry erase markings with the **walltalkers**, or similar, felt erasers for longer lasting surface effectiveness. Press firmly when erasing, using a circular motion. Change erasers as they become dirty. Dirty erasers will leave ink residue on the surface.

Warning: The hard plastic edges of Expo type erasers may scratch the surface of **walltalkers**.

If using the **nu•vu•rite** surface, be sure to use the **walltalkers** nylon bristle erasers for best results. Normal felt erasers do not reach deep enough into the bi-directional lenticular surface.

3. High gloss dry erase surfaces offer excellent dry-erasability, as the gloss level decreases so may the total effectiveness of dry-erasing. If using the **walltalkers 2** low odor dry erase markers, additional cleaning with water and a soft cloth may be required. If ghosting occurs, wipe the board with a soft cloth dampened with water. Ghosting is the term used to describe any faint remnant of marker left on the board after dry-erasing. The use of **walltalkers** towelettes will also remove the ghosting from the dry erase surface.
4. For daily cleaning, rinse the surface with water. This may be done with a soft cloth or sponge. Dry the surface with a soft cloth prior to writing.
5. If washing the material with a soft cloth and water will not remove marks, use the **walltalkers** dry erase cleaner or **walltalkers** towelettes. Once the material is clean, rinse the surface with water and dry with a soft cloth.
6. For stubborn stains, you can use a paint/stain remover such as Goof Off®. Apply to a soft cloth, blot and/or rub gently over the stained area. After the stain has been removed, rinse with clean water and dry with a soft cloth. Follow the paint/stain remover manufacturer's precautions before using.

CAUTION:

- Do not use ball point pens or other sharp pointed instruments on the **walltalkers** surface.
- Erasers with sharp edges or plastic bodies may scratch the **walltalkers** surface.
- Do not use abrasive cleaners on the **walltalkers**.
- Permanent marker may be removed with alcohol or by writing over the markings with a dry erase marker.

© and ™ RJF International Corporation.
Goof Off® Valspar Corporation.
Expo® Sanford Corporation.

medium / high gloss care & maintenance

Important care before using writing surface:

Clean the surface thoroughly with a non-abrasive household cleaner, such as a glass cleaner. Once cleaned, completely rinse the surface with clean water. The water rinse will remove any residue left behind by the cleaning agent. Dry with a clean soft cloth.

Important maintenance for walltalkers® surfaces:

- 1) Use the **walltalkers** dry erase markers or Expo® brand for optimal results.
- 2) Remove dry erase markings with the **walltalkers**, or similar, felt erasers for longer lasting surface effectiveness. Press firmly when erasing, using a circular motion. Change erasers as they become dirty. Dirty erasers will leave ink residue on the surface.

Warning: The hard plastic edges of Expo type erasers may scratch the surface of **walltalkers**.

- 3) For daily cleaning, or as needed, rinse the surface with water. This may be done with a soft cloth or sponge. Dry the surface with a soft cloth prior to writing. The low odor **walltalkers 2** dry erase markers may require more frequent cleansing.
- 4) If washing the material with a soft cloth and water will not remove marks, use the **walltalkers** dry erase cleaner, or use **walltalkers** towelettes. Once the material is clean, rinse the surface with water and dry with a soft cloth.
- 5) For stubborn stains, you can use a paint/stain remover such as Goof Off®. Apply to a soft cloth, blot and/or rub gently over the stained area. After the stain has been removed, rinse with clean water and dry with a soft cloth. Follow the paint/stain remover manufacturer's precautions before using.

CAUTION:

- Do not use ball point pens or other sharp pointed instruments on the **walltalkers** surface.
- Erasers with sharp edges or plastic bodies may scratch the **walltalkers** surface.
- Do not use abrasive cleaners on the **walltalkers**.
- Permanent marker may be removed with alcohol or by writing over the markings with a dry erase marker.



care & maintenance instructions

www.walltalkers.com

walltalkers

a division of RJF International Corporation

3875 Embassy Parkway
Fairlawn, OH 44333

PH: 800.820.9255 • Fax: 330.668.7703

7075CAM2111 4/05