

Insulation Detector Replacement Instructions

INSTRUCTIONS

1. Disconnect and remove the RP5A11 insulation detector. You may need to take a screw driver or needle nose pliers to pry it from the junction box cover.
2. Insert the RP4A insulation detector into the vacated hole on the junction box cover. Snap into place.
3. Wire the RP4A as shown in the below wiring diagram.

