



FRONT VIEW

SIDE VIEW

# WARNING:

WIRING AND INSTALLATION MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN ONLY. TURN POWER OFF BEFORE INITIAL INSTALLATION, SERVICING, MAINTENANCE, OR RELAMPING. FIXTURES SHOULD ALWAYS BE INSTALLED IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRIC CODES.

# INSTALLATION INSTRUCTION:

1. REMOVE THUMB NUTS FROM ASSEMBLED FIXTURE. PULL UNIVERSAL ADAPTER PLATE OUT OF CANOPY. ATTACH UNIVERSAL ADAPTER PLATE TO WALL JUNCTION BOX USING THE TWO 8-32 x 5/8" LONG, PHILLIPS HEAD SCREWS (INCLUDED IN PARTS BAG). INSTALL ADAPTER PLATE SO THAT THUMB NUT STUDS ARE LEVEL AT LEFT AND RIGHT (SEE FRONT VIEW).
2. PULL SUPPLY WIRES THROUGH ADAPTER PLATE. CONNECT 120 VOLT SUPPLY WIRES TO THE FIXTURE AND GROUND WIRES USING THE HIGH TEMPERATURE WIRE NUT CONNECTORS (INCLUDED IN PARTS BAG). CONNECT BLACK TO BLACK, WHITE TO WHITE AND GREEN TO GREEN. PUSH CONNECTORS BACK INTO JUNCTION BOX.
3. SLIDE FIXTURE CANOPY OVER THE TWO STUDS ON THE UNIVERSAL ADAPTER PLATE. SECURE USING THE TWO THUMB NUTS PREVIOUSLY REMOVED.
4. REMOVE HOOD COUNTERCLOCKWISE. INSTALL NEW LAMP AND REPLACE HOOD PER RELAMPING INSTRUCTIONS AT RIGHT.

RELAMPING:  
USE ONLY MR16, 12 VOLT, 50 WATT MAXIMUM, BI-PIN HALOGEN LAMPS. CHECK PACKAGE AND FIXTURE LABELING CAREFULLY TO ENSURE USING ONLY LAMPS OF PROPER TYPE AND WATTAGE.

TO RELAMP:  
UNSCREW HOOD COUNTERCLOCKWISE FROM FIXTURE BODY. PULL LAMP STRAIGHT OUT (DO NOT TWIST) FROM SOCKET. REPLACE LAMP. SCREW HOOD CLOCKWISE TO FIXTURE BODY. BE SURE THAT HOOD SEATS SNUGLY ON O-RING ON FIXTURE BODY.

Cooder Lighting Luminaire reserves the right to make design changes without notice.

REV.	DATE	DESCRIPTION	MCN#
A	07-12-02	PRODUCTION RELEASE	M22772
TITLE			
INSTALLATION INSTRUCTIONS			
MODEL 904-2 XX-M02			
DWG No. S11837			
SHEET 1 OF 1			
DRAWN BY S11837-01			



Cooder Lighting  
1250 Date Street  
Camarillo, CA 93012-9053  
Telephone: (805) 464-7713  
FAX: (805) 445-7803