



# INSTALLATION INSTRUCTIONS FOR INDIVIDUAL FIXTURE PANELIT S52DIP-T5 WITH SINGLE CABLE

TO INSTALL FIXTURE, CONTRACTOR HAS TO HAVE THE FOLLOWING PARTS:

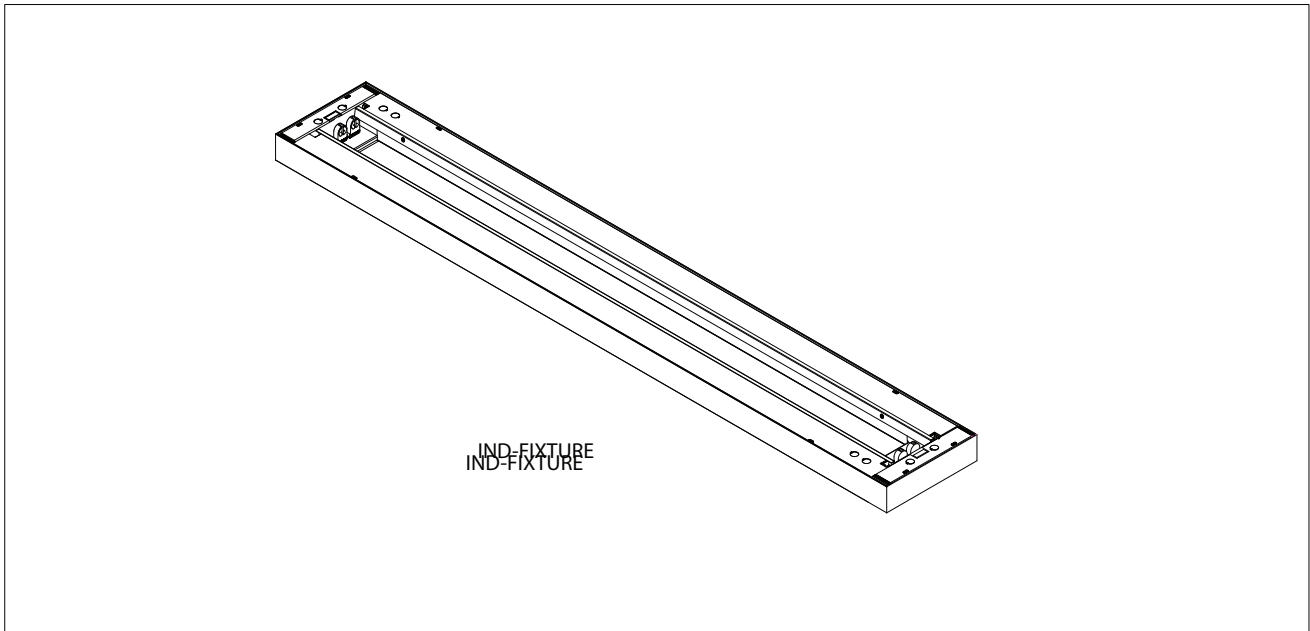


A) "IND" - INDIVIDUAL FIXTURE  
A) "IND" - INDIVIDUAL FIXTURE

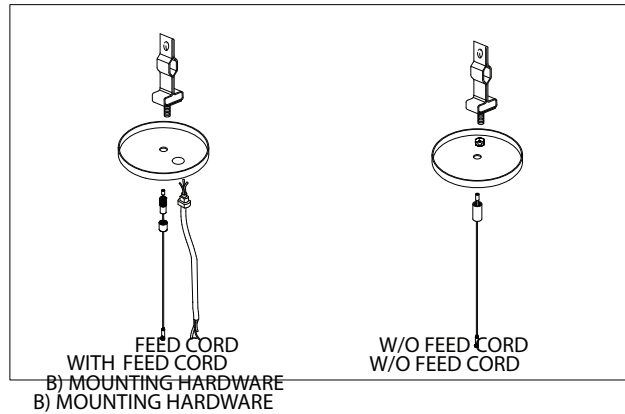


# INSTALLATION INSTRUCTIONS FOR INDIVIDUAL FIXTURE PANELIT S52DIP-T5 WITH SINGLE CABLE

STEP 1: INSTALL MOUNTING HARDWARE  
ACCORDING TO MOUNTING PLAN

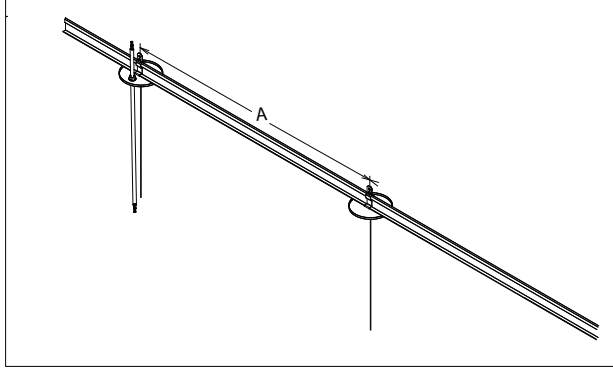


STEP 2: REMOVE BALLAST COVERS FROM FIXTURES

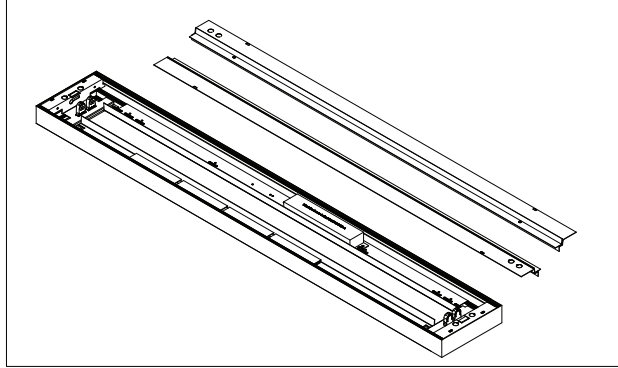


STEP 3: REMOVE GRIPLOCK FROM MOUNTING HARDWARE AND INSTALL GRIPLOCK ONTO FIXTURES

STEP 3a:  
SCREW ON GRIPLOCK  
HAS TO BE UNSCREWED AS FAR  
AS POSSIBLE AT GRIPLOCK BODY.  
OPEN TAB THAT COVERS GRIPLOCK WINDOW  
USING A FLAT HEAD SCREWDRIVER


A) "IND" - INDIVIDUAL FIXTURE

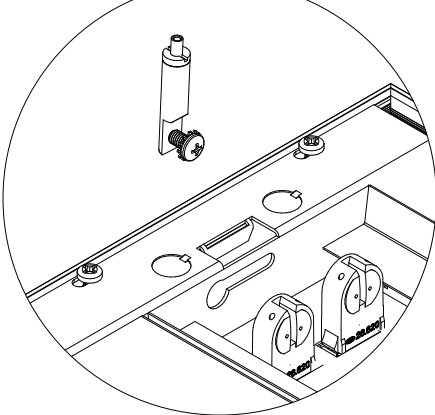

STEP 3b:  
INSERT GRIPLOCK WITH SCREW AND  
WASHER INTO GRIPLOCK WINDOW  
AND INSERT GRIPLOCK SCREW INTO KEYHOLE

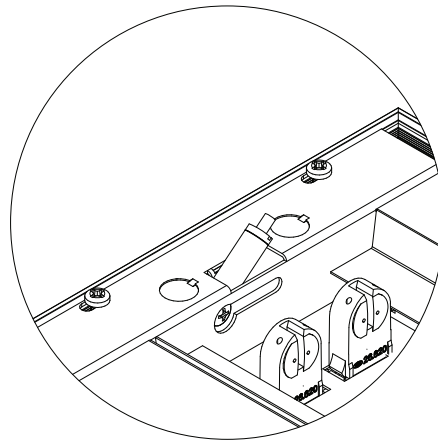


STEP 3c:  
SLIDE SCREW TO MIDDLE OF SLOT

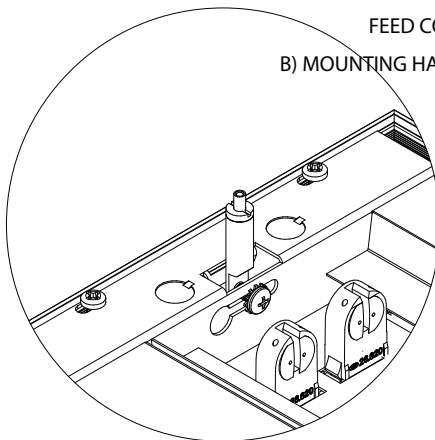

STEP 3d:  
TIGHT SCREW TO FIX GRIPLOCK  
ON MOUNTING BRACKET


W/O FEED CORD

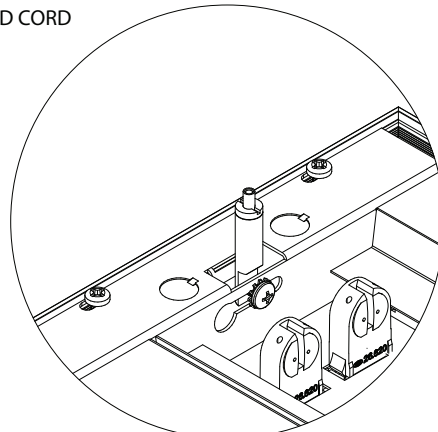

NOTE: INSTALL GRIPLOCKS AT BOTH ENDS OF IND FIXTURE


# INSTALLATION INSTRUCTIONS FOR INDIVIDUAL FIXTURE PANELIT S52DIP-T5 WITH SINGLE CABLE

STEP 4: INSTALL "IND" FIXTURE WITH TWO  
AIRCRAFT CABLES.

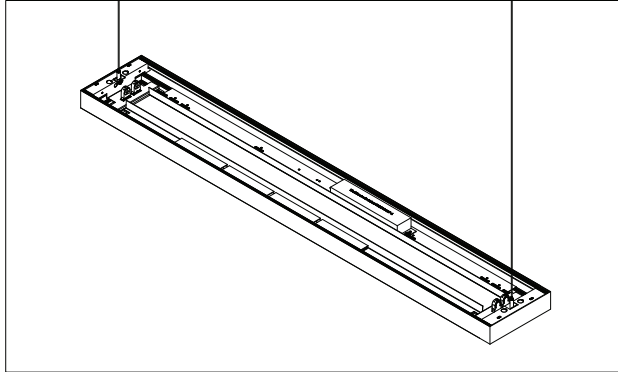

POWER MUST BE OFF BEFORE THIS STEP!


STEP 5: INSERT FEED CORD INTO FEED HOLE  
AND PULL FEED CORD INTO BALLAST AREA

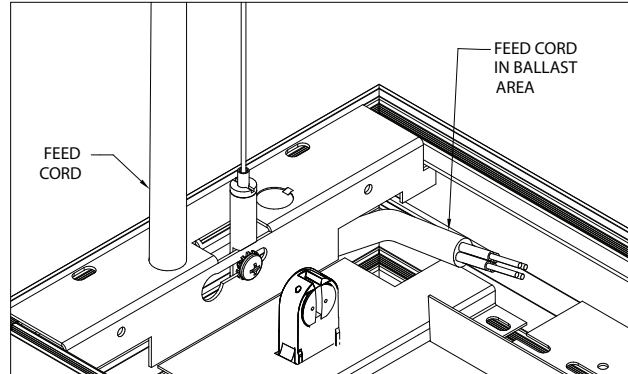

STEP 6: MAKE ELECTRICAL WIRE CONNECTION AT FEED


STEP 7: ADJUST POSITION OF GRIPLOCK TO LEVEL THE FIXTURE  
IF IT IS NECESSARY, TIGHTEN GRIPLOCK SCREW

A) "IND" - INDIVIDUAL FIXTURE

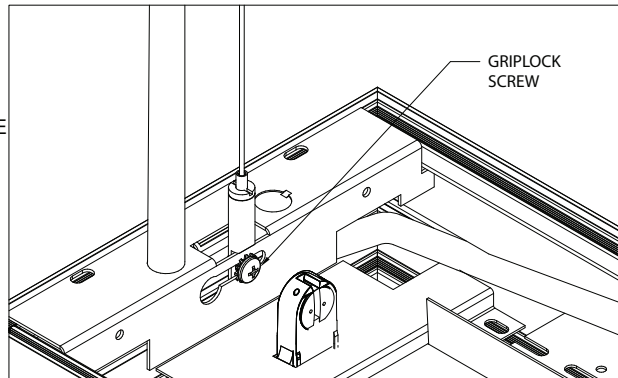

STEP 8: INSTALL BALLAST COVERS

STEP 9: INSTALL LAMPS

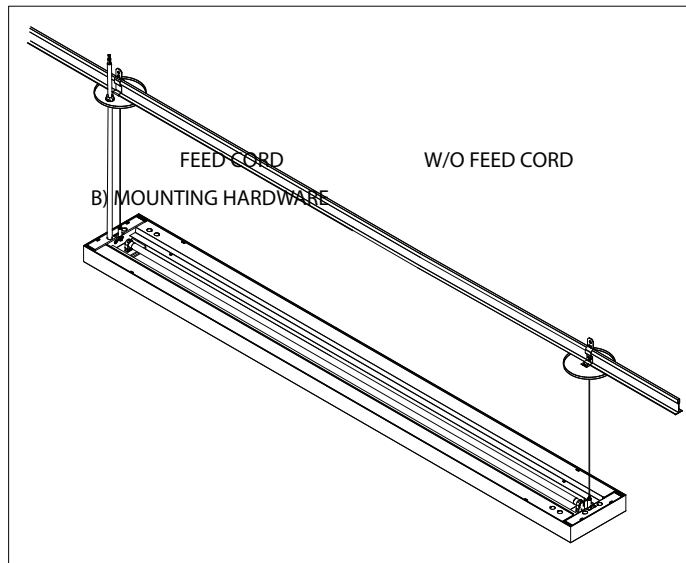

STEP 10: ALIGN FIXTURE TO HAVE IT STRAIGHT AND LEVEL  
BY ADJUSTING AIRCRAFT CABLE.