




NOTE: Before attempting to verify and replace the ballast, ensure that the power to the fixture's circuit is turned off. Remove optics (A) by inserting your fingers inside at both ends and pull downwards. Remove the lamps (B) from the fixture (C).

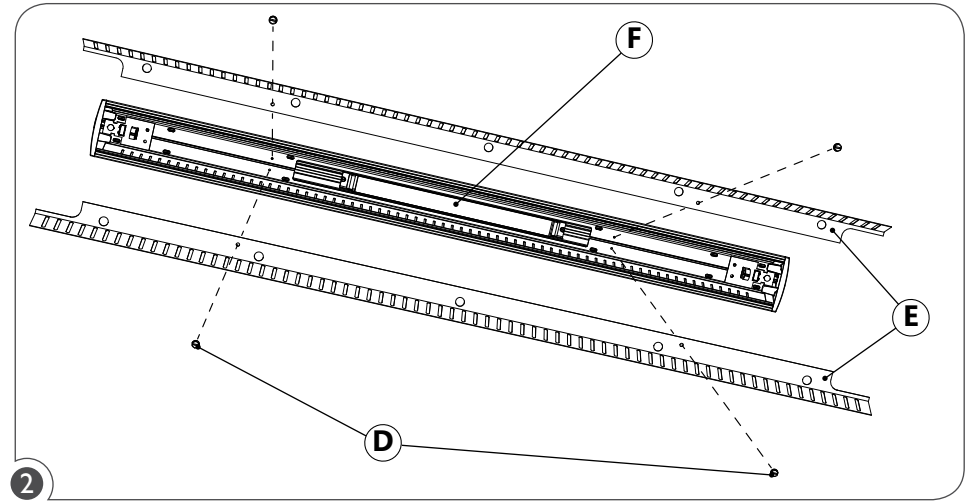

Ensure that the power to the fixture's circuit is turned off. Remove reflector retaining screws (D) to remove the reflectors (E) and reveal the ballast (F).

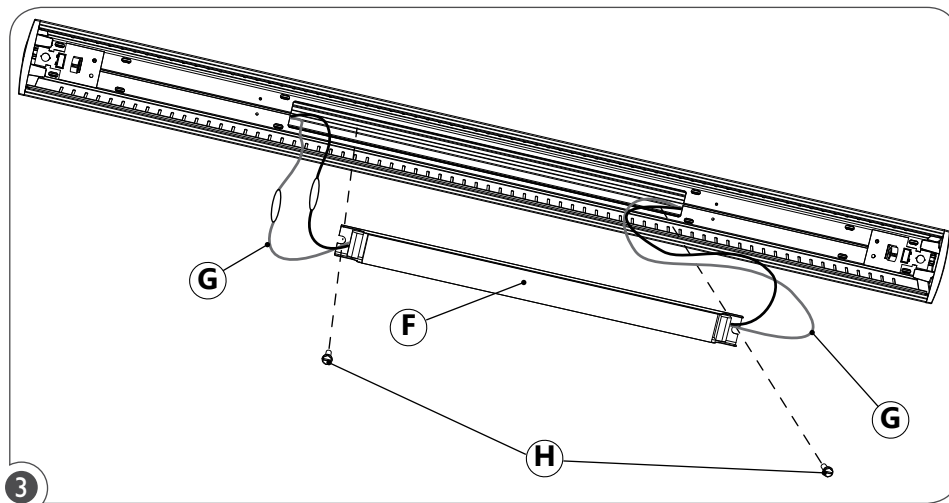

Disconnect wires (G) from the ballast (F). Remove the ballast retaining nuts (H). Replace ballast (F) and reconnect wires (G).

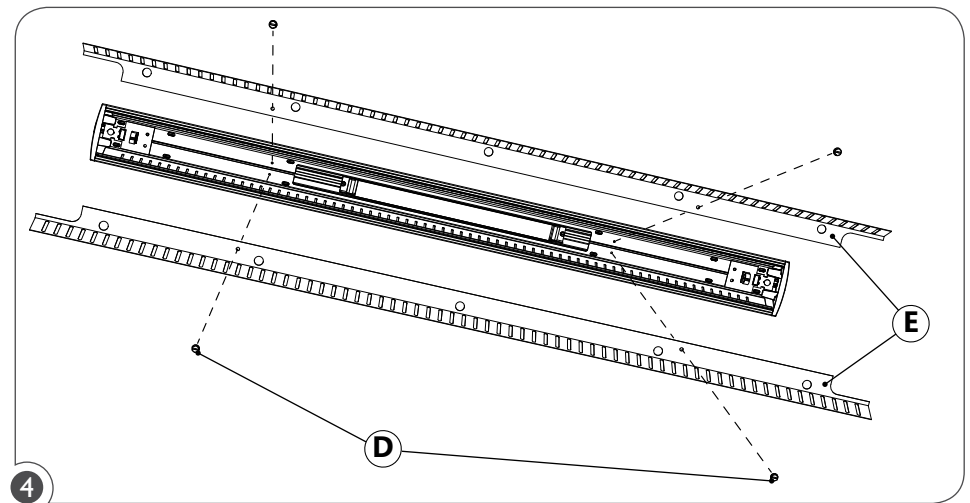

Put the reflectors (E) back in place and fasten retaining screws (D). Re-install the lamps and the optics. Power to the fixture can now be turned on.

