


PENDANT ROTATING INSTALLATION INSTRUCTIONS

NOTE: THE JUNCTION BOXES MUST BE SOLIDLY FIXED TO THE CEILING AND ATTACHED TO THE STRUCTURE INSIDE THE CEILING BEFORE PROCEEDING TO THE INSTALLATION.


PART LIST


- Trim ring
- Canopy Stem
- J-box crossbar
- ³/₈ threaded stud (by others)
- Power cord
- G Fixture 1
- Screws (by others)
- Octagonal junction box (by others) R

- Fixture 2
- End cap
- Screws
- Joiner
- Threaded stud
- Washer
- Nut
- **Ouick-wire connectors**
- Optics

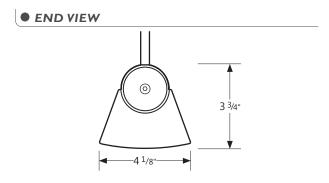


SIDE VIEW

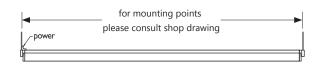 


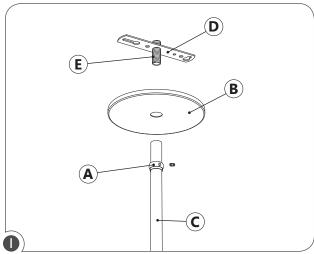


Slide the trim ring (A) and then the canopy (B) onto the stem (C) and leave loose. Screw the j-box crossbar (D) with the 3/8" threaded stud (E) onto the stem (C).

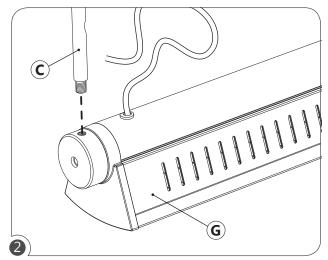

Screw the stems (C) into the threaded endcaps at each end of the fixture (G).

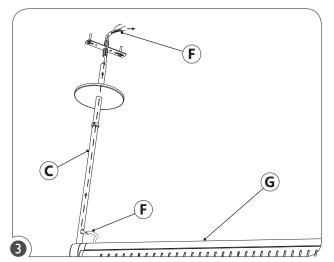

Feed the fixtures power cord (F) through the hole on the side of the stem (C) before installing the stem to the fixture (G).

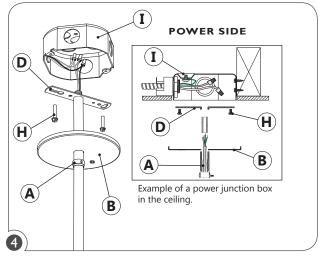

On the power side, raise the fixture to the ceiling and secure with screws (H) the j-box crossbar (D) to the junction box (I). Make electrical connections using supplied wire nuts. Slide the canopy (B) and secure in place with the trim ring (A) by tightening the provided set screw.

FILE NAME:PMR.PENDANT.INST December 17, 2014



1.800.263.AXIS [T] 514.948.6272 514.948.6271 www.axislighting.com




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.



PENDANT ROTATING INSTALLATION INSTRUCTIONS

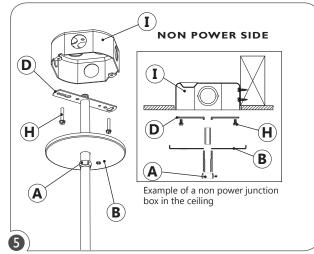


On the non power side, raise the fixture to the ceiling and secure with screws (H) the j-box crossbar (D) to the junction box (I). Slide the canopy (B) and secure in place with the trim ring (A) by tightening the provided set screw.

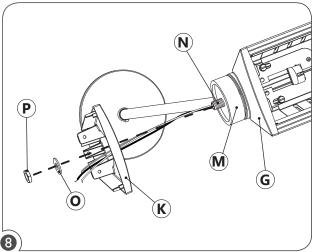


Slide the joiner (M) and the threaded stud (N) of the first fixture (G) into the end cap (K) and secure with the provided washer (O) and nut (P).


FILE NAME:PMR.PENDANT.INST December 17, 2014

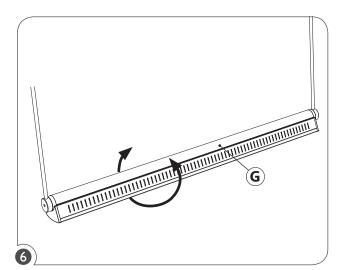


Remove the optics to install lamps and reinstall the optics. The fixture (G) can be rotated to the desired angle. **CAUTION: turn off fixture before manually rotating it.**

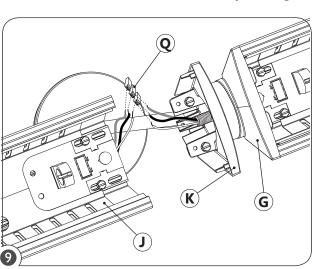

Make the electrical connection between the first fixture (G) and the next fixture (J) using the quick-wire connectors (Q). Install and secure the end cap back in place onto the fixture (J).

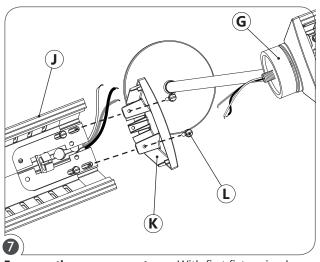

For a continuous row systems: With first fixture in place, remove the optics and lamps if installed. Remove the end cap (K) by removing the screws (L) from the next fixture (J).

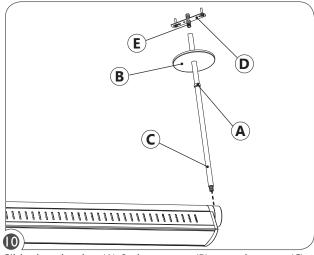

Slide the trim ring (A) & the canopy (B) onto the stem (C). Screw the j-box crossbar (D) with the ³/8" threaded stud (E) onto the stem (C). Install to the ceiling as per step **5**. Install lamps and the optics.

age: 2 / 2



1.800.263.AXIS [T] 514.948.6272 [F] 514.948.6271 www.axislighting.com



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications.

Contact Axis for the latest product information.