


Parts Diagram ■

Torsion Air® Task Chair
Armless

July 2014

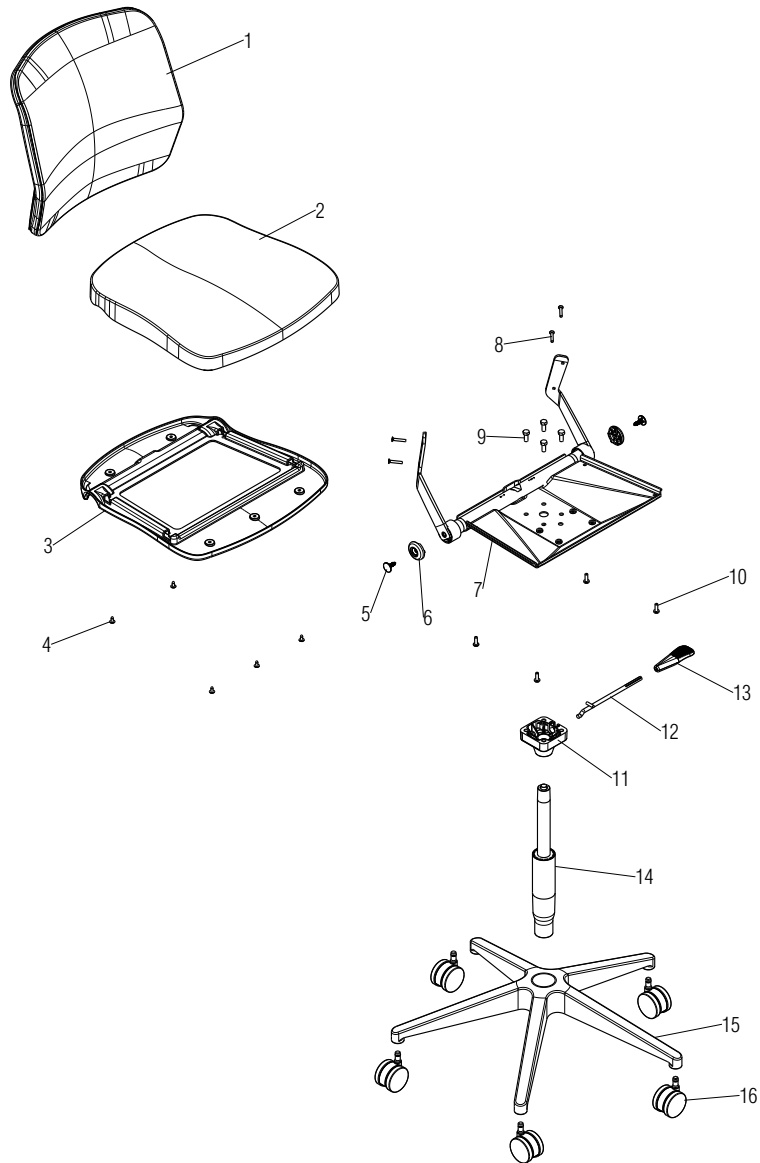

.XX = Select Color
SRN = Special Request Needed
15.1084.D uses 46.2994.BL
15.1078 uses SIFT.015

Item	Part Number	Item Description	Qty	Item	Part Number	Item Description	Qty
1	46.3333.XXMH	Assembly, Backrest	1	11	PT.08.6000	Casting, Pedestal Cylinder	1
2	TARC	Upholstered Seat	1	12	PT.15.6005	Lever, Height Adjustment	1
3	46.3347.BL	Shroud, Pedestal Seat	1	13	PT.06.6040.BL	Handle, Pedestal	1
4	12.0055.CZ	Screw, #10-16 x 1/2 PTH Type AB T/F BLK ZC	5	14	15.1084.D	Cylinder, Pneumatic Height Adjustment, Type D	1
5	46.3367.BL	Cap, Torsion Mechanism End Cap Center	2		15.1078	Cylinder, Gas Seat Height Adjustment	1
6	PT.06.7012.BL	Cap, Back Support	2	15	46.2995.BL	Base, 5-Blade Pedestal Stool	1
7	SRN	Seat Pan	1		SIFT.015	Aluminum Base, Sift Task Chair	1
8	12.9011.SS	Screw, M5 x 30 CLS 10.9 FSHCS Pin	4	16	09.0440.BL	Caster, 60mm Diameter Hard Floor	5
9	12.2003	Screw, 5.16-18 x 3/4 HX HD, Thread Forming	4		09.0441.BL	Caster, 60mm Diameter Soft Floor	5
10	12.0011	Screw, M6 x 18 PPH "BosScrew"	4				

