


Parts Diagram ■

Torsion Air® Task Chair

With Arms

July 2014

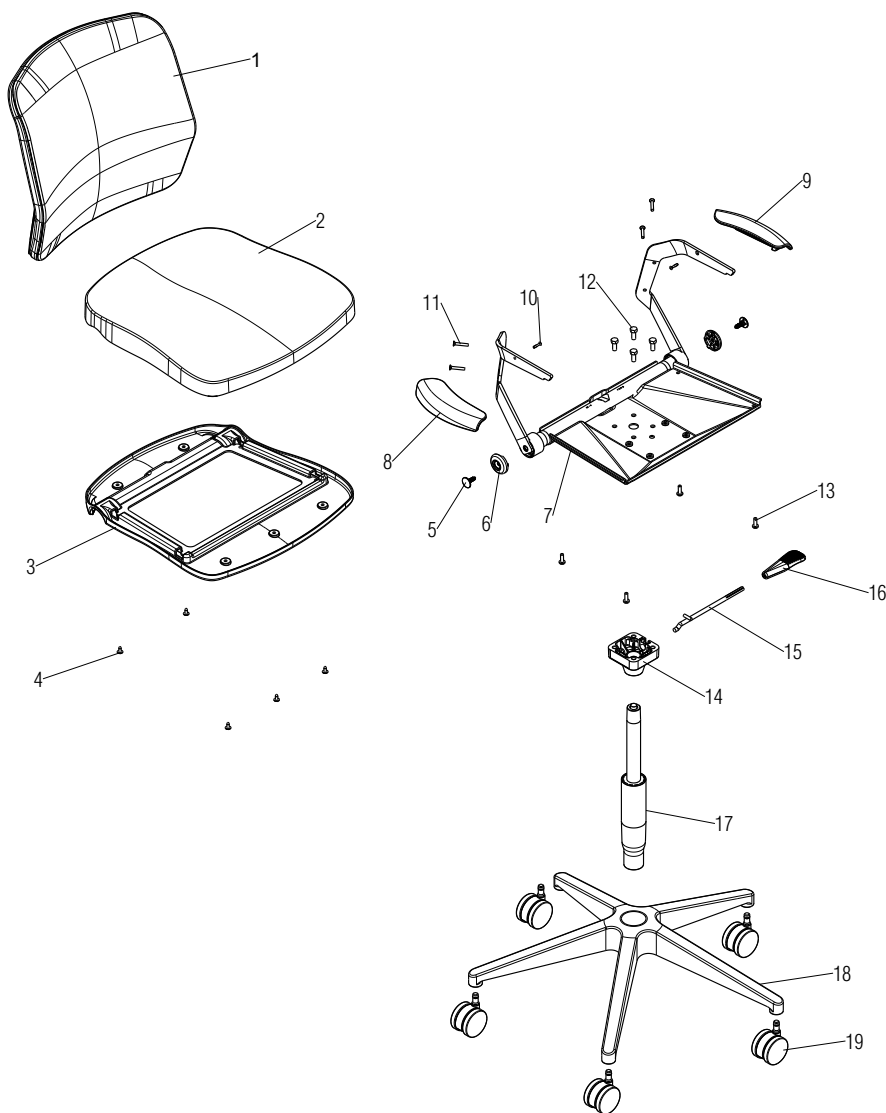

.XX = Select Color
 SRN = Special Request Needed
 15.1084.D uses 46.2994.BL
 15.1078 uses SIFT.015

Item	Part Number	Item Description	Qty	Item	Part Number	Item Description	Qty
1	46.3333.XXMH	Assembly, Backrest	1	12	12.2003	Screw, 5/16-18 x 3/4 HX HD, Thread Forming	4
2	TARC	Upholstered Seat	1	13	12.0011	Screw, M6 x 18 PPH "BosScrew"	4
3	46.3347.BL	Shroud, Pedestal Seat	1	14	PT.08.6000	Casting, Pedestal Cylinder	1
4	12.0055.CZ	Screw, #10-16 x 1/2 PTH Type AB T/F BLK ZC	5	15	PT.15.6005	Lever, Height Adjustment	1
5	46.3367.BL	Cap, Torsion Mechanism End Cap Center	2	16	PT.06.6040.BL	Handle, Pedestal	1
6	PT.06.7012.BL	Cap, Back Support	2	17	15.1084.D	Cylinder, Pneumatic Height Adjustment, Type D	1
7	SRN	Seat Pan	1		15.1078	Cylinder, Gas Seat Height Adjustment	1
8	46.3338.R.BL	Cap, Arm, Right	1	18	46.2995.BL	Base, 5-Blade Pedestal Stool	1
9	46.3338.L.BL	Cap, Arm, Left	1		SIFT.015	Aluminum Base, Sift Task Chair	1
10	12.0696.TR	Screw, 8 x 5/8 TX OV HD T-B BLK OX	2	19	09.0440.BL	Caster, 60mm Diameter Hard Floor	5
11	12.9011.SS	Screw, M5 x 30 CLS 10.9 FSHCS PLN	4		09.0441.BL	Caster, 60mm Diameter Soft Floor	5