


Caster Replacement

1. Carefully tip cube over to have access to the bottom.
2. Pull out (4) existing casters.
NOTE: DO NOT remove the screws in the bottom plate.
3. Install (4) replacement casters by pressing in until secure.

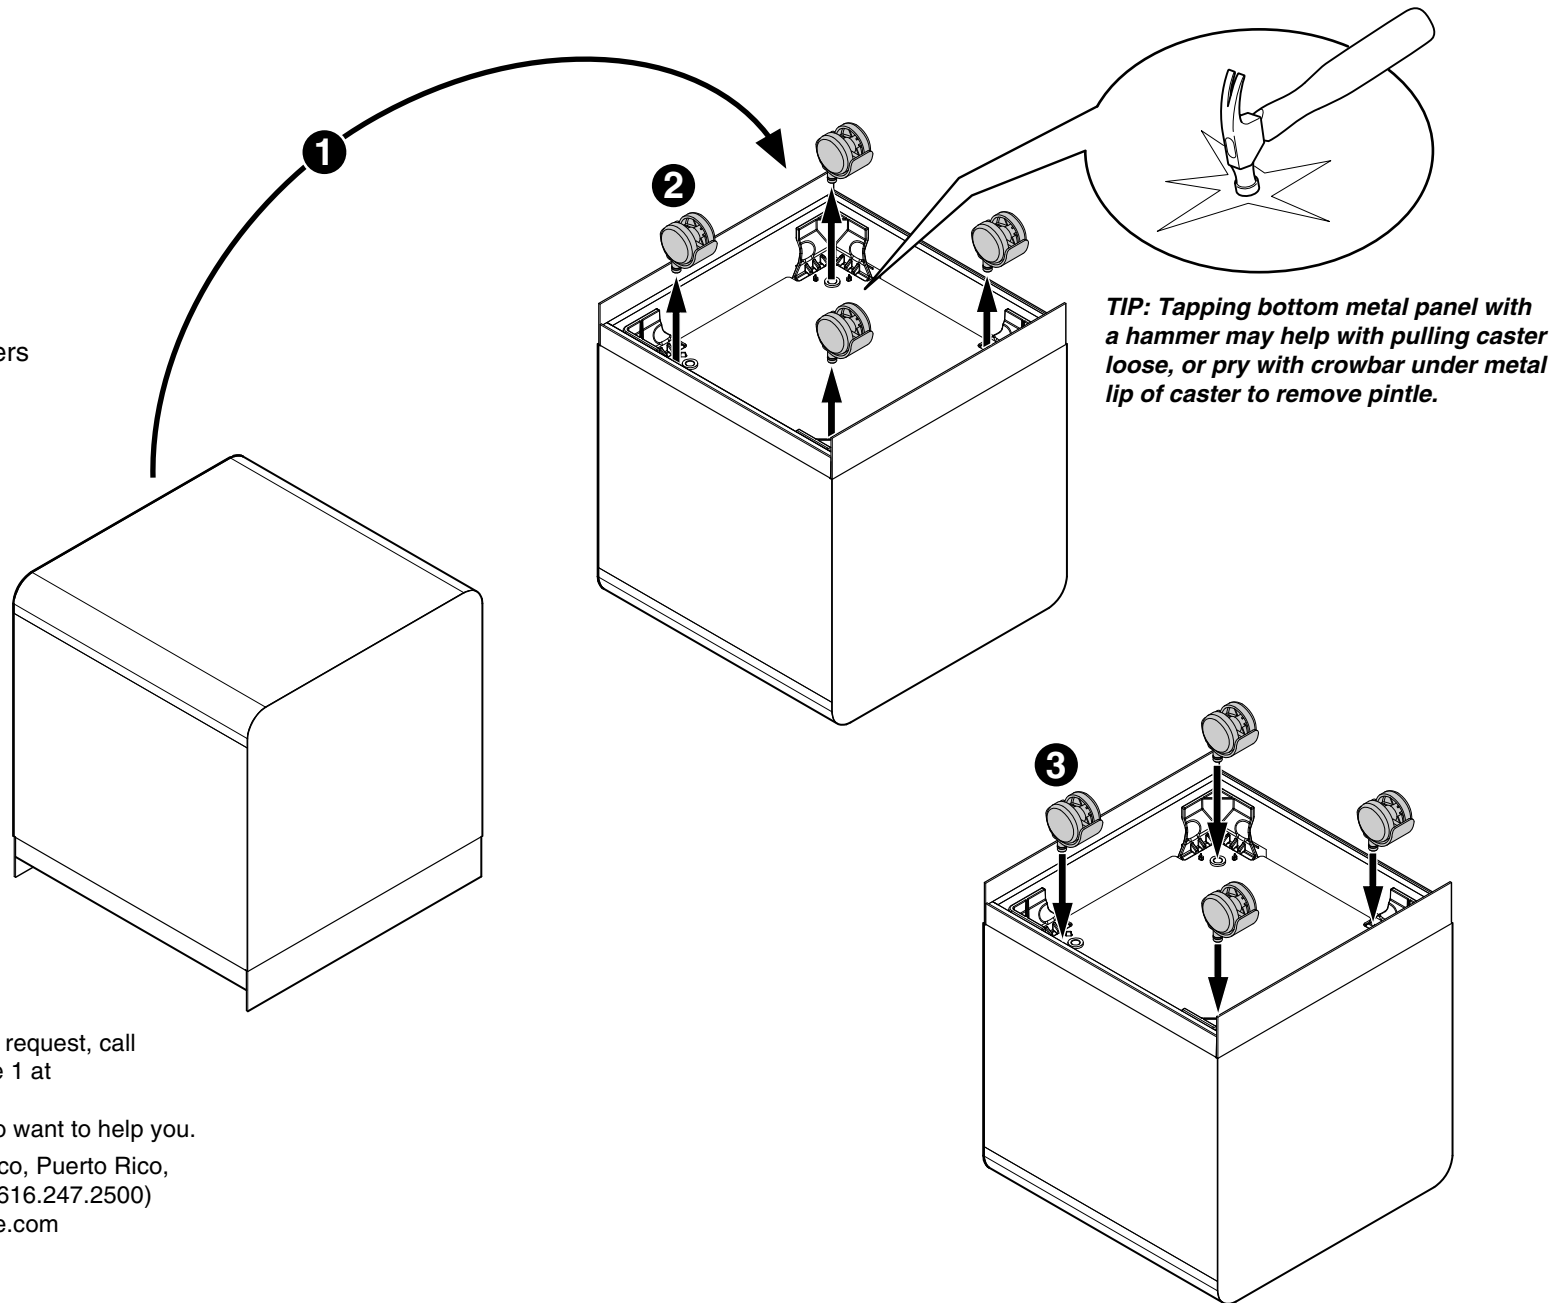

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com

© 2017 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.