



If you have a problem, question, or request, call
your local dealer, or Steelcase Line 1 at
888.STEELCASE (888.783.3522)
for immediate action by people who want to help you.
(Outside the U.S.A., Canada, Mexico, Puerto Rico,
and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com
© 2008 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.
Printed in U.S.A.

1. For each arm cap that you are going to replace, cut an "X" in the location shown.

2. Locate tab and twist with a flat-bladed screwdriver. This will release the tab from the arm.

3. Remove arm cap.

4. For installation of the replacement arm cap, slide cap onto arm making sure to align the dovetail on the replacement cap with the dovetail valley on the existing arm frame (4a). Make sure the replacement arm cap is aligned with arm frame as shown (4b). Engage dovetail into dovetail valley (4c).

5. Pull back on the replacement arm cap after it's been installed to ensure that the tab from the arm cap has snapped into place.

