


Kitchen sink - eno

Single-lever mixer with pull-out spout - polished chrome - polished chrome

Article number: 33 840 760-00 0010

Exploded drawing

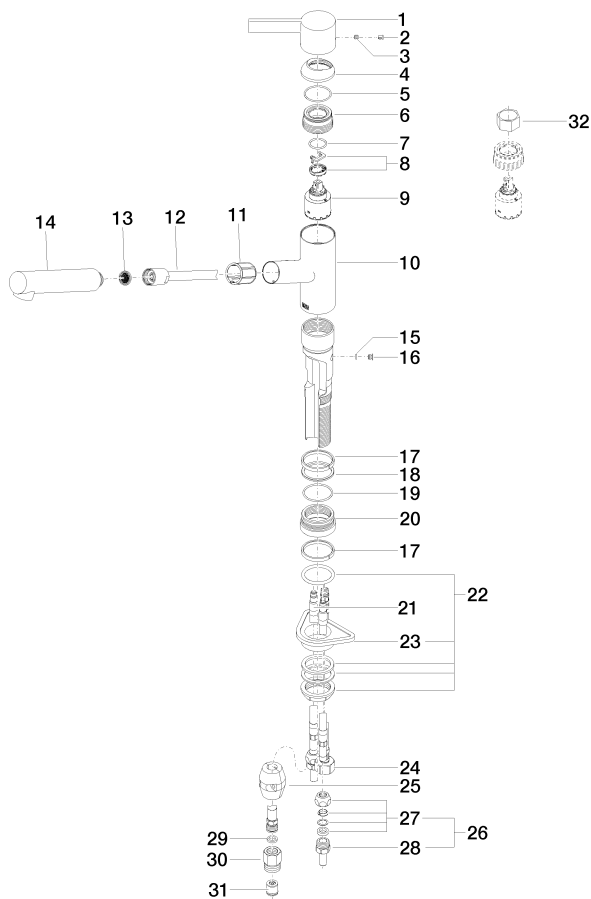

Spare parts list

Number	Item Number	Designation	Number of units
1	09 20 76 001-00	Lever - polished chrome	1
2	09 31 20 017 90	Plug for European drain -	1
3	09 31 11 030 90	Mounting bracket -	1
4	09 28 30 012-00	Hood / sleeve - polished chrome	1
5	09 14 10 102 90	Washer -	1
6	09 24 04 270 90	Mounting bracket -	1
7	09 14 10 031 90	Washer -	1
8	04 28 10 148 00 90	EHM cartridge -	1
9	90 15 05 062 00 90	EHM cartridge -	1
10	09 19 76 001-00	Body - polished chrome	1
11	09 18 40 099 90	Hood / sleeve -	1
12	04 30 02 059 00-00	Tube - polished chrome	1
13	09 23 01 039 90	Application -	1
14	04 12 11 106 00-00	shower head - polished chrome	1
15	09 14 10 001 90	Washer -	1
16	09 30 30 113 20 90	Mounting bracket -	1
17	09 14 15 029 90	Ring -	2
18	09 28 10 144 90	Ring -	1
19	09 14 10 034 90	Washer -	1
20	09 27 76 001-00	Escutcheon - polished chrome	1
21	04 30 04 018 00 90	Tube -	2
22	04 23 10 044 02 90	Mounting bracket -	1
23	09 18 40 090 90	Mounting bracket -	1
24	04 30 04 029 00 90	Tube -	1
25	04 21 50 005 00 90	Automatic flow rate regulator -	1
26	04 24 04 222 00-00	Mounting bracket - polished chrome	2
27	04 23 30 031 01-07	Wall connection - Rough nickel-plated	2
28	09 24 04 222 10-00	Wall connection - polished chrome	2
29	09 23 01 096 90	Application -	1
30	09 14 20 019 90	Washer -	1
31	09 30 09 031 90	assembly wrench -	1