


Kitchen sink - Series-various
AIR SWITCH operating button, trim parts only - polished chrome - polished chrome
Article number: 10 713 970-00

Exploded drawing

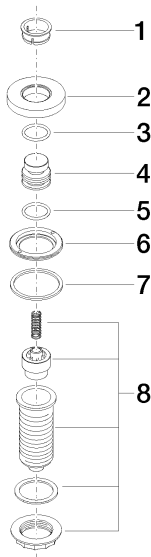

Spare parts list

Number	Item Number	Designation	Number of units
1	09 28 10 141 90	Hood / sleeve -	1
2	09 27 87 012-00	Escutcheon - polished chrome	1
3	09 14 10 507 90	Washer -	1
4	09 21 33 045-00	Operating element - polished chrome	1
5	09 14 10 015 90	Washer -	1
6	09 24 01 030 90	Ring -	1
7	09 14 05 037 90	Washer -	1
8	04 30 01 186 00 90	Wall connection -	1