



CARE & MAINTENANCE

CaféWay™ Tables
Model ECRCB


November 2014

PREVENTIVE MAINTENANCE GUIDE


- Check for loose or missing bolts and fasteners monthly.
- Check casters and latches for proper operation monthly.
- Oil all points labeled "1" with a light-weight oil twice per year.
- Paraffin wax the center slide and latch assemblies labeled "2" twice per year.

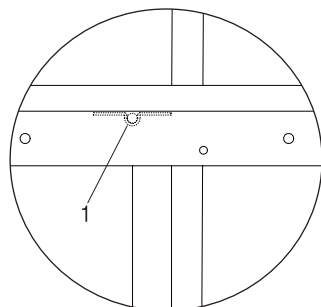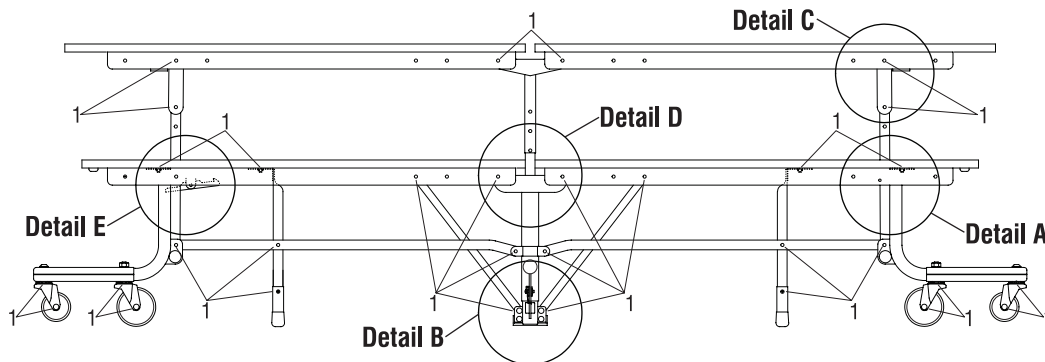


Detail A

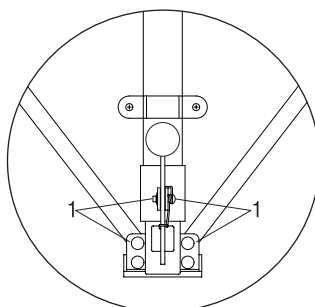


Detail B - Front

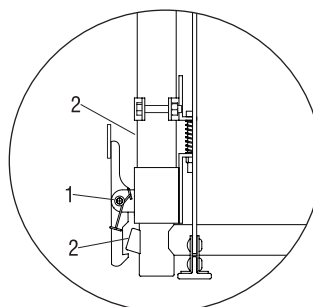


Detail B - Side

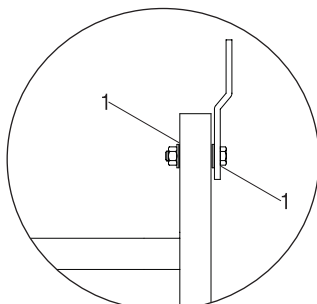


Detail C

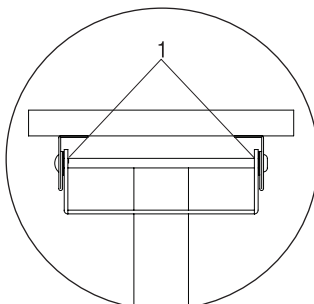

Detail D

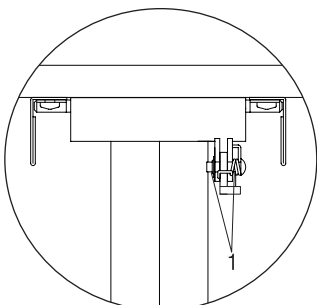

Detail E - Side

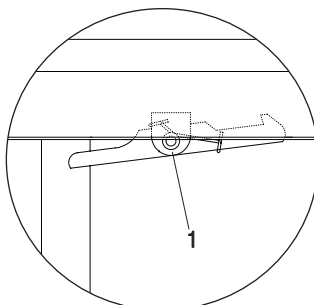

Detail E - Front

LATCH ADJUSTMENT

1. With the table in the use position, apply weight to the unit to hold it against the floor. Using the allen wrench provided, turn the allen bolt, on the inside of the center leg, clockwise to tighten the latch and counter-clockwise to loosen the latch.
2. Test latch by removing weight from the table. Push down on the center of the table and release the latch located on the upper center leg between the table tops. Hold the latch in the released position and slowly lift the table 1 to 2 inches. Remove hand from the latch and with one hand on either table side lift table into a tee position. Spring assists in the center legs will help you lift the table to this position and will maintain the table in the tee position.
3. Push the table back down to the use position, Verify that the table latches lock the unit down by pulling up lightly on the center of the table. The table should rise no more than $\frac{1}{2}$ ".
4. Retest release to verify smooth release.
5. Apply paraffin wax or approved lubricant to the strike area several times per year.

