

Surface Mount Installation



DENALI SERIES™ UPLIGHT

NEEDED FOR INSTALLATION:

By Others



5/64", 9/64" & .050" Allen Wrench

Waterproof Wire Connectors











INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted fixture is HOT! WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS

- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and
- · Follow product label information and instructions
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- · Do not block light emanating from product in whole or part, as this may cause an unsafe condition
- · Never operate the fixture with missing or damaged lens. Lens must be cleaned on regular basis.
- · Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- · All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.

IMPORTANT LISTINGS AND CERTIFICATIONS

· Suitable for wet locations

Proper soil preparation is recommended before installation. See the DIG-IT guide at www.bklighting.com/dig-it for more information.

Faceplate Surface Mount Collar Body 12 Ga. Wire **PVC Housing**

LED Driver

Remote driver installations require inter-connected wiring between the LED and driver (by others). Drivers have specific wiring requirements between these components. Driver manufacturers regularly recommend the following wiring details for such installations:

· Do not exceed 50 foot overall wiring distance using 12 gauge copper wire.

Failure to comply with specific wiring requirements will void product warranty.



DRIVER HOUSING REQUIRED

Please refer to specified remote driver housing documentation for detailed installation instructions.

REMOTE DRIVER HOUSINGS:

HP2RM - HP2 Remote Housing

PM2RM - Universal Power Module 2 Remote

PM2DRM - Universal Power Module 2 Dual Remote

RM - Remote Wall Mount

DRM - Dual Remote Wall Mount







HP2RM

PM2RM & PM2DRM

RM & DRM

∕!\ INSTALLATION

Surface mount uplights are intended for installation in wood, pavers, stone, and other hardscapes.

Not recommended for concrete pour installations.


IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS



40429 Brickyard Drive • Madera, CA 93636 • USA 559,438,5800 • FAX 559,438,5900 www.bklighting.com • info@bklighting.com

RELEASE DATE 12-13-16

REFERENCE NUMBER INS-2318-01

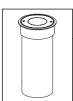


Surface Mount Installation



DENALI SERIES™ UPLIGHT

PROJECT:


TYPE:

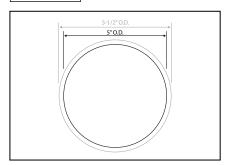

1. Drill 5" diameter hole into mounting surface at uplight installation location as per lighting plan.


Do not exceed surface diameter, installation relies on surface mount collar resting on surface grade. Collar diameter is 5". Surface mount flange is 5-1/2" diameter

Pull secondary wiring from remote driver.

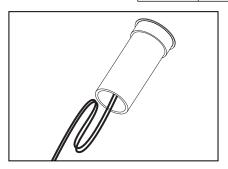


Loop minimum of 6" of wiring inside housing to allow for fixture service.

NOTE: Do not remove temporary cover!

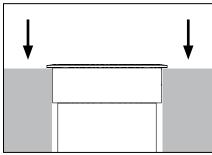


 Place housing into hole. Surface mount collar should rest on finished surface grade.

NOTE: Do not remove temporary cover!

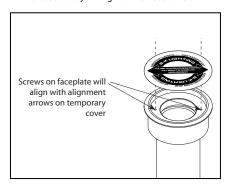


4. Align holes to final installation orientation.
Arrows on temporary cover point towards screw location on faceplate for alignment purposes.


 $\underline{ \bigwedge} \;$ NOTE: Do not remove temporary cover until installation of faceplate.

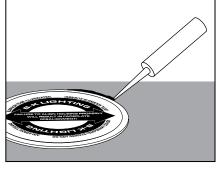


5. Use a silicone based sealant (By Others) between fixture and mounting surface.

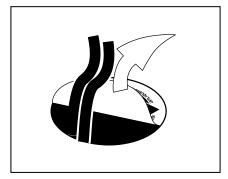

Remove temporary cover and pull out remote wiring.

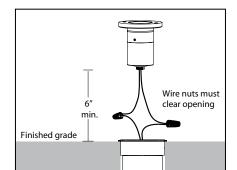


 Access remote wiring inside housing. Make watertight connections using waterproof wire connectors (By Others), matching polarity. Fixture leads are labeled. Wire nuts must clear opening. Insert fixture, wiring and connections into housing. See wiring diagram.

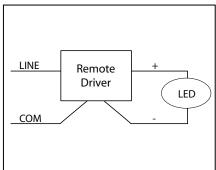

WIRING DIAGRAM

Marning: Fixture leads are labeled. Do not reverse polarity. This will void warranty.

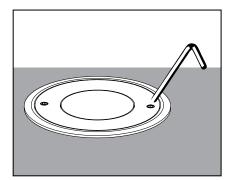

Mount faceplate to collar using (2) #8-32 screws with a 9/64" Allen wrench.

IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS





40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com

12-13-16

REFERENCE NUMBER INS-2318-01



Surface Mount Installation




DENALI SERIES™ UPLIGHT

PROJECT:	
TYPE:	





This product is available with field replaceable components. Exclusive interchangeable OPTIKITS and modular LED components with quick disconnects simplifies upgrades and maintenance when necessary.

Fixture Relamping

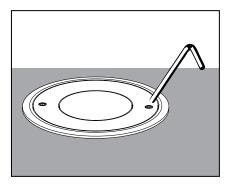


1. Remove faceplate from collar using (2) #8-32 2. Remove fixture from collar. faceplate screws with a 9/64" Allen wrench.

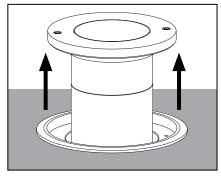


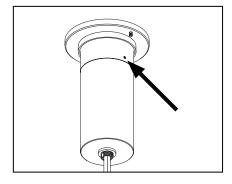


3. Loosen three (3) #8-32 set screws with 5/64" Allen wrench to remove cap from fixture body.

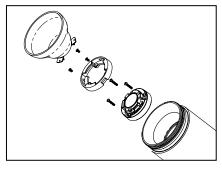

Remove optic by turning to the left and lift up. Unscrew fasteners on optic holder using .050" Allen wrench, grasp optic holder and gently pull upward to remove LED component. Install optic holder onto new LED component and reverse installation onto fixture body.

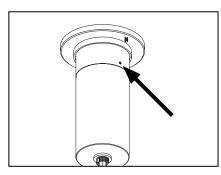

Tighten three (3) #8-32 set screws with 5/64" Allen wrench to replace cap on fixture body.

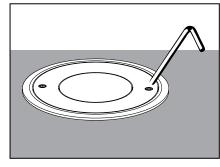

Replace faceplate, then replace fixture in mounting collar. Mount faceplate to collar using (2) #8-32 screws with a 9/64" Allen wrench. Do not overtighten.

IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS







Standard Installation Replacement



LED BOARD / OPTICS Power of X (x58-x63)

TOOLS NEEDED:

By Others



.050" & 5/64" Allen Wrench





INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted fixture is HOT! WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS


- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- · Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens.
 Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.

IMPORTANT LISTINGS AND CERTIFICATIONS


· Suitable for wet locations




This product is available with field replaceable components. Exclusive interchangeable OPTIKITS and modular LED components with quick disconnects simplifies upgrades and maintenance when necessary.

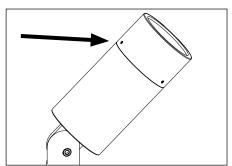


 Use 5/64" Allen wrench to slightly loosen three (3) #8-32 stainless steel set screws to remove cap.

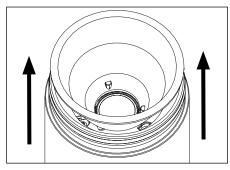


2. Remove optic by pulling gently and lift up.

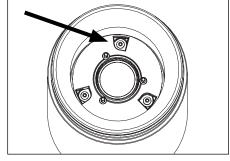


3. Use .050" Allen wrench to loosen three (3) set screws holding optic holder and LED module.

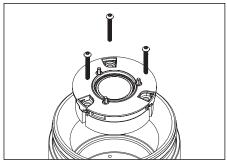

 Gently lift LED module and disconnect from fixture. Install new LED module. Secure set screws through LED module and optic holder using .050" Allen wrench

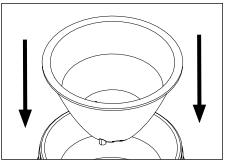

Replace optic by lining tabs with optic holder, then pressing down gently until secured into place.

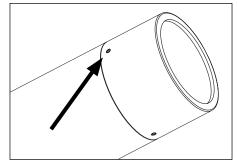

- Place cap on fixture and tighten set screws. Tighten screw to 1/2 in-lbs. Top of screws should sit flush with fixture cap.
- Marning: Do not over tighten set screws. Doing so will compromise O-Ring seal and will void warranty.

 \triangle Do not pull on connector or wiring. Handle with care.

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS



40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com

RELEASED 12-19-16

REFERENCE NUMBER INS000010



Standard Installation Replacement



LED BOARD / OPTICS Power of X (x64-x66)

TOOLS NEEDED:

By Others



.050" & 5/64" Allen Wrench





INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted fixture is HOT! WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS


- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- · Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens.
 Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.

IMPORTANT LISTINGS AND CERTIFICATIONS


Suitable for wet locations




This product is available with field replaceable components. Exclusive interchangeable OPTIKITS and modular LED components with quick disconnects simplifies upgrades and maintenance when necessary.

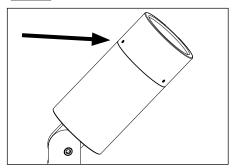


 Use 5/64" Allen wrench to slightly loosen three (3) #8-32 stainless steel set screws to remove cap.

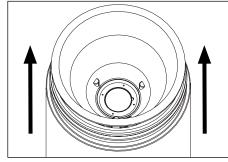

. Remove optic by pulling gently and lift up.

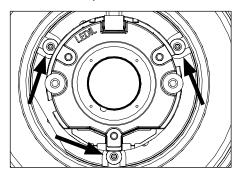


Use .050" Allen wrench to loosen three (3) set screws holding LED module. Gently lift from fixture.

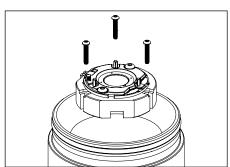


 Gently lift LED module and disconnect from fixture. Install new LED module. Secure set screws using .050" Allen wrench.

Do not pull on connector or wiring. Handle with

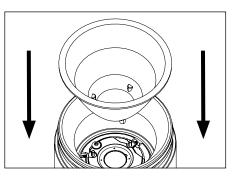

Replace optic by lining notches with optic holder, then pressing down gently until secured into place.

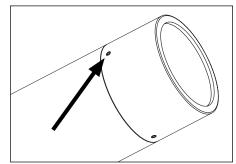

 Place cap on fixture and tighten set screws. Tighten screw to 1/2 in-lbs. Top of screws should sit flush with fixture cap.

Marning: Do not over tighten set screws. Doing so will compromise O-Ring seal and will void warranty.

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS



40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com

RELEASED 12-19-16

REFERENCE NUMBER INS000011