AURA

T-BAR CONTINUOUS ROW INSTALLATION INSTRUCTIONS FOR 2x2, 2x4, 1x4

NOTE: Ensure that the power to the fixture's circuit is turned off.



All fixtures are serviced by one power feed and contain its own driver.



NOTE: T-bar grid must be straight and level for correct installation of continuous rows. T-bar grid must be well supported by wires tied to structure. One wire every 4 feet is recommended for each tee on the side of the run.


PART LIST


- Tiles
- В Fixture
- T-bar grid
- D T-bar tabs
- Security wire (by others)
- Power feed BX cable (by others)
- BX connector

- Knockout plate Driver wires
- Wire nuts
- BX cable (by others)
- BX connector
- Knockout plate
- Center Lens
- Side lens


DIMENSIONS


PRODUCT	FIXTURE LENGTH	FIXTURE WIDTH	T-BAR LENGTH	T-BAR WIDTH
2x2 FIXTURE	24"	23 13/16"	24"	24"
2x4 FIXTURE	48"	47 ⁷ /8"	48"	24"
1x4 FIXTURE	48"	11 ⁷ /8"	48"	12"

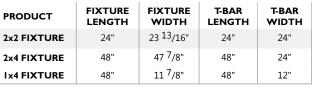

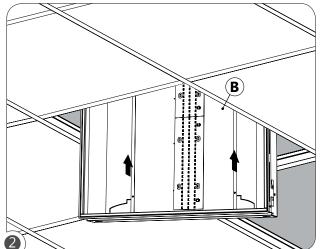


Insert the fixture (B) above the ceiling as shown.

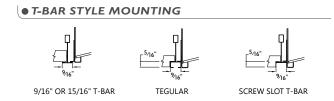


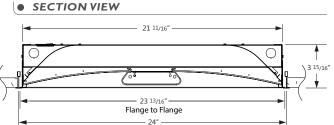


T-bar to T-bar

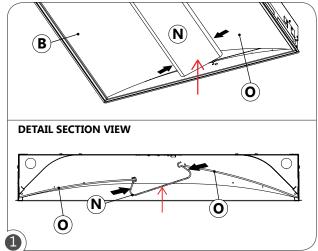

Squeeze lightly on center lens sides (N) while pushing up slightly and rotating lens until one side lens (O) is free, then lower. Pull on side lens (O) to remove optical entirely from fixture (B).

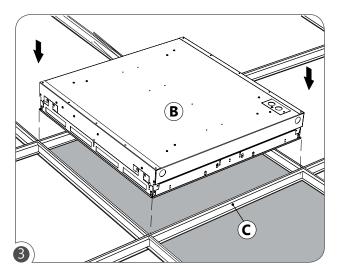

Set the fixture (B) into the T-bar grid (C).

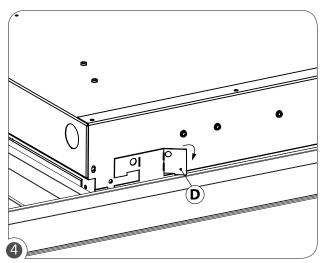

Based on ceiling type (tegular / screw slot T-bar or standard T-bar) bend a tab (D) on each corner of the fixture to provide support. (SEE T-BAR STYLE MOUNTING GRAPHIC).

FILE NAME:AURA.CROWS.INST

April 28, 2017

1.800.263.AXIS [T] 514.948.6272 514.948.6271 www.axislighting.com




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




Page: 1 / 3

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.


T-BAR CONTINUOUS ROW INSTALLATION INSTRUCTIONS FOR 2x2, 2x4, 1x4

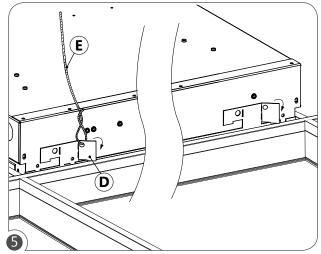


For additional safety a security wire (E) can be attached from the T-bar tabs (D) to the structure above.

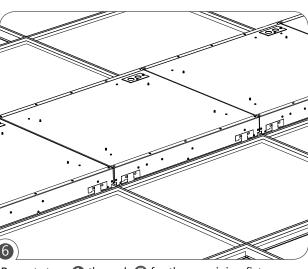


Repeat steps **1** through **7** for the remaining fixtures in the row.

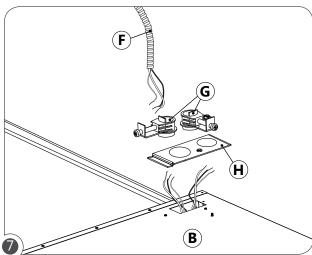


Remove knockout plate (H) from the top of the first fixture (B) and install two BX connectors (G) through the knockout plate (H). Insert the power feed BX cable (F) into BX connector and fasten BX cable by tightening screw.

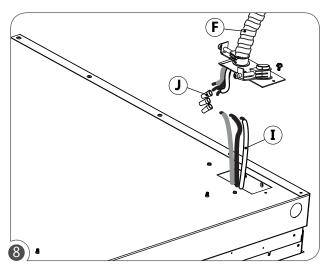

Connect wires from BX cable (F) to wires on driver (I) by using wire nuts (J). Ensure connections comply with local and national electrical codes.

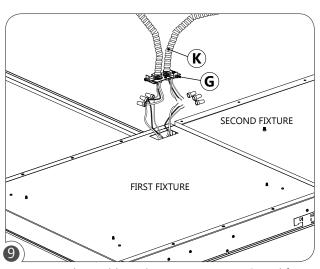

Insert second BX cable (K) into BX connector (G) and fasten by tightening screw. Connect second fixture BX cable wires to wires labeled for NEXT FIXTURE inside the first fixture. A wiring diagram is also provided.

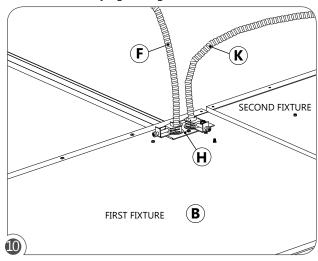

Push connected wires and wire nuts (K) into the first fixture. Reinstall knockout plate (H) onto fixture (B) by hooking tab into hole, and refastening screw to knockout plate and housing.

FILE NAME:AURA.CROWS.INST

April 28, 2017

Page: 2 / 3



I.800.263.AXIS [T] 514.948.6272 [F] 514.948.6271 www.axislighting.com




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.




AURA

T-BAR CONTINUOUS ROW INSTALLATION INSTRUCTIONS FOR 2x2, 2x4, 1x4

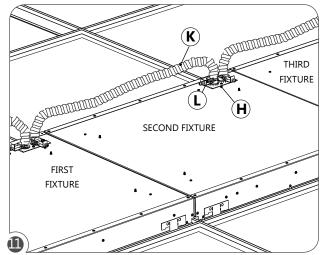


Remove knockout plate (H) from second fixture, and connect BX cable (K) to BX connector (L). Connect BX cable (K) wires to wires in second fixture. Reinstall knockout plate (H) on second fixture.

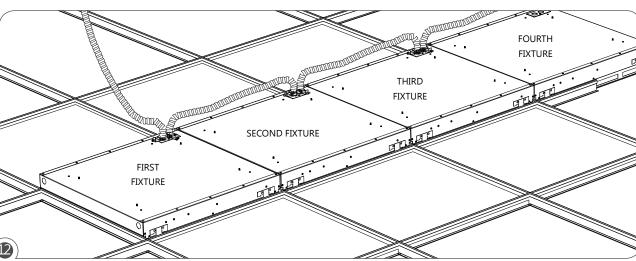


Repeat steps **9** to **11** to install all fixtures in the row.

Make sure that proper alignment is maintained and all fixtures are correctly oriented in relation to other fixtures.

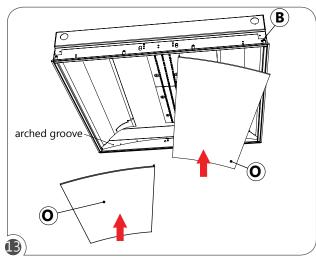

Insert the side lenses (O) into the open area of the fixture (B), ensuring that the lens is seated on the arched groove inside the housing.

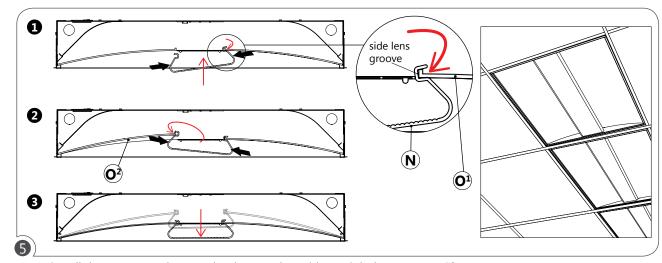

- 1) To install the new center lens (N), hook center lens side on right lens groove (O¹).
- 2) Push and rotate upward until second side of center lens (N) falls on the left lens groove (O2).
- 3) Turn center lens (N) level and pull down.

FILE NAME:AURA.CROWS.INST

April 28, 2017

Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications.

Contact Axis for the latest product information.



I.800.263.AXIS [T] 514.948.6272 [F] 514.948.6271 www.axislighting.com



Page: 3 / 3