

# Assembly Instructions ■

## Avail® Task Chair

Models KIUV72 (Chair) & KIUV73 (Stool)

May 2013



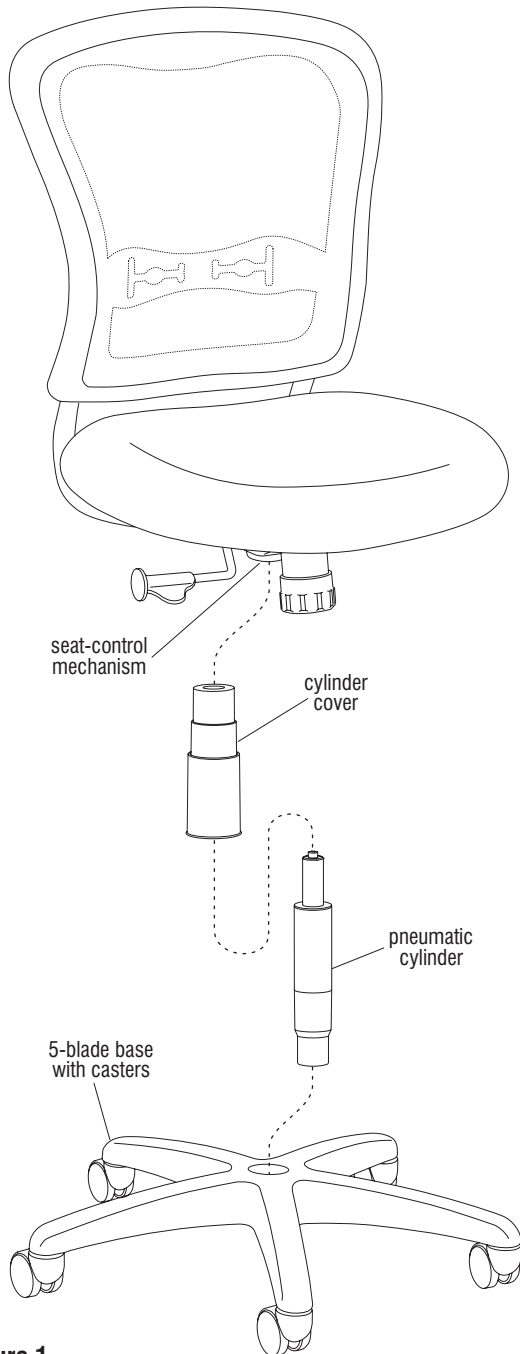


Figure 1

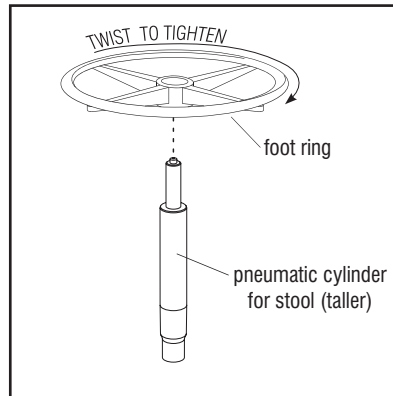

Detail A - Stool Foot Ring

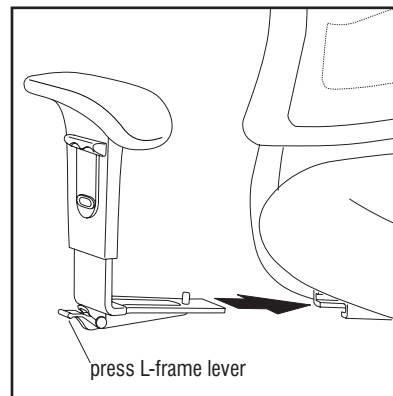

Detail B - Arm Installation

1. Carefully unpack all contents from packaging, then locate and identify the parts shown in Figure 1.
2. Turn the 5-blade base with casters to the upright position onto the floor. Orient the pneumatic cylinder as shown placing the larger end of the cylinder into the hole in the center of the base as illustrated (Figure 1).
3. Place the cylinder cover down over the top of the pneumatic cylinder so the top of the cylinder is visible at least one inch above the top of the cover (Figure 1).
4. Carefully position the seat assembly over the pneumatic cylinder, aligning the hole in the underside of the seat-control mechanism with the top, smaller end of the pneumatic cylinder. Press the seat assembly onto the pneumatic cylinder, then sit on the seat to completely drive the components together. While sitting, actuate the right-hand height-adjust lever to move seat to its lowest height position, then press lever and release seat pressure to adjust up to comfortable sitting height. Failure to do so could result in personal injury (Figure 1).
5. If chair was ordered with KR200 arms, they are installed to each side of the chair by first positioning each arm as illustrated. While depressing the lever on the arm's L-frame support, drive the lower L-frame into the receiver at the underside of the seat until arm can be locked in position (Detail B).

**Note:** Chairs ordered with JR30 and JR39 arms and shipped parcel will require installation of the arms to the chair. See separate instructions included with order.

