


Parts Diagram

Torsion Air™ Nesting Chairs
Armchair

June 2013

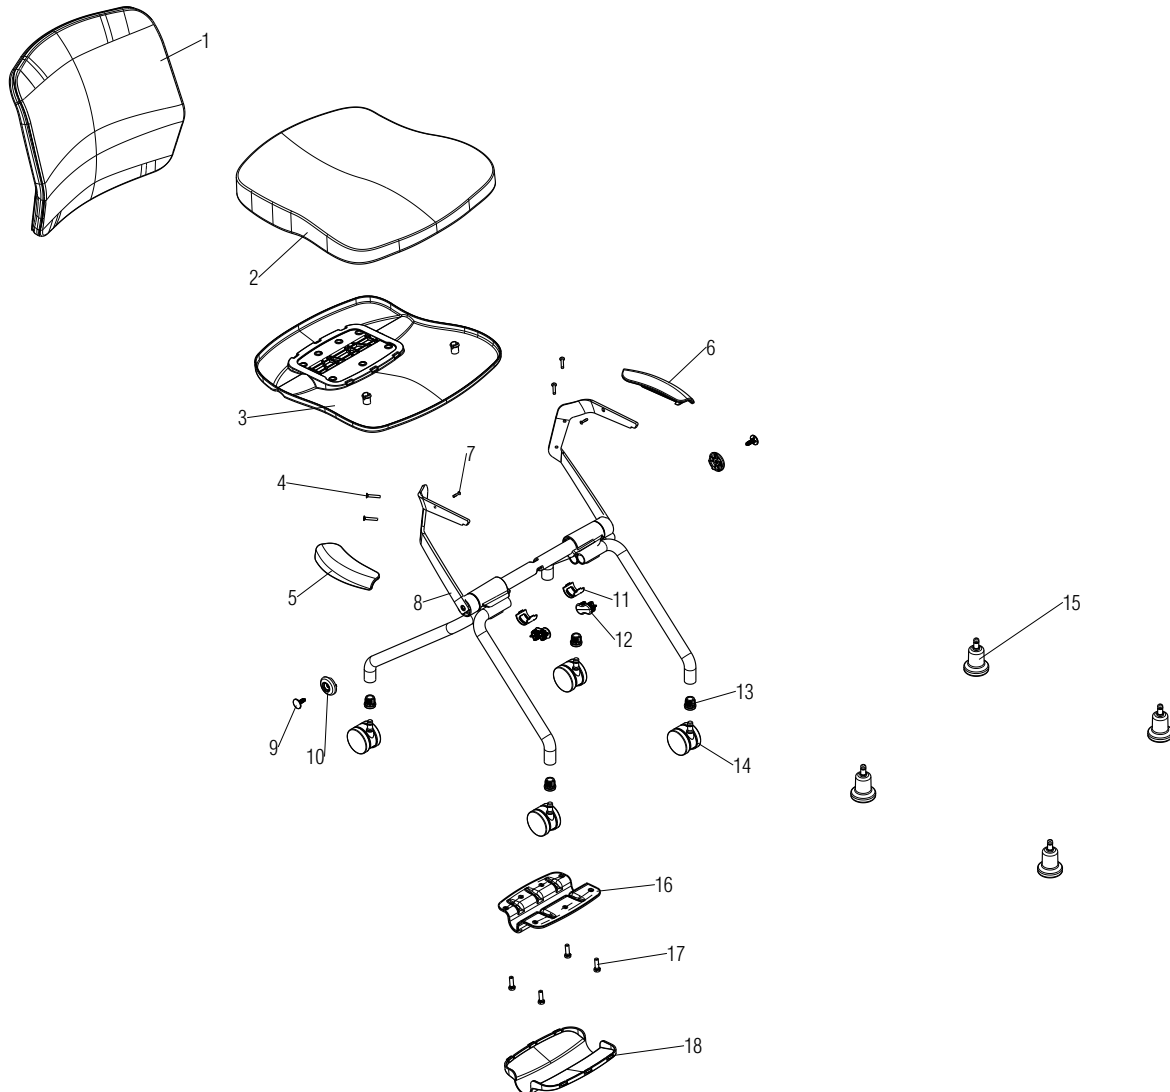

.XX = Select Color
SRN = Special Request Needed

Item	Part Number	Item Description	Qty	Item	Part Number	Item Description	Qty
1	46.3333.XXMH	Backrest, Assembly, Mesh	1	11	PT.06.7007	Bushing, Seat Pivot	2
2	TARC	Torsion Air Replacement Cushion	1	12	46.0385.BL	Cap, Tube End	2
3	46.3344	Shroud, Nesting Chair Seat	1	13	46.0386.BL	Bushing, 13 Gage Tube Caster	4
4	12.9011	Screw, M5 x 30 CLS 10.9 FSHCS Pln	4	14	09.0440.BL	Caster, 60mm Diameter Hard Floor, Black	4
5	46.3338.R	Cap, Arm, Right	1		09.0440.CH	Caster, 60mm Diameter Hard Floor, Chrome	4
6	46.3338.L	Cap, Arm, Left	1		09.0441.BL	Caster, 60mm Diameter Soft Floor, Black	4
7	12.0696	Screw, #8 x 5/8 TX OV HD T-B BLK OX	2	15	10.0150	Glide	4
8	SRN	Weldment, Frame, With Arms	1	16	PT.44.7005.ZN	Plate, Seat Support	1
9	46.3367.BL	Cap, Torsion Mechanism End Cap Center	2	17	13.0332	Screw, 5/16-18 x 1 Hex HD T/C Type F W/ Patch	4
10	PT.06.7012.BL	Cap, Back Support	2	18	PT.06.7006.BL	Cover, Seat Plate	1

