

**we-ef**

**WE-EF LIGHTING USA LLC**

410-D Keystone Drive  
Warrendale, PA 15086  
USA

Tel +1 724 742 0030

Fax +1 724 742 0035

[info.usa@we-ef.com](mailto:info.usa@we-ef.com)

[www.we-ef.com](http://www.we-ef.com)

**we-ef**

**WE-EF LIGHTING USA LLC**


Installation and Maintenance  
Instructions for Surface Mounted Wall Luminaires

**UDN320, UDN330**




## Installation and Maintenance Instructions for Surface Mounted Wall Luminaires:

### UDN320

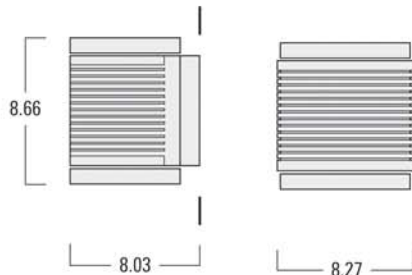

### UDN330

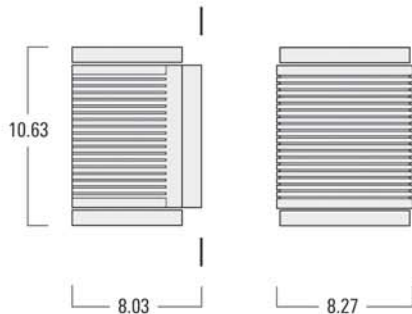

[M/X]



[O/X]



[P/X]



### Light source:

CMH 20 - 70W  
QT 100W

This product should be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. Be sure the electrical supply is off prior to installation.

These fixtures are intended to be mounted over a recessed 4" octagon junction box.

1.) Open the carton and remove the body assembly from the back plate by loosening the (4) set screws found at the top and bottom of the fixture (A).

2.) Check that the electrical supply conforms to the ratings shown on the luminaire label and/or ballast.


3.) Make the electrical connection to the ballast leads. Push the electrical connections into the recessed box.

4.) Confirm the fixture orientation complies with luminaire label and the mounting gasket covers the recessed junction box. Mount the back plate to the structure through the (4) 1/4" diameter mounting holes (fasteners to be provided by installer) (B).

5.) Install the appropriate lamp as marked on the ballast and/or fixture label. The lamp can be adjusted with the screws for different applications (C).

6.) Replace the body assembly and secure into position by tightening the four set screws that were loosened in step one (A).

### Mounting hole dimensions:

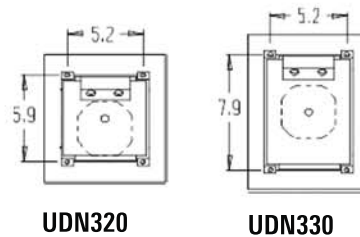

UDN320

UDN330

### Lamp Replacement and Maintenance:

Do not open luminaire while in operation or while mains supply is switched on!

1. Switch off the electrical supply.
2. Open luminaire and clean all exterior surfaces.
3. Replace lamp
4. Check gasket for dirt and damage and clean or replace if necessary.
5. Close luminaire.

Protect our environment: Discard used lamps in compliance with the most recent environmental legislation.

