



**WE-EF LEUCHTEN**  
Installation and Maintenance  
Instructions

Floodlight with clamp  
**FLB141 #6 LED**  
**FLB141 #7 LED**



**Do not open during installation**

This product is factory-sealed.  
Refer to the instructions contained in this document for details.



**Surge Protection**

This product features built-in surge protection circuitry in compliance with applicable standards.


For comprehensive protection of a luminaire installation against lightning and electrical surges, it is essential to cover mains supply and data input lines at the distribution board level, by using respective primary (Type 1) and secondary (Type 2) surge arrestors in compliance with EN61643-11/IEC61643-1.

**Warning**


Ensure that all required surge protection measures are in place and activated prior to luminaire installation. Also, disconnect luminaires before operating high-power devices such as, for example, electrical arc welders.

Floodlight with clamp

FLB141 #6 RAIL66 version

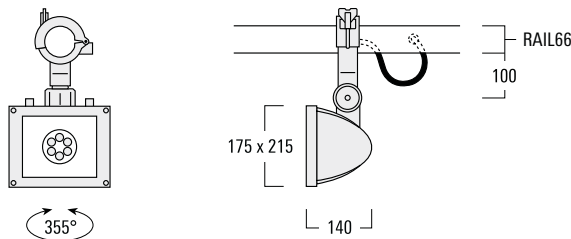

FLB141 #7 Space frame version

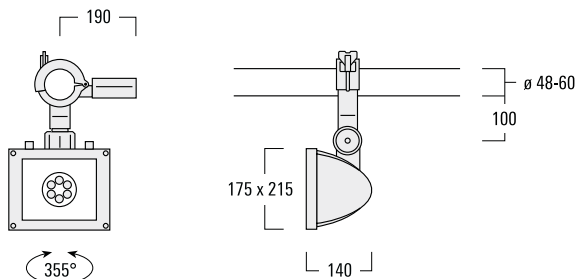

IP66, IK08, Class I, ta = 40°C

Weight	kg
for FLB141 #6 LED	3.9
for FLB141 #7 LED	4.6

Windage area	m <sup>2</sup>
for FLB141 #6 LED	0.040
for FLB141 #7 LED	0.045

Orientation: any

## **Light Source**

LED

## **Maintenance**

Apart from cleaning the product's exterior surfaces, no special maintenance work is required.

Do not use high-pressure cleaners.

In case of component failure due to abnormal circumstances or at end of life, replacement must be carried out by a suitably qualified and trained professional.

**Warning:** Do not open luminaire while mains supply is switched on.

## **Installation**

The product must be installed and maintained by a suitably qualified professional in compliance with latest building/construction and/or electrical regulations and relevant legislation.

**Warning:** Switch off mains electrical supply prior to installing and connecting the luminaire.

**Notice:** If the luminaire is modified by anybody other than the original manufacturer, then the warranty will no longer be valid and shall become the full responsibility of the modifying person/organisation. Claims based on defects attributable to improper installation and/or application, and the consequences thereof, are excluded.


The installation on site must comply with local and/or national health and safety regulations.

## Installation Procedure


### Installation – RAIL66 version

Prior to installing the luminaire, mount and connect the selected RAIL66 mounting system in accordance with relevant installation instructions

- 1) Switch off mains electrical supply.

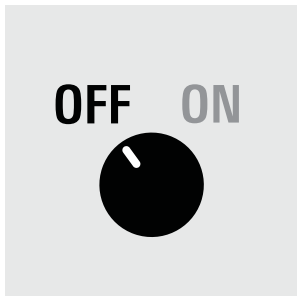


- 2) Check that rating shown on luminaire label conforms with mains electrical supply.

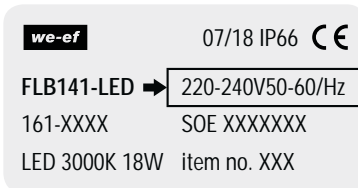


(example)

- 3) Determine desired position of luminaire **A** on rail **X**, dependent on aiming requirements and proximity to a suitable mains outlet **Y**.

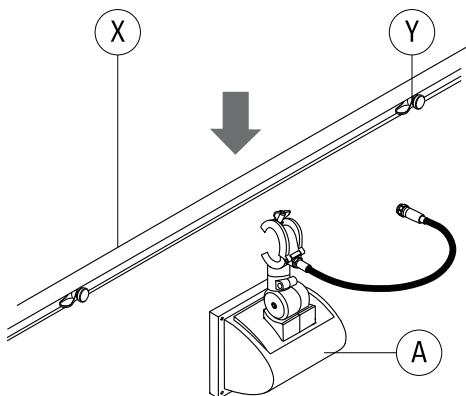


- 4) Attach clamp **B** to rail **X**. Tighten wingnut **C**.

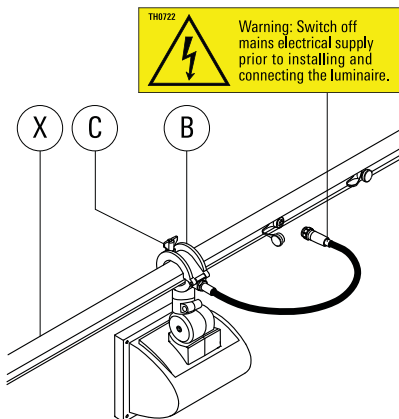


- 5) Remove protective cover **Z** from mains outlet **Y**. Insert in-line connector **G** and tighten.

**Attention:** On any mains outlet **Y'** that is not used, protective cover **Z'** must remain firmly secured. Check and ensure proper fit and tightness.

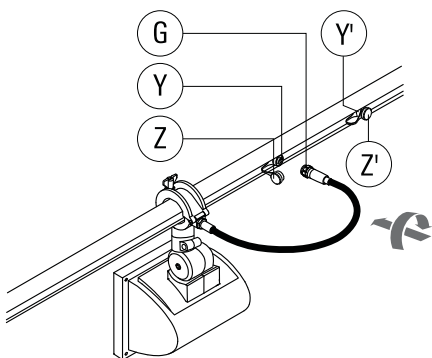


- 6) Loosen screws **H** and **I** slightly. Aim luminaire in desired direction, retighten screws **H** and **I**.

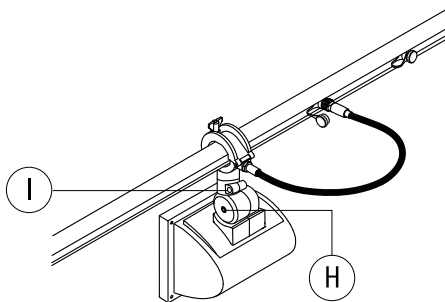


## Installation – Space frame version

Suitable for space frame diameter 48-60 mm.

- 1) Switch off mains electrical supply.

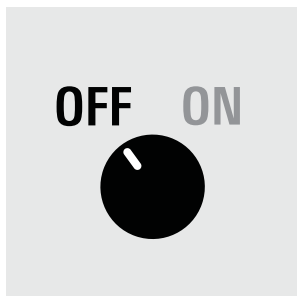


- 2) Check that rating shown on luminaire label conforms with mains electrical supply.

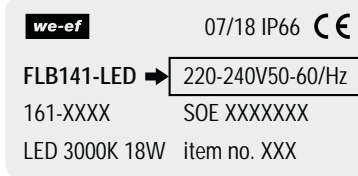


(example)

- 3) Determine desired position of luminaire **A** on space frame **X**, dependent on aiming requirements. Attach clamp **B** to space frame **X**. Tighten wingnut **C**.

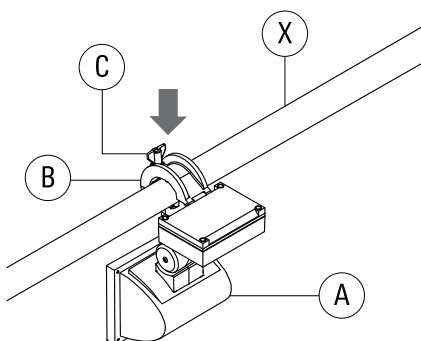

- 4) Detach gear box cover **D** by loosening screws **S**.

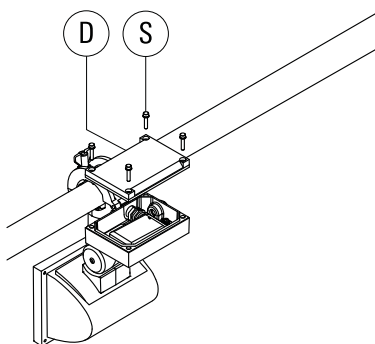

- 5) Feed mains supply cable **E** through cable gland **G** (Fig. I).

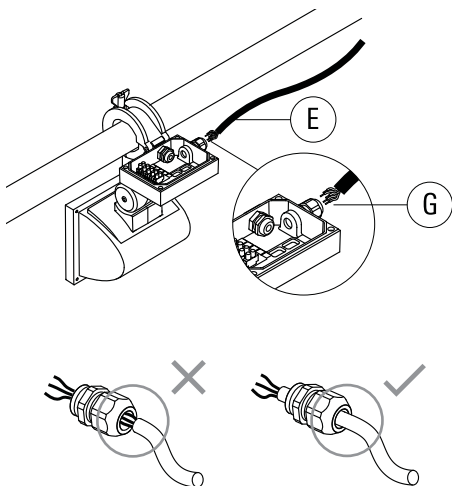



Fig. I

- 6) Connect mains supply cable **E** leads to respective terminals in terminal connector **K**:


a) ON/OFF (L = Phase, N = Neutral,  $\oplus$  = Earthing)

b) 1-10 V/DALI (L = Phase, N = Neutral,  $\oplus$  = Earthing, DA/DA = DALI control line, D-/D+ = 1-10 V control line).


Tighten cable gland **G**.

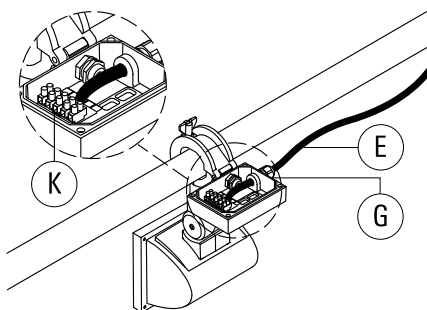

- 7) Reposition gear box cover **D** and secure in position by retighten screws **S**.

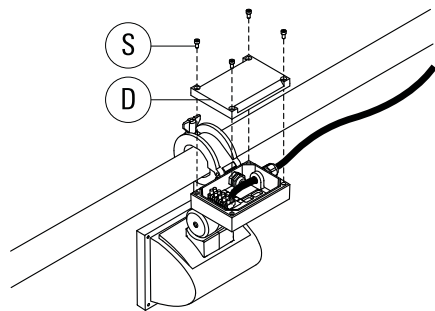

- 8) Loosen screws **H** and **I** slightly. Aim luminaire in desired direction, retighten screws **H** and **I**.

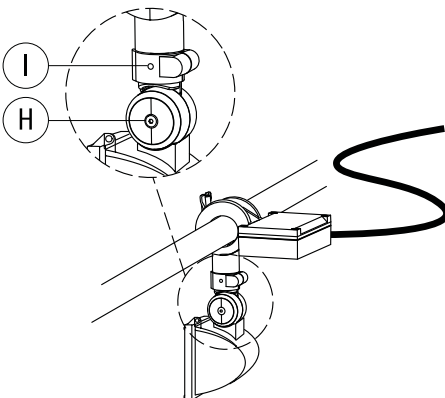



The logo for 'we-ef' is displayed in a bold, white, sans-serif font against a solid black rectangular background.

[www.we-ef.com](http://www.we-ef.com)

**WE-EF LEUCHTEN**

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

[info.germany@we-ef.com](mailto:info.germany@we-ef.com)

**WE-EF LIGHTING**

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

[info.asiapacific@we-ef.com](mailto:info.asiapacific@we-ef.com)

**WE-EF LUMIERE**

France

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

[info.france@we-ef.com](mailto:info.france@we-ef.com)

**WE-EF LIGHTING**

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

[info.australia@we-ef.com](mailto:info.australia@we-ef.com)

**WE-EF HELVETICA**

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

[info.switzerland@we-ef.com](mailto:info.switzerland@we-ef.com)

**WE-EF LIGHTING**

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

[info.usa@we-ef.com](mailto:info.usa@we-ef.com)

**WE-EF LIGHTING**

United Kingdom


Tel +44 844 880 5346

Fax +44 844 880 5347

[info.uk@we-ef.com](mailto:info.uk@we-ef.com)

TO9248W0519 © WE-EF 2019

Technical specifications are  
subject to change.

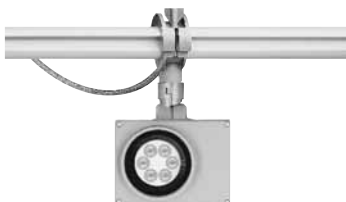

**WE-EF LEUCHTEN**  
Installation and Maintenance  
Instructions

**RAIL66**  
Projector and Floodlight  
Mounting System


Projector and Floodlight Mounting System

RAIL66




Versatile mounting system, developed in conjunction with and engineered for a dedicated range of WE-EF luminaires. IP66, Class I,  $t_a \leq 40^{\circ}\text{C}$ . Suitable for both interior and exterior applications.


RAIL66/UNIVERSAL

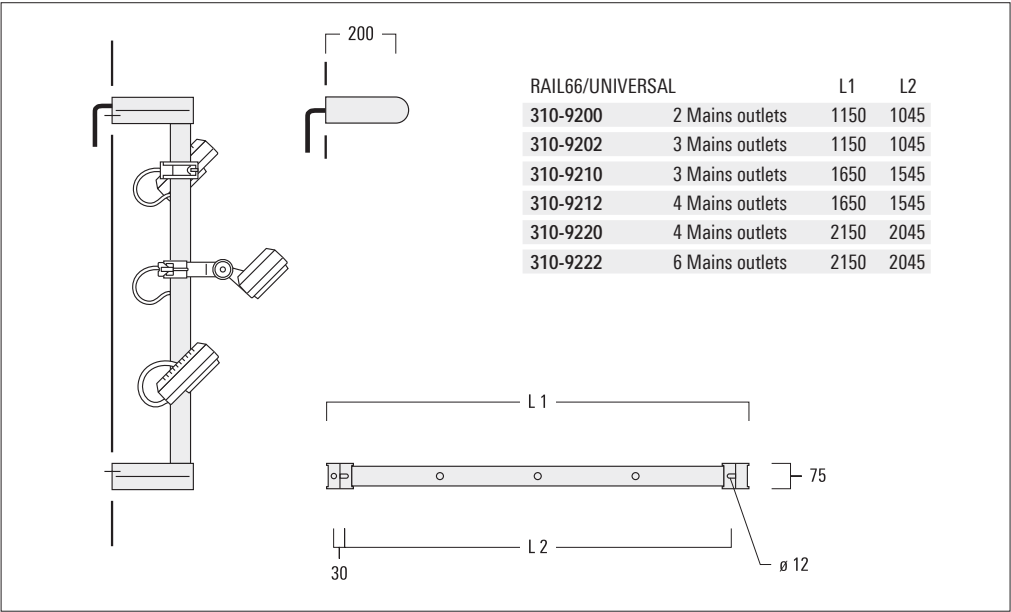

RAIL66/CANTILEVER

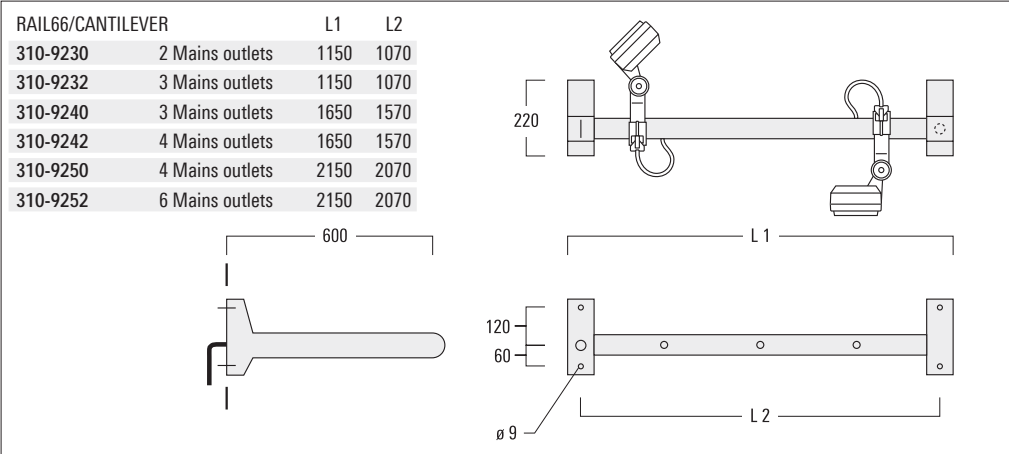

RAIL66/MOBILE

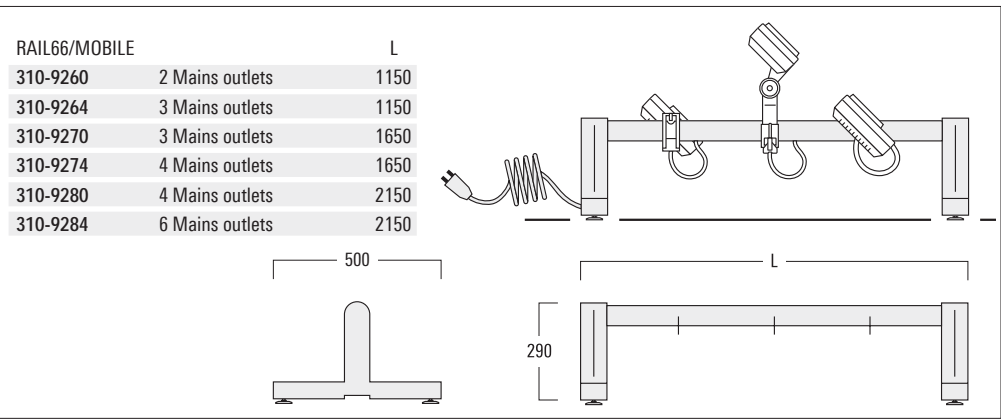

## **Installation**

The product must be installed and maintained by a suitably qualified person in compliance with the latest applicable regulations and relevant legislation.

Claims based on defects attributable to improper installation, application, operation and/or any modification carried out by the purchaser or third parties, and the consequences thereof, are excluded.

RAIL66 versions may be mounted to a variety of surfaces. Care must be taken to ensure that mounting is appropriate to prevailing site conditions, including structural and wind loads etc.

## **Luminaire Installation**

Refer to separate, dedicated installation instructions.

## Installation Procedure - RAIL66/UNIVERSAL

- 1) Switch off the mains electrical supply.
- 2) Remove covers **A** by releasing screws **B**.
- 3) Check that rating shown on product label conforms with mains electrical supply.
- 4) Determine positions for fixing bolts **C**. Drill relevant holes **D** and insert nylon plugs **E**.  
**Warning:** Make sure not to damage any electric cable, water pipe or other devices while drilling holes.
- 5) Set and fix rail assembly **X** in position. Tighten bolts **C**.
- 6) Feed mains supply cable **F** through cable gland **G**. Tighten cable gland **G**.
- 7) Connect mains supply leads to respective terminals in terminal connector **H** (N = Neutral, L = Phase,  $\oplus$  = Earthing).
- 8) Ensure that all surfaces are clean and dry, then


reposition covers **A**. Tighten screws **B** in a criss-cross pattern for proper gasket compression. Pay particular attention to equal tightness.

- 9) For luminaire installation, see overleaf, dedicated installation instructions.


**Attention:** Check and ensure proper fit and tightness of protective covers **Z'** on mains outlets **Y'**. Remove cover(s) only when installing luminaire(s).

**Note:** When installing optional mounting accessories, refer to Fig. I and II for guidance.

## Installation - RAIL66/UNIVERSAL

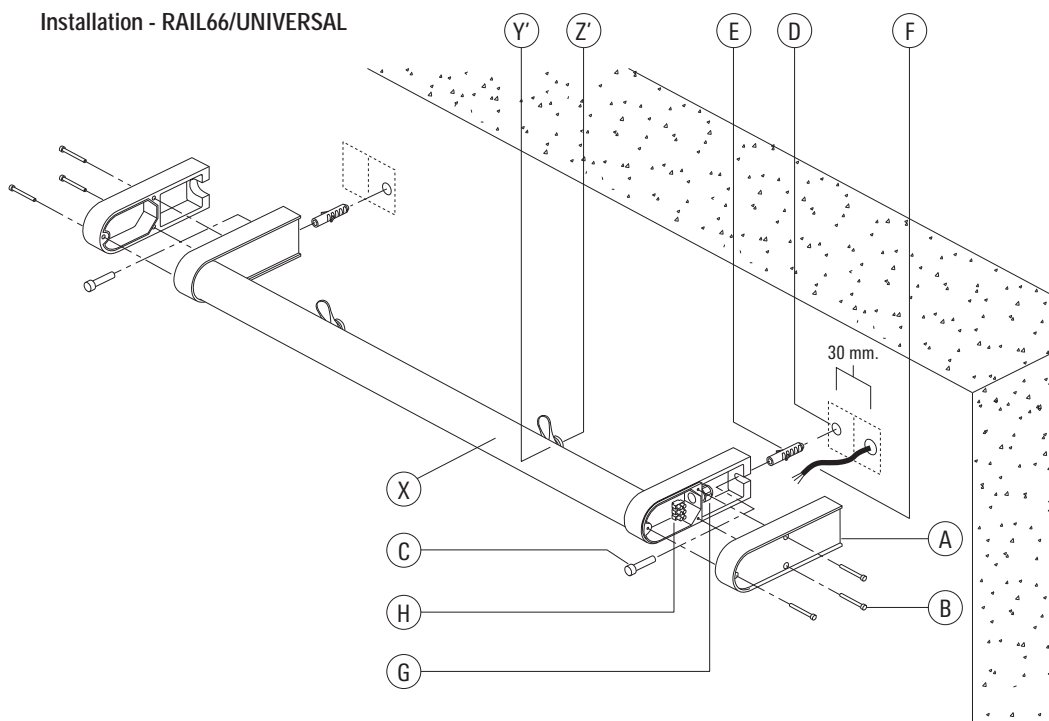

Optional Mounting Accessories for RAIL66/UNIVERSAL

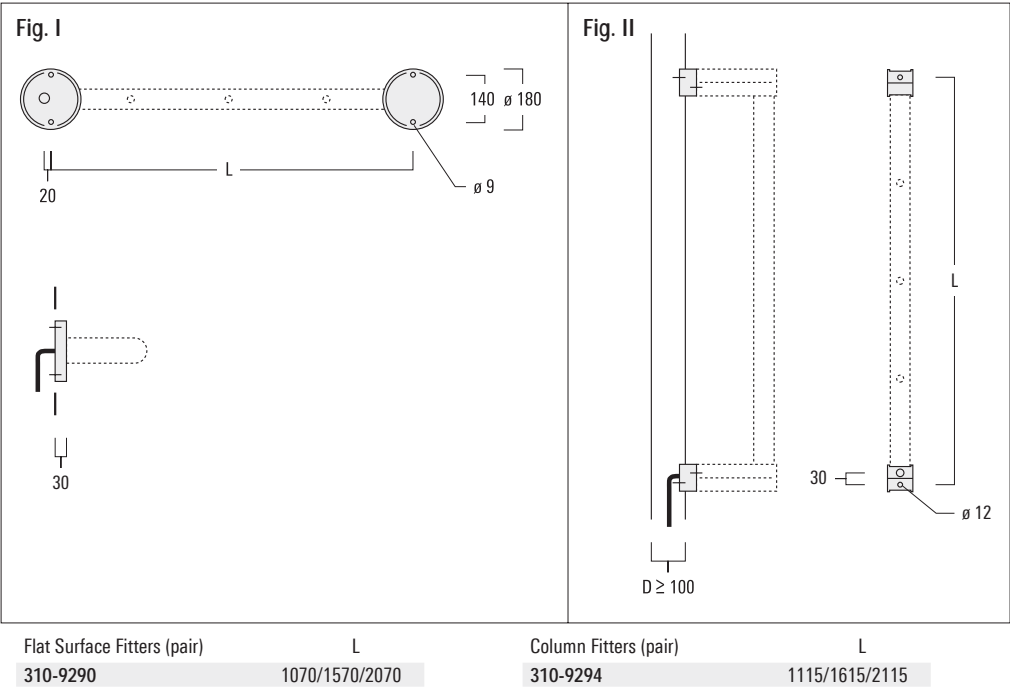

## Installation Procedure - RAIL66/CANTILEVER

- 1) Switch off the mains electrical supply.
- 2) Remove covers **A** by releasing screws **B**.
- 3) Check that rating shown on product label conforms with mains electrical supply.
- 4) Remove wall flanges **C** by releasing screws **D**.
- 5) Determine positions for fixing bolts **E**. Drill relevant holes **F** and insert nylon plugs **G**.

**Warning:** Make sure not to damage any electric cable, water pipe or other devices while drilling holes.

- 6) Feed mains supply cable **H** through cable gland **I**, while setting and fixing wall flanges **C** in position.

**Attention:** Bolts **E** should only be fully tightened after alignment has been confirmed.

- 7) Connect mains supply leads to respective terminals in terminal connector **J** (N = Neutral, L = Phase, ⊕ = Earthing).

- 8) Slide rail assembly **X** carefully over wall flanges **C**. Pay particular attention to tension-free alignment of terminal connector **J**. Tighten screws **D** in a criss-cross pattern for proper gasket compression, evenly.

**Warning:** In the process, do not apply any load to rail assembly **X**.


- 9) Tighten bolts **E**.

- 10) Reposition covers **A** and secure in position by tightening screws **B**.

- 11) For luminaire installation, see overleaf, dedicated installation instructions.

**Attention:** Check and ensure proper fit and tightness of protective covers **Z'** on mains outlets **Y'**. Remove cover(s) only when installing luminaire(s).

## Installation - RAIL66/CANTILEVER

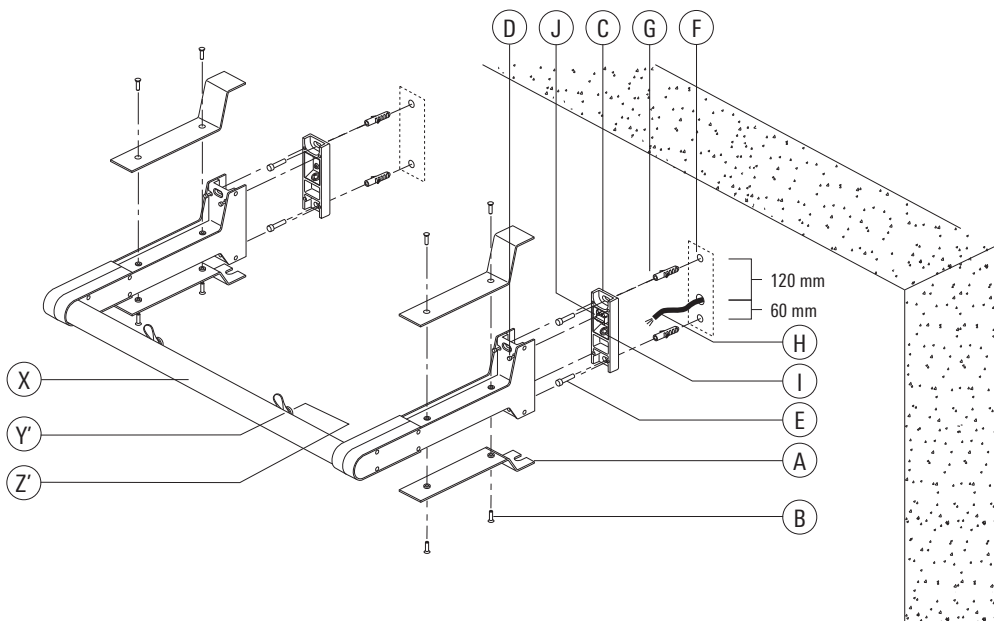



### Installation Procedure - RAIL66/MOBILE


- 1) Check that rating on product label conforms with mains electrical supply.
- 2) For mounting on uneven surfaces, each foot **A** can be adjusted and locked with counter nut **B**.
- 3) For luminaire installation, see overleaf, dedicated installation instructions.

**Attention:** Check and ensure proper fit and tight-

ness of protective covers **Z'** on mains outlets **Y'**.  
Remove cover(s) only when installing luminaire(s).

**Note:** Surface temperature of luminaires attached to RAIL66/MOBILE may exceed locally specified limits. When using the product in non-secure space, it may be advisable to contact your local WE-EF representative for support and information.

### Installation - RAIL66/MOBILE

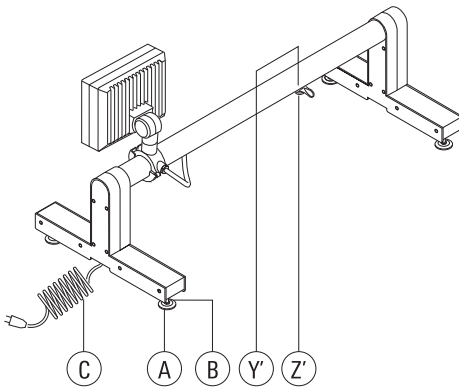



[www.we-ef.com](http://www.we-ef.com)

#### **WE-EF LEUCHTEN**

Germany

Tel +49 5194 909 0

Fax +49 5194 909 299

[info.germany@we-ef.com](mailto:info.germany@we-ef.com)

#### **WE-EF LIGHTING**

Thailand

Tel +66 2 738 9610

Fax +66 2 175 2174

[info.asiapacific@we-ef.com](mailto:info.asiapacific@we-ef.com)

#### **WE-EF LUMIERE**

France

Tel +33 4 74 99 14 44

Fax +33 4 74 99 14 40

[info.france@we-ef.com](mailto:info.france@we-ef.com)

#### **WE-EF LIGHTING**

Australia

Tel +61 3 8587 0444

Fax +61 3 8587 0499

[info.australia@we-ef.com](mailto:info.australia@we-ef.com)

#### **WE-EF HELVETICA**

Switzerland

Tel +41 22 752 49 94

Fax +41 22 752 49 74

[info.switzerland@we-ef.com](mailto:info.switzerland@we-ef.com)

#### **WE-EF LIGHTING**

United States of America

Tel +1 724 742 0030

Fax +1 724 742 0035

[info.usa@we-ef.com](mailto:info.usa@we-ef.com)

#### **WE-EF LIGHTING**

United Kingdom

Tel +44 844 880 5346

Fax +44 844 880 5347

[info.uk@we-ef.com](mailto:info.uk@we-ef.com)

T09149W0618 © WE-EF 2018

Technical specifications are  
subject to change.