



Rectangular Column Leg
with base

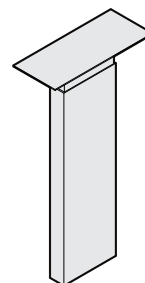

Rectangular Column Leg
without base

If you have a problem, question, or request, call
your local dealer, or Steelcase Line 1 at
888.STEELCASE (888.783.3522)
for immediate action by people who want to help you.
(Outside the U.S.A., Canada, Mexico, Puerto Rico,
and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com
© 2004 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.
Printed in U.S.A.

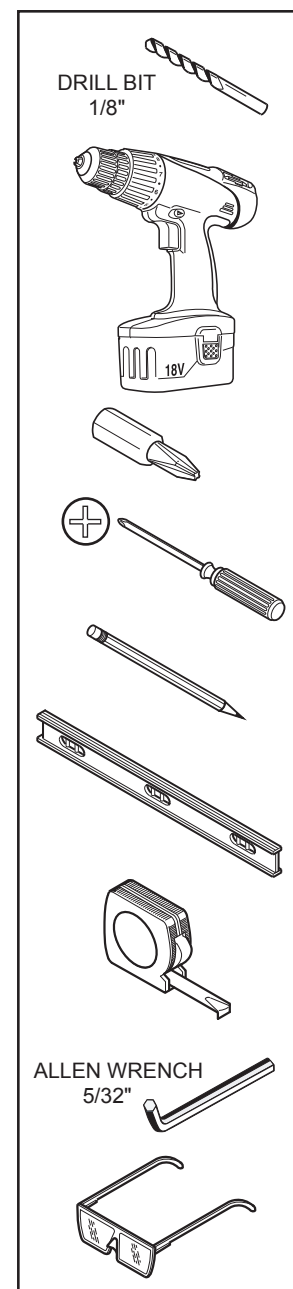


1. Carefully turn worksurface over onto clean, soft surface.

2. Determine location of base.
NOTE: base may be located within 21" from end of worksurface, but must be centered side to side.

3. Lower base into place.

4. Secure with screws provided.

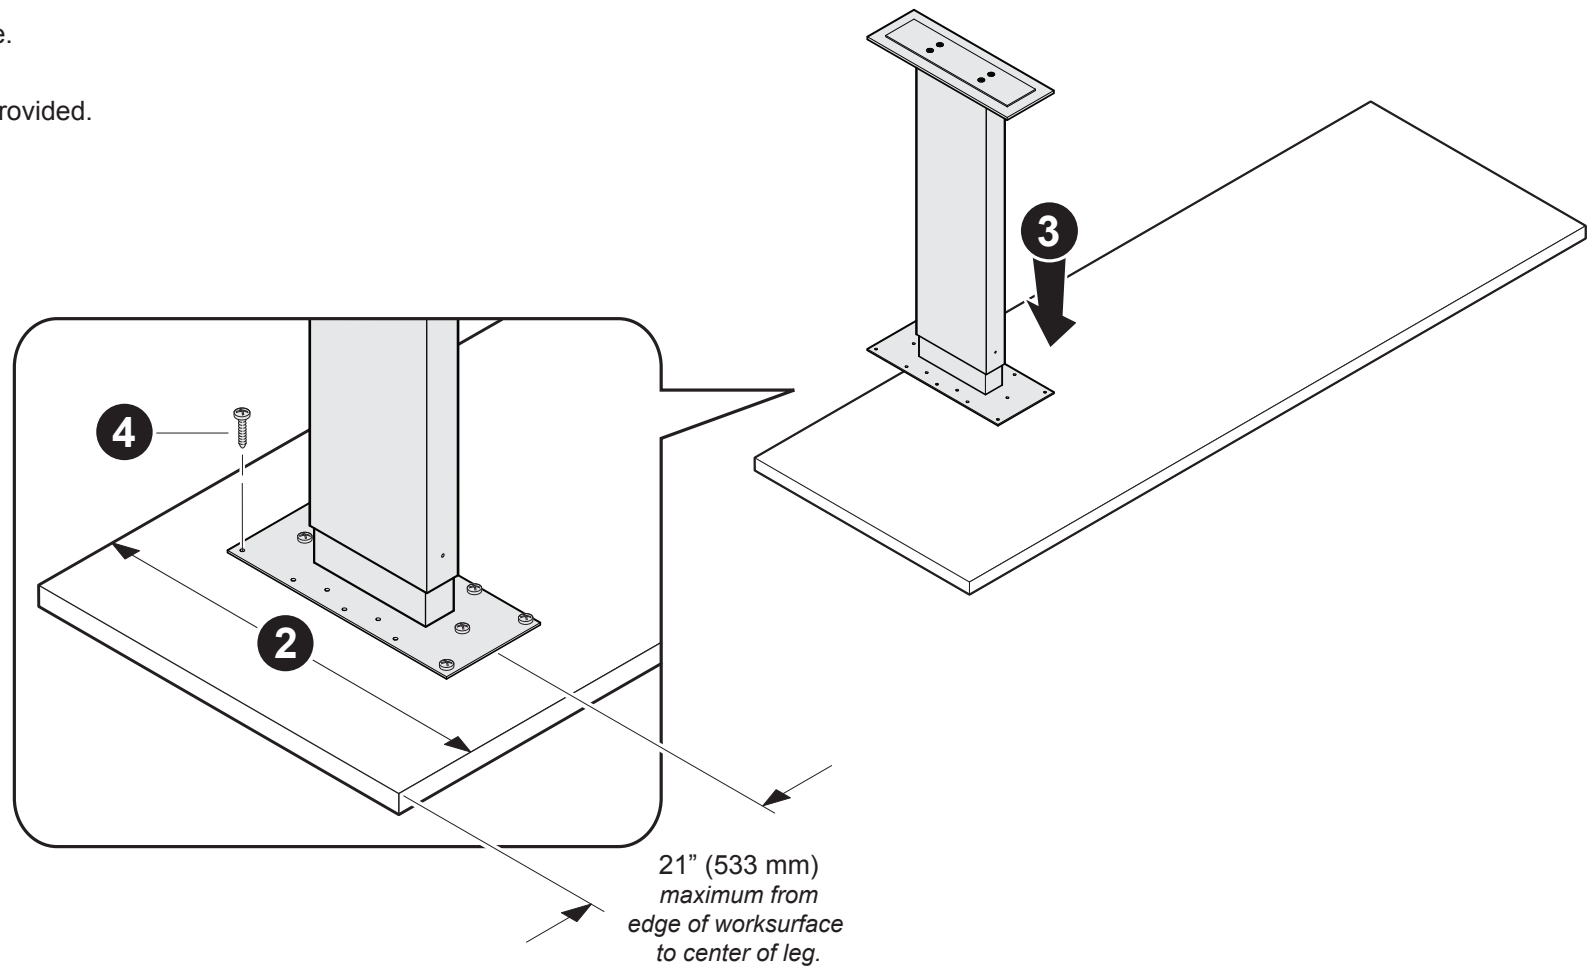


5. Adjust column height vertically:

- A) raise or lower outer cover to desired height.*
- B) retighten cone-point set screw.*

6. Carefully flip assembly over and install onto cabinet.

7. Refer to step 5 if any height adjustment is required.

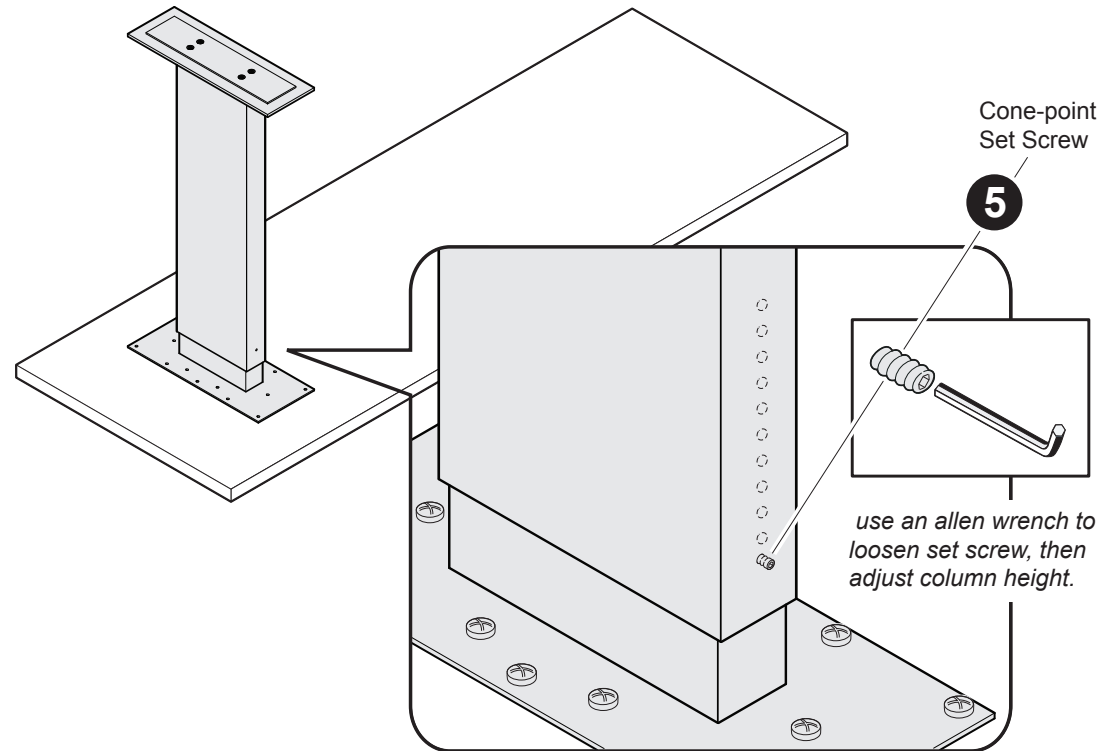

The inner leg has a vertical row of dimples that allow adjustment by 1/4" increments up to 2-1/4" maximum.

