






If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)  
Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2014 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.

Printed in U.S.A.

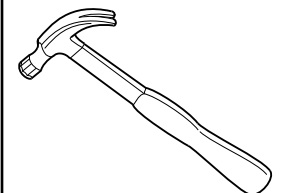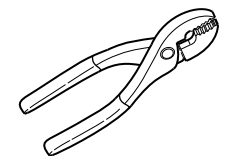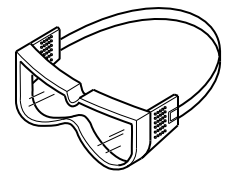

**1.** Lay chair on its side.

**2.** Hit bottom of the cylinder with a hammer (2a) while pulling forward on the chair base (2b).

**TIP:** Turn hammer sideways as to not hit cylinder rod.

**3.** Remove chair base.

**4.** Remove casters and install on replacement base.

**Hint:** If pintle is stuck in base, remove with pliers.

**5.** Place new base onto cylinder. Turn chair over and sit in it to complete chair base installation.

**NOTE:** DO NOT hit the inner cylinder rod with the hammer. Hit the outer rim of the cylinder.

