

## 465 Think® Chair (New) Seat and Seat Slide Bearing Replacement





If you have a problem, question, or request, call  
your local dealer, or Steelcase Line 1 at  
**888.STEELCASE** (888.783.3522)  
for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico,  
and the U.S. Virgin Islands, call: 1.616.247.2500)



Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2014 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.

Printed in U.S.A.

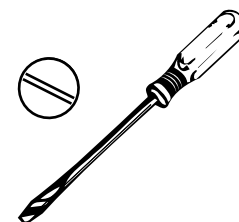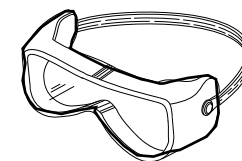

- 1.** Press seat slide handle (at front of seat) and pull seat as far forward as it will go.
- 2.** Tip the chair onto its right side.
- 3.** Locate the seat out stop feature.
- 4.** Insert a screwdriver below the out stop feature and push it (up) toward the seat.
- 5.** Simultaneously press the seat slide handle and pull forward on the seat.

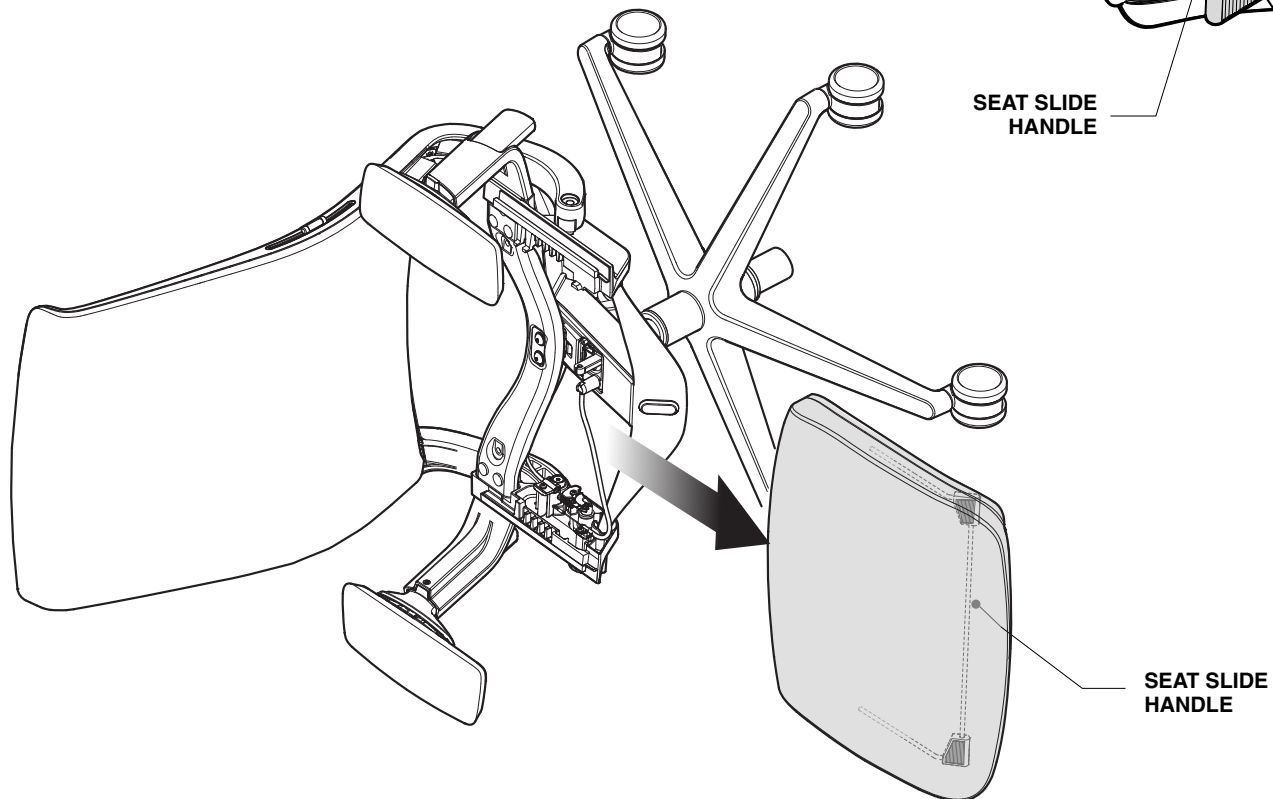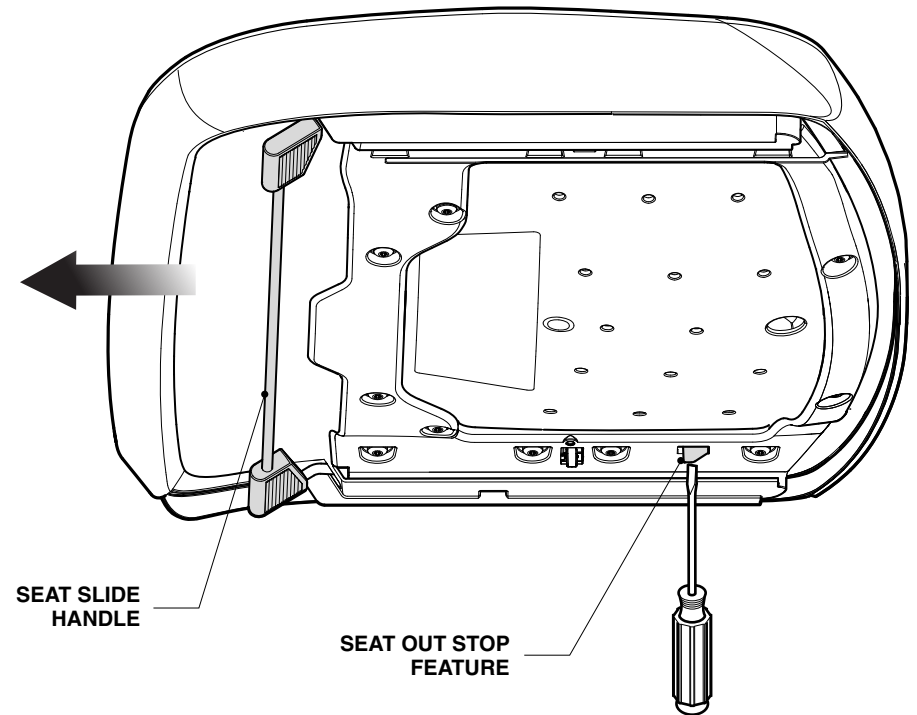

**6.** Set chair upright. Locate black seat slide bearings at outer edge of control mechanism. Note that the slide bearings are handed and the thin, short end points forward.

**7.** Note replacement slide bearings have a small snap on top, inner edge. Unsnap the old slide bearings and pull them off the sides. Snap new bearings into position.

**8.** Assemble new seat onto chair by aligning slots in the back of the seat with the new slide bearings. Push seat from the front while simultaneously pressing the seat slide handle. Push the seat with enough force to move beyond the seat out stop feature. Once positioned, press the seat slide handle and pull the seat forward to verify the seat is properly assembled to the chair.

