

Priority

Adjustable Height Column Leg

Tools Required

- None

Installation

Note: Typical installation on the 3rd position (27 $\frac{3}{4}$ " undersurface) will align the worksurface with other furniture units. Legs with mobile option are not applicable for 36" round or 24" x 48" elliptical tops. Specify static model for these tops.

1. The height-adjustable column leg can be ordered either with levelers, or with casters depending if it is to be static or mobile leg assembly.
2. Thread the caster, or leveler assembly into the threaded insert located in the bottom of the tube leg.
3. The leg adjusts up and down using a spring-loaded ratchet catch. The leg adjusts through all 16 positions before it can be compressed downward.

Figure A

