


# Vox®

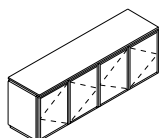

Tel 800 668 9318  
Tel 416 298 5700  
Fax 416 298 9535  
mail@nienkamper.com  
www.nienkamper.com

## VOX VISION® CREDENZA VOX BOARDROOM CREDENZA INSTALLATION GUIDE

### HARDWARE PARTS LIST

---



#### HEX SOCKET BIT - 4 mm

For height adjusting cabinets.  
For joining multiple segment cabinets.  
For fastening tops to cabinets.



#### HEX SOCKET BOLT

4 mm - 1/4" x 20 x 1 1/4".  
For fastening tops to cabinet.  
For joining multiple segment cabinets.



#### SHELF PINS

Inserted into cabinet gable for adjustable shelf support.

## LEVEL CABINETS



1

- Position cabinets in desired location.
- Credenzas with adjustable levellers can be easily adjusted from the interior of the cabinet.
- Using the bit provided, insert through the holes in the base and adjust up or down as required.

## REMOVING/INSTALLING DRAWERS

2



- Drawers may need to be removed to allow access for fastening cabinets or tops.
- Simply compress the orange slide lock (under the drawer) and lift the drawer out.
- To replace, position over slides and pull slide forward until locked.

## ASSEMBLE CABINETS



3

**Note: Large credenzas ship in multiple sections.**

- Once components have been positioned and levelled, hole locations will align with thread locations between cabinets.
- Install 1/4" x 20 x 1 1/4" hex socket bolts.

## INSTALL TOP

4



- Position tops onto credenza.
- Align threaded hole locations with holes in cabinet sub top.
- Install 1/4" x 20 x 1 1/4" hex socket bolts.

## INSTALL ADJUSTABLE SHELVES



5

- Insert shelf pins in desired location.
- Position shelf in cabinet.


## INSTALLING REFRIGERATOR

6



- Install glass shelf stored inside refrigerator before placing in credenza.
- Position refrigerator in opening.
- Pull power cable through the grommet in the back of the cabinet.
- Center and push refrigerator into cabinet.

## EQUIPMENT STORAGE- SLIDING RAIL

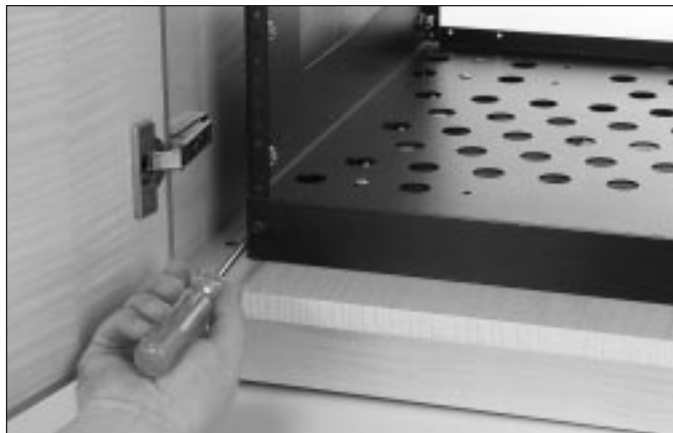

7

- To install equipment - remove the plastic locking strip at the base of the rack.
- Pull the rack out of the cabinet.
- The locking strip may be re-installed to secure equipment.

## EQUIPMENT STORAGE- ROTATING SWING FRAME

8



- Equipment can be easily installed by rotating swing frame out of the cabinet.
- Loosen thumb screw knob until frame is free.

9



- Frame can be completely removed by loosening pivot pin and depressing.


## ADJUSTING DOORS

### REMOVING THE COVER PLATE



- To begin adjusting the door, remove the cover plate from the hinge.
- Cover plates are easily pulled off and replaced without tools.


### HEIGHT ADJUSTMENT

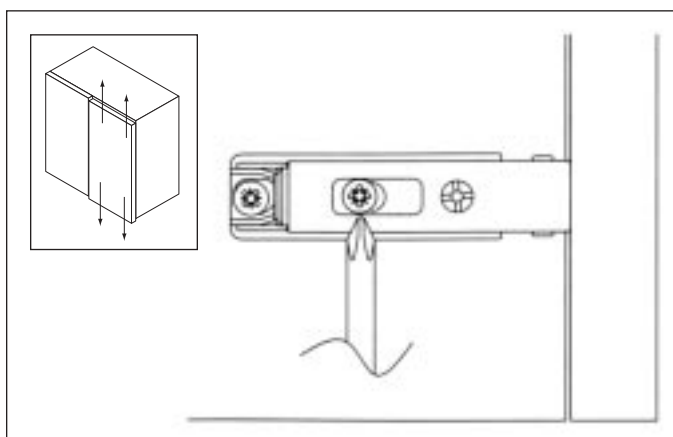

- Adjusting this screw moves the door vertically (plus or minus 2.0 mm).

### SIDEWAYS ADJUSTMENT


10 11

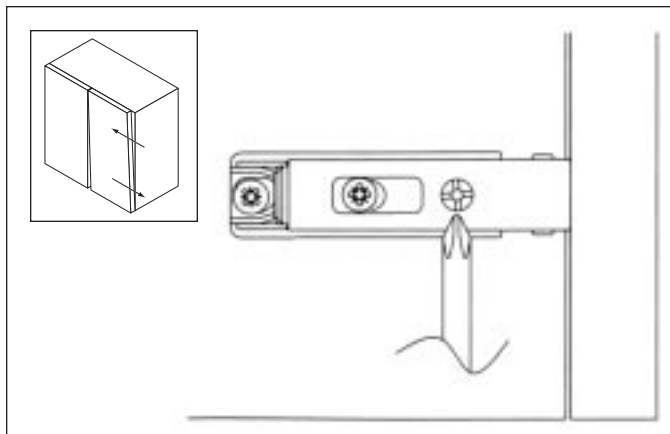

- Adjusting this screw moves the door sideways to adjust the gap between doors (minus 0.5 mm to plus 5.0 mm).

### DEPTH ADJUSTMENT

12 13

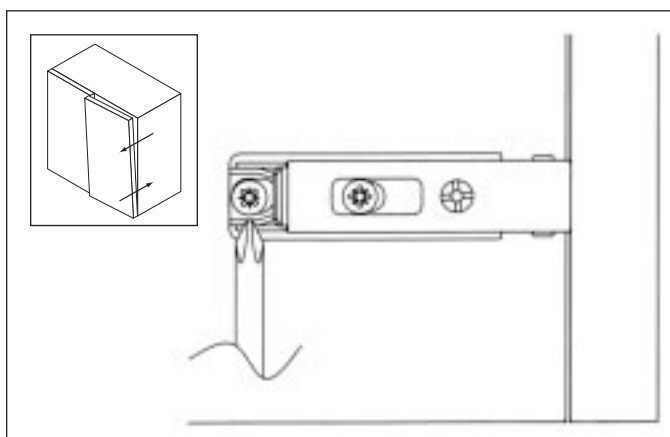


- Adjusting this screw moves the door in or out from the cabinet (minus 0.5 mm to plus 2.8 mm).


## ATTACHING/REMOVING HINGES



- Remove metal cover plate on the hinge by carefully prying it off with a screwdriver.
- Locate the lugs on the mounting plate into the recesses beneath the arm.

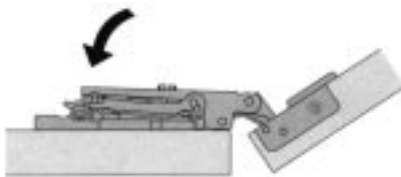

- Gently rotate the door in the direction shown - then press lightly on the end of the arm to secure the catch.

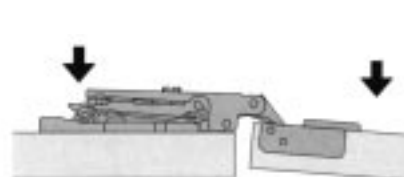

- To remove the hinge from the mounting plate, press gently in the places shown by the arrows.