




# MFWSF100 / MFWSF120 MOUNTING FRAME INSTRUCTIONS

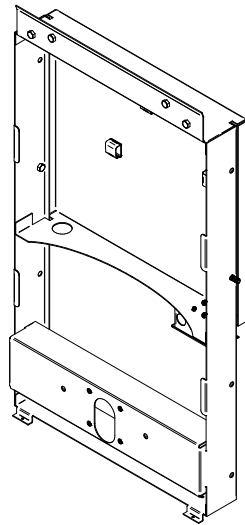


**MFWSF120**

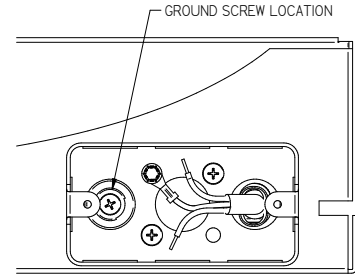

OUTLET BOX

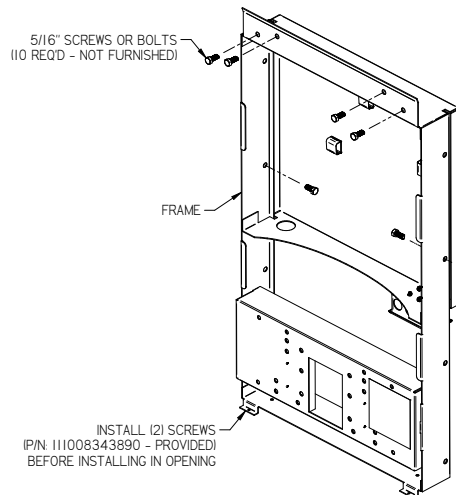

**MFWSF100**

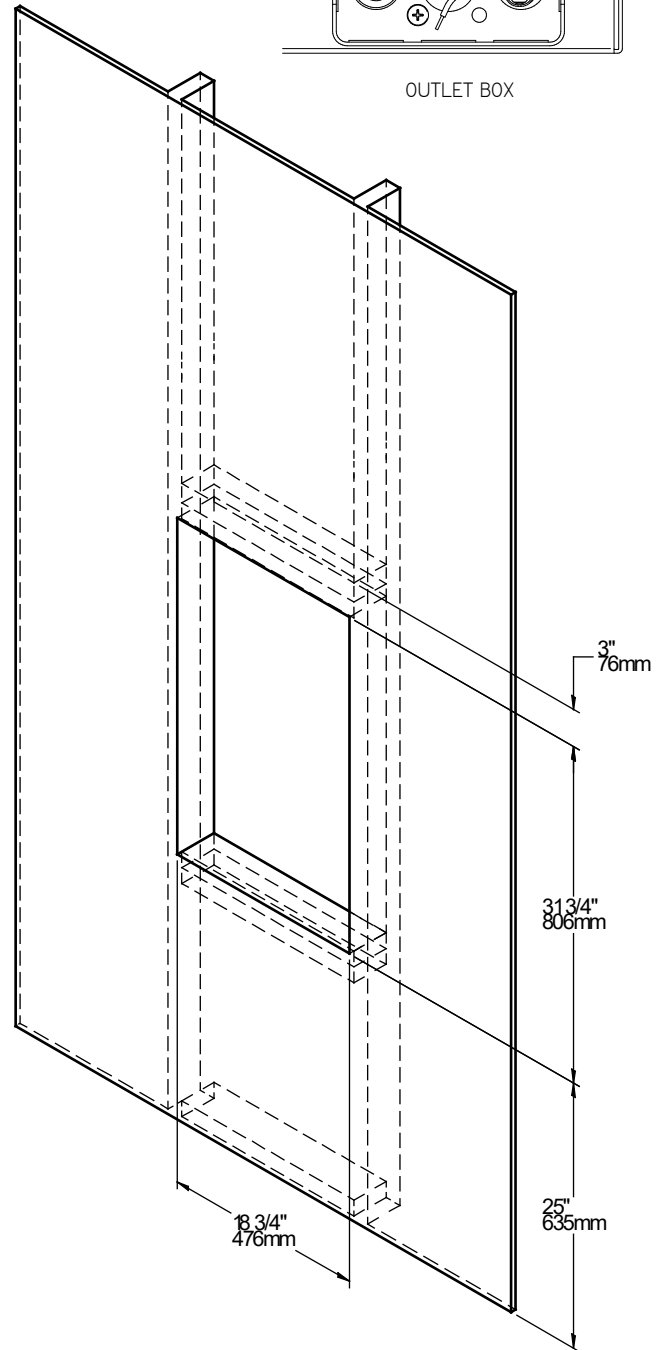

Patent [zurn-elkay.com/patents](http://zurn-elkay.com/patents)

⚠ **WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

⚠ **AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

For Technical Service, please contact us at 1.800.476.4106

# MFWSF100 / MFWSF120 MOUNTING FRAME INSTRUCTIONS

1. **Cut a square rectangular wall opening** 18 3/4" (476mm) W x 31 3/4" (806mm) H and 25" (635mm) above the floor line. These dimensions are required to obtain proper rim and bubbler heights for compliance with ANSI standard A117.1.
2. **Reinforce the wall opening** on all sides so that it will adequately support the water fountain. This reinforcement must support up to 150 lbs static load and provide a means for securing the frame assembly in place.
3. **Install plumbing rough-ins.**
4. **Remove frame assembly and related hardware** from packaging. Install the frame squarely in wall opening with frame upright edges flush with the finished wall face. Secure the frame to the wall using (10) 5/16" bolts or screws (not provided). Tighten securely.  
**NOTE:** Be sure that frame is squared in location. Do not use less than required screw quantity and size.
5. **Mounting Frame Wiring Instructions:**
  - a. Turn off electrical supply to installation location circuit.
  - b. Remove Junction Box Cover to gain access to electrical box.
  - c. Connect electrical supply using conduit, wiring, and connectors per local and national codes.
  - d. Connect ground wire to ground screw (provided).
  - e. Connect black wire to "hot" power supply line 120V 60Hz, 1 phase.
  - f. Connect white wire to Neutral line.
  - g. Replace Junction Box Cover.
  - h. Connect electrical power to installation location circuit.

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.834.4816  
REPAIR SERVICE INFORMATION TOLL FREE NUMBER 1.800.260.6640

ELKAY MANUFACTURING COMPANY • 1333 BUTTERFIELD ROAD • DOWNERS GROVE, IL 60515 • 630.574.8484 • [www.elkay.com](http://www.elkay.com)

For Technical Service, please contact us at 1.800.476.4106