
MOCKETT


PART #

TL37A

310.318.2491 • 800.523.1269 • www.mockett.com

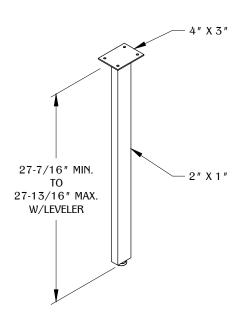

1

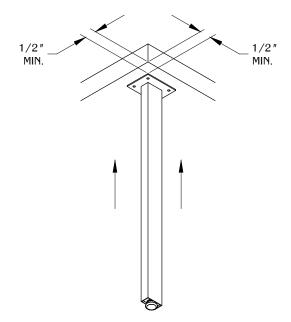

Determine the position and location of the part


underneath the work surface. Place the part 1/2 MIN. clearance from the edge of the work surface.

NOTE:

• Weight capacity is 100 lbs. MAX. per leg.

2



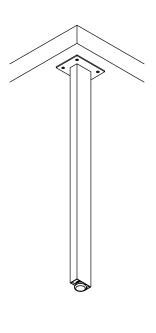

MOUNTING HARDWARE (NOT INCLUDED)

Use (4) pan-head mounting screws to secure the part onto the work surface. (Note: Use appropriate screws and screw length depending on the table type and thickness.)