


PART#	(A) SQ.	(B) SQ. O.C.	(C) DIA.
TL34R-3	8"	6"	3"
TL34R-4	10"	8"	4"
TL34R-6	12"	10"	6"

NOTE:


- Weight capacity is 300 lbs. per leg.

1

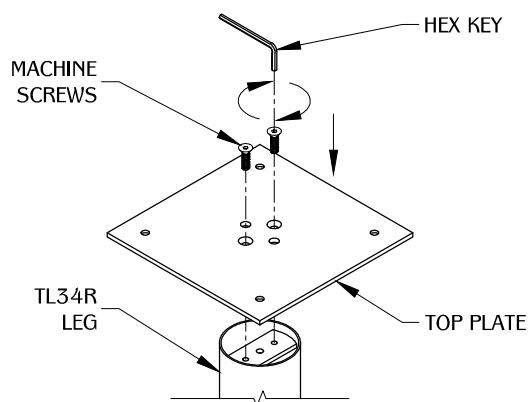


Install the top plate by using (2) flat head machine screws to secure on top of the leg.

2

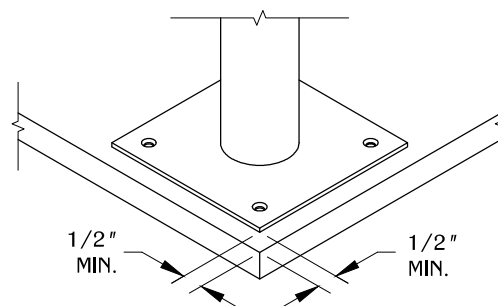





Determine the position and location of the part underneath the work surface. Place the part 1/2" minimum clearance from the edge of the work surface.

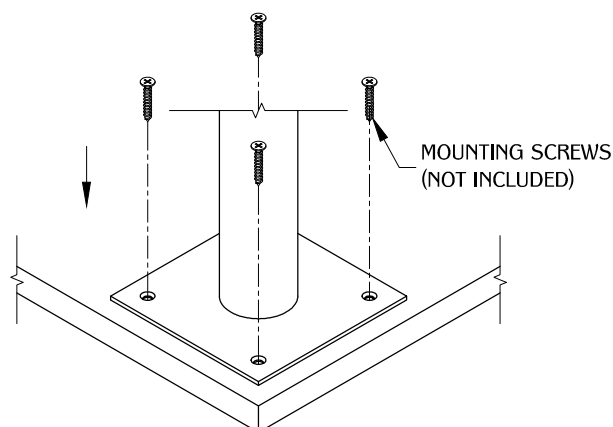3



Use (4) flat head mounting screws to secure the part onto the work surface. (Note: Use appropriate screws and screw length depending on the table type and thickness.)

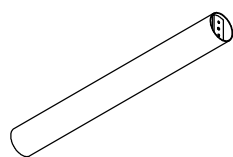TABLE OF CONTENTS:

	1X TL34R LEG
	1X HEX KEY
	2X 7/8" 1/4- 20 THREAD MACHINE SCREWS
	1X TL-TOP PLATE