

store.

deko[®] markerboards must be stored indoors, and stacked horizontally, or vertically with full area support behind, to avoid permanent bowing. Do not store deko[®] markerboards outdoors in direct sunlight or extreme heat. Protective film and adhesives could be damaged by UV exposure, which would make it difficult to remove them from the markerboard surface.

handle.

During installation, while transporting from storage to the installed space, wear gloves and carry the markerboard vertically.

The face of each deko[®] markerboard is protected by high quality removable film. The protective film should be left in position throughout installation and remain in place until installation is complete to keep the markerboard writing surface in factory condition. It is strongly recommended to avoid outdoor storage.

After removing the protective film, clean deko[®] markerboard with denatured alcohol followed by a light water rinse prior to first use.

clean.

Dry Erase Marker

A soft dry eraser or soft microfiber cloth is recommended.

Wet Erase Marker

A soft microfiber cloth used with warm water or markerboard spray cleaner is recommended.

Permanent Markers

Use a soft microfiber cloth with recommended markerboard spray cleaner or denatured alcohol to remove tough inks and permanent marker. Follow this cleaning with a light water rinse to remove cleaning residue.

General Care

To refresh your deko[®] writing surface to its original brilliance, simply spray entire surface with warm water or recommended markerboard cleaner and wipe dry with a soft microfiber cloth or chamois. deko[®] manufactures high performance writing surfaces for felt tipped markers and erasers.

To prevent scratching - DO NOT USE harsh chemicals, abrasive cleaners, sharp writing utensils or other sharp objects on your deko[®] markerboard.

Questions? Contact us:



lighter. brighter. flexible.

dekomarkerboards.com | 844.366.1545