


Parts Diagram

Torsion Air® Seating

Task Armchair

September 2019

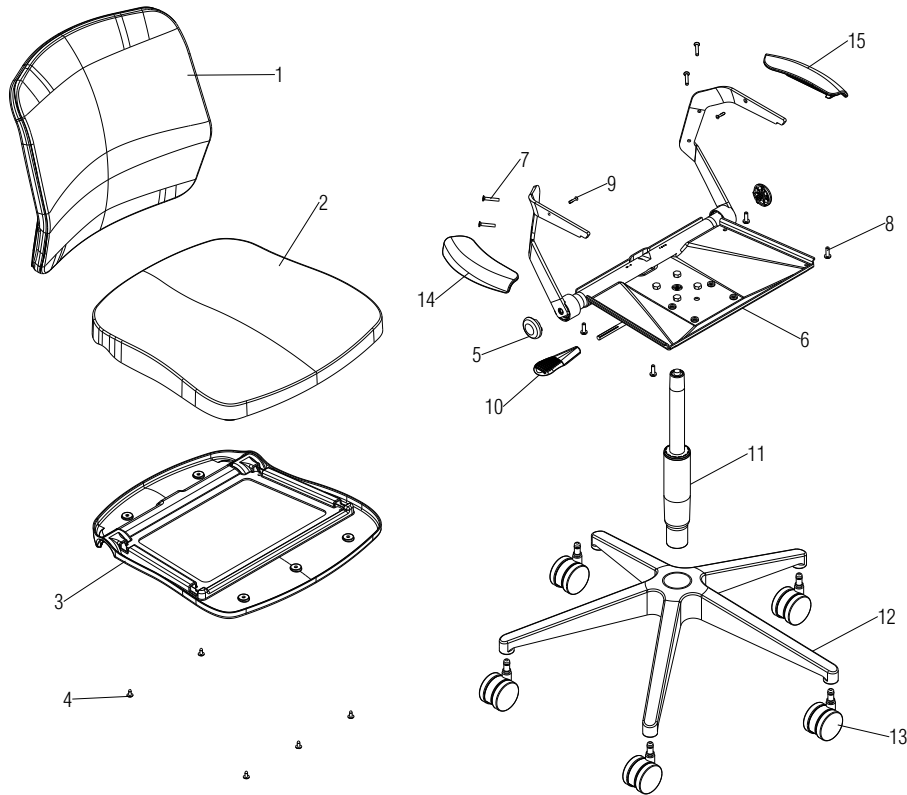

.XX = Select Color

TARC ordered with or without shroud. With shroud includes Items 3 & 4. Without shroud is just TARC.

15.1084.X uses 46.2995.BL.X.

15.1078.X uses SIFT.015.X.

Item	Part Number	Item Description	Req Qty	Item	Part Number	Item Description	Req Qty
1	46.3333.XXMH.X	Assembly, Backrest	1	10	PT.06.6040.BL.X	Handle, Pedestal	1
2	TARC	Seat Cushion, Upholstered (see note)	1	11	15.1084.X	Cylinder, Height Adjustment (black base)	1
3	46.3347.BL.X	Shroud, Pedestal Seat	1		15.1078.X	Cylinder, Height Adjustment (polished aluminum base)	1
4	12.0055.CZ.X	Screw, #10-16 x 1/2 PTH Type AB T/F BLK ZC	5	12	46.2995.BL.X	Base, 5-Blade Plastic (black) (used with 15.1084.X)	1
5	PT.06.7012.BL.X	Cap, Back Support	2		SIFT.015.X	Base, 5-Blade Polished Aluminum (used with 15.1078.X)	1
6	TARF	Replacement Frame, Torsion Air (includes Item 5)	1	13	09.0440.BL.X	Caster, 60mm Diameter Carpet	5
7	12.9011.X	Screw, M5 x 30 CLS 10.9 FSHCS PIn	4		09.0441.BL.X	Caster, 60mm Diameter Hard Floor	5
8	12.0011.X	Screw, M6 x 18 PPH "BosScrew"	4	14	46.3338.R.BL.X	Cap, Arm, Right	1
9	12.0696.TR.X	Screw, 8 x 5/8 TX OV HD T-B BLK OX	2	15	46.3338.L.BL.X	Cap, Arm, Left	1