

Assembly Instructions ■

Likha Casegoods

Adjustable-Height Double Pedestal Desks

August 2021



Figure 1

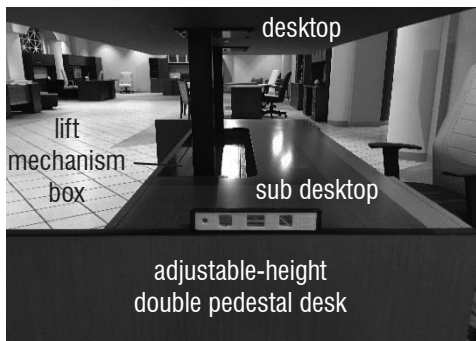


Figure 3



Figure 4

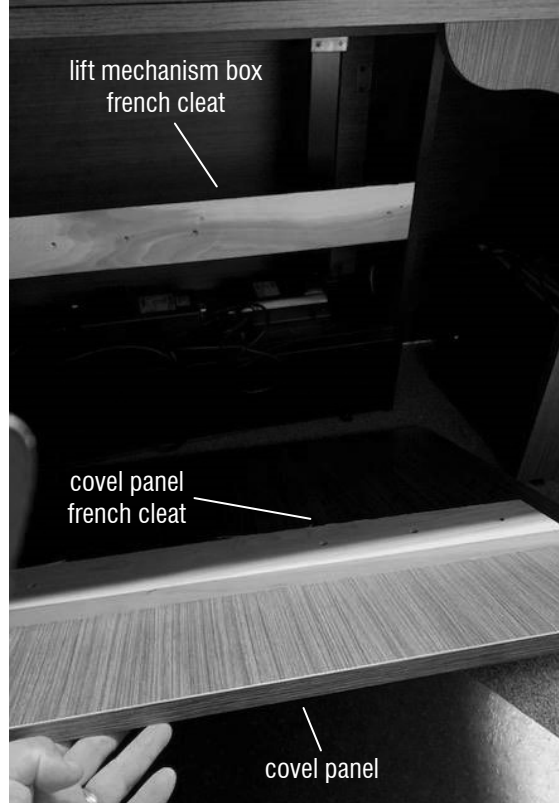


Figure 2

Tools Required

- Spirit Level
- Cordless Power Drill with a #2 Phillips screwdriver bit

1. Carefully remove desk from shipping carton.
2. Position the control pad underneath the front, user side of the sub desktop. Align the control pad straight, then secure underneath the sub desktop using the two #8 x 5/8" screws. Do not overtighten the screws. Once the control pad is mounted, route the attached cord to the port marked A2 on the control box (Figure 1).
3. Underneath the user side of the desk, set the cover panel onto the french cleat that is located on the lift mechanism box and route the power cord to an approved power source. Press the up button on the control pad and raise the adjustable-height desktop to the maximum height (Figure 2).
4. With the adjustable-height desktop raised, adjust and level the desk, beginning at the highest point on the floor first. To raise the desk, rotate the glide counter-clockwise. To lower the desk, rotate the glide clockwise. Only extend glides as needed to make the desk level and all glides must be touching the floor. Next, adjust and level the lifting mechanism box, making sure all glides touch the floor to increase stability (Figure 3).
5. Press the down button on the control pad to lower the adjustable-height desktop until there is a small gap between the underside of the desktop and the top of the sub desktop. If there is not an equal gap, adjust leveling glides as required under the desk (Figure 4).



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.