

Hardware Included

10-24 x 1/2" Flat
head cap screw
(x16)



12-11 x 7/8" Pan head wood
screw (x16)



Ganging
connector (x8)



Caster
(x2)



Accessory hook
(x2 or x4)



1/4" Set
Screw (x16)



 
Epix Table

Assembly Instructions, Models 76302 & 76303


Tool Required

1/8" Hex
Allen Key


Phillips head
screw driver

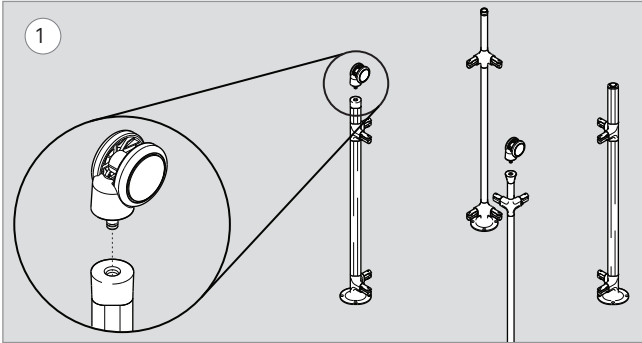

 
Place the glide leg sub assembly (x2) and caster leg sub assembly (x2) upside down as shown with legs with glides on one side and legs with casters on the other side. Press the caster (x2) into each caster leg bottom.

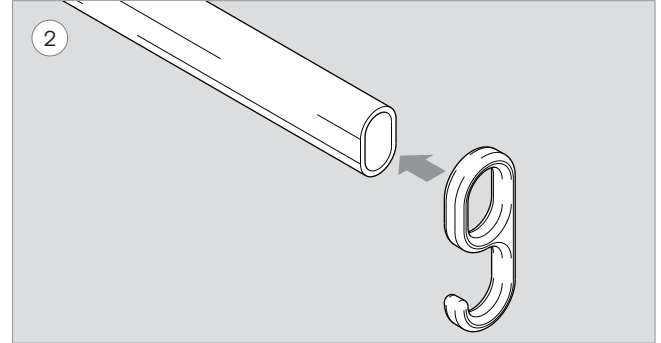

 
Slide the accessory hook (x2 or x4) onto the table side extrusion (x2 or x4).

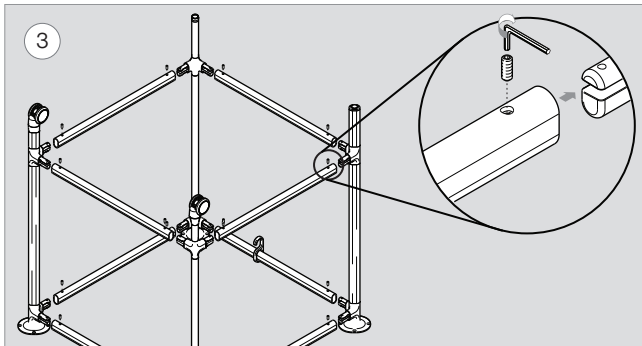

 
Install the side extrusion (x8) onto the eight top mount locations and the eight bottom mount locations. Using the 1/8" hex key fasten with 1/4"-20 x 5/8" set screw (x16).

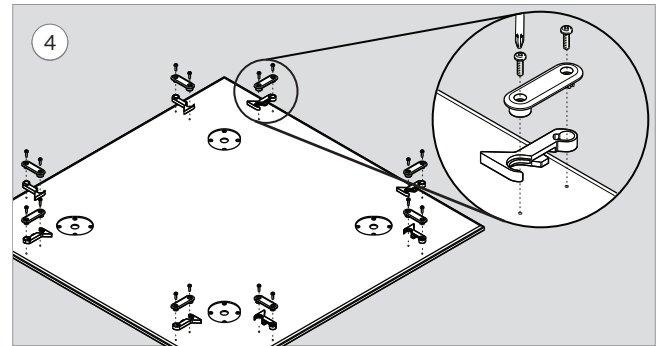

 Place the table top upside down on a blanket. Using the Phillips head screw driver, install the ganging connector (x8) using 12-11 x 7/8" pan head wood screw (x16).

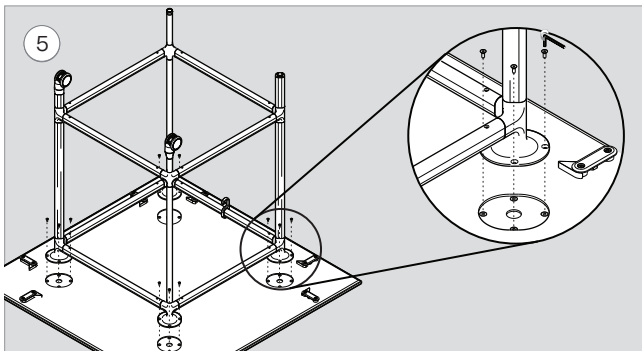

 Using the 1/8" hex key, fasten the base sub assembly to the table top with 10-24 x 1/2" flat head cap screw (x8).

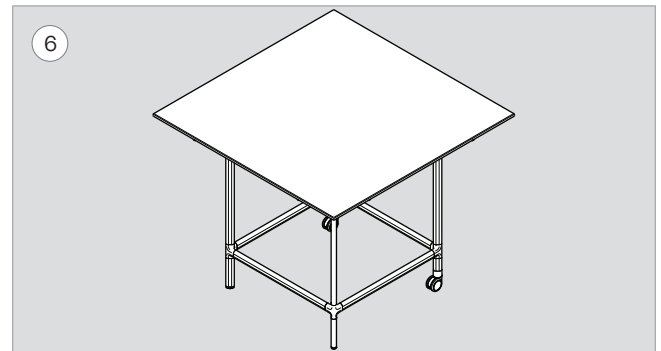

Place assembled cart in its final position.

Hardware Included

12-11 x 7/8"
Pan head wood screw
(x16)

Ganging connector
(x8)



 
 
Tool Required

Phillips head screw
driver



Epix Table

Ganging Instructions, Model 76302 & 76303

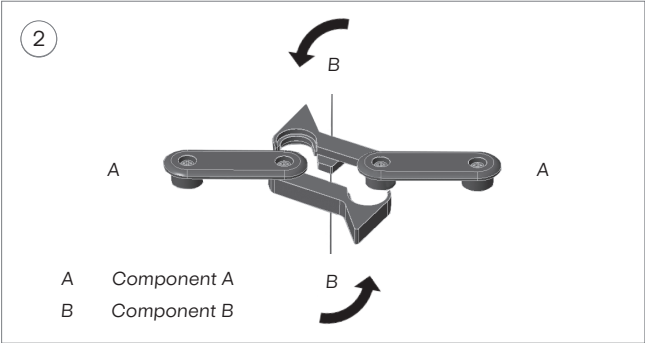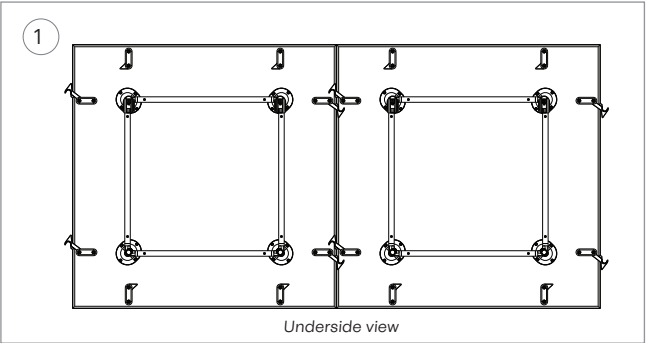


Rotate the Component B on each table until it
clicks into Component A (See 1 & 2).




Epix Table Power (If Applicable)

 
Assembly Instructions, Model 76302 & 76303

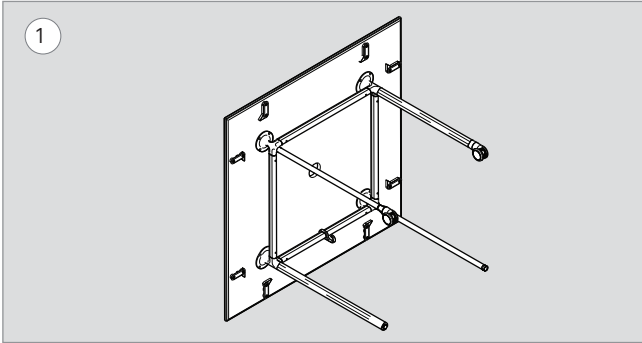

 
Place the table on its edge on a blanket.

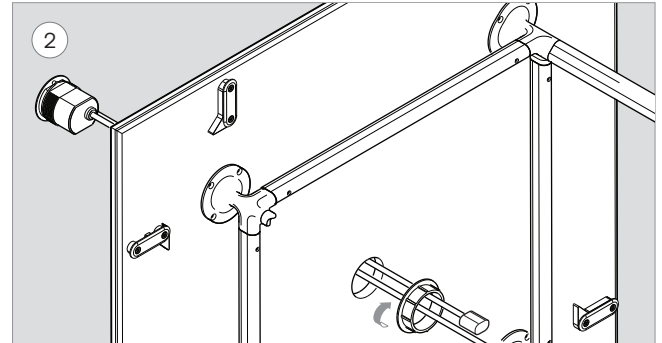

 Unscrew the power box clamp and set aside. Feed the cable(s) through the table cut-out and power box clamp. Reinstall the power box clamp until hand tight.

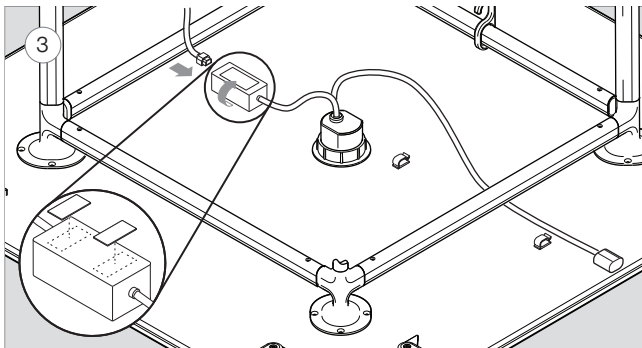

Place the cable management clip (x2) at the location shown. Fasten the control box to the underside of the table at the location shown using the provided velcro (x2)

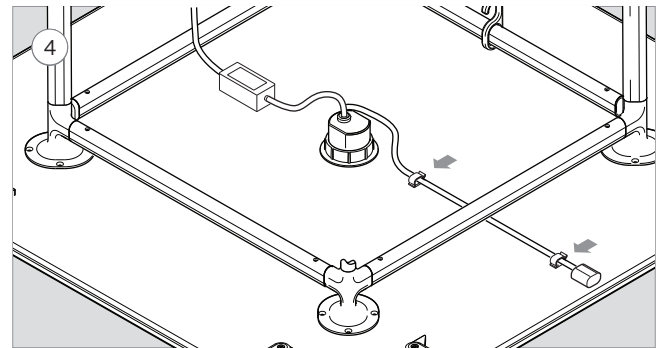


Route the cable through the cable management clip (x2).


Power Linking Epix Tables

EXTREME HAZARD WARNING:

IN ORDER TO PREVENT ELECTRICAL DAMAGE AND/OR FIRE, A MAXIMUM OF (x8) TABLES CAN BE POWER LINKED TOGETHER.

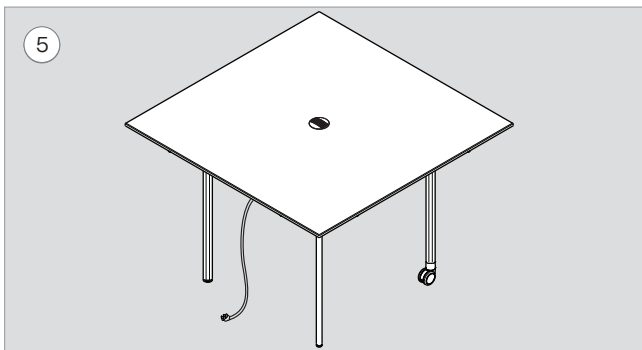

 Place assembled table in its final position. See next page for power layout diagrams.

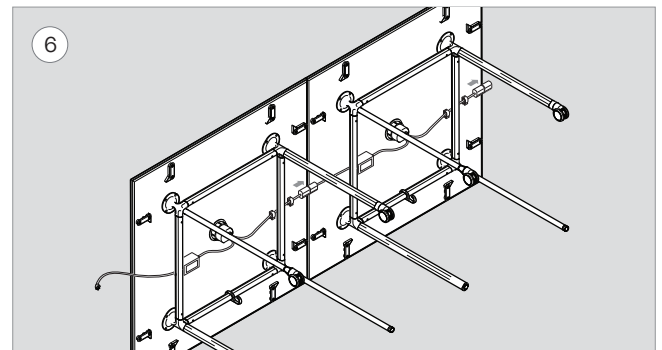

To link a power connection between multiple tables, the starter unit is energized, the connector units continue the daisy chain and the end unit completes the circuit.



Epix Table Power (If Applicable)

Assembly Instructions, Model 76302 & 76303

 
Power Linking Epix Tables

EXTREME HAZARD WARNING:

IN ORDER TO PREVENT ELECTRICAL DAMAGE AND/OR FIRE, A MAXIMUM OF (x8) TABLES CAN BE POWER LINKED TOGETHER.

Single Power Unit

STAND ALONE UNIT

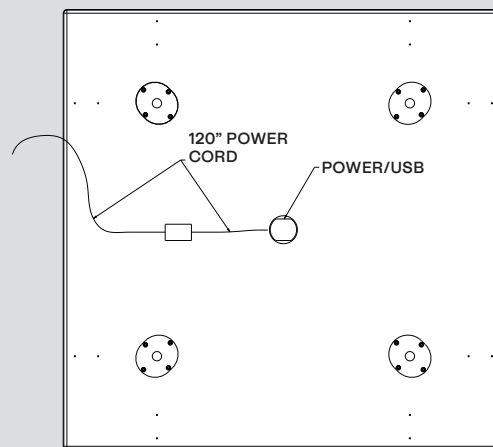

Connected Power Units

STARTER UNIT

CONNECTOR UNIT (UP TO 6)

END UNIT

