
FORYU

Assembly Manual



Parts list 1x B 1x C 1x **E** D 1x **F** 5x G 1x

Assembly manual

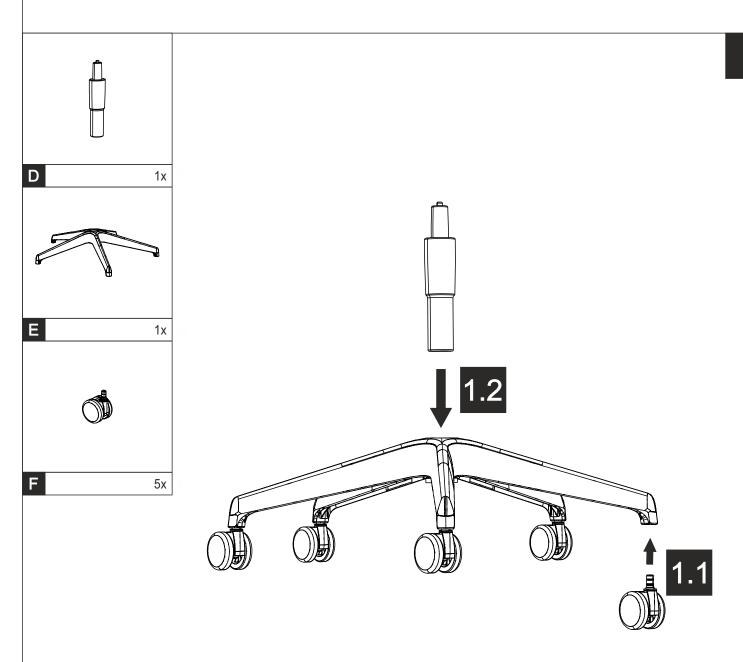

The pneumatic lift cannot be heated or dismantled. Replace it as a whole if necessary. The chair can be repaired or the chair components can be replaced only by trained staff.

