

# Operating Instructions ■

Ruckus™ Mobile Lectern

May 2021

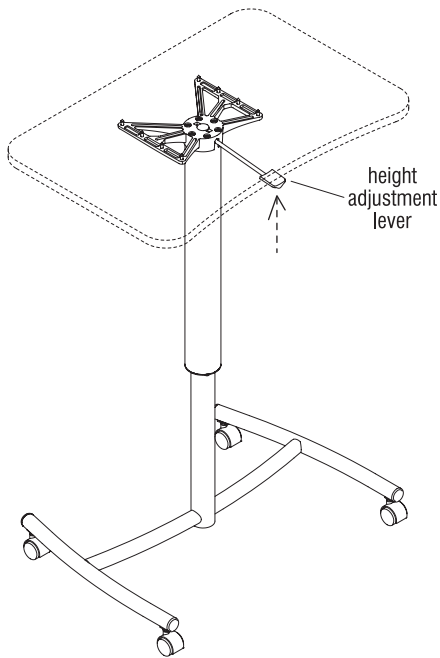


Figure 1


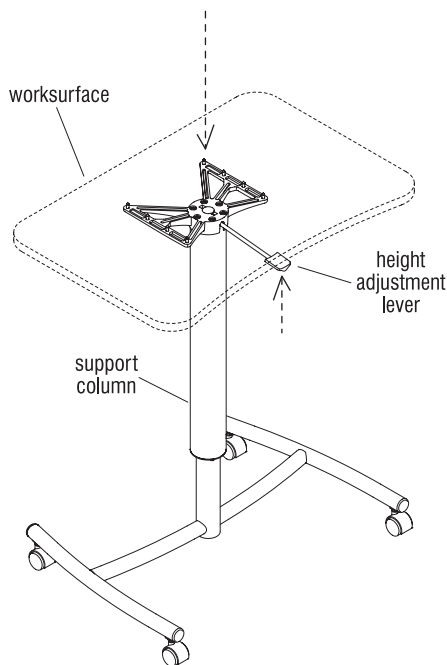


Figure 2

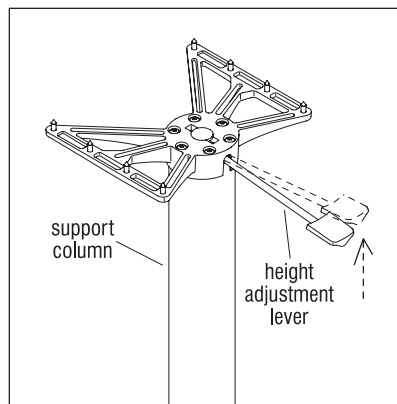

Detail A - Height Adjustment Lever

## Pneumatic Adjustable-Height Mobile Lectern

1. To raise the height of the lectern, lift the height adjustment lever located at the front of the user side of the worksurface (Figure 1 & Detail A).
2. To lower the height of the desk, lift the height adjustment lever while applying downward force on the worksurface, directly above the support column (Figure 2 & Detail A).



CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.