


Disassembly Instructions

Acrylic Modesty Panel

Material Type: A. Acrylic B. Steel C. Plastic

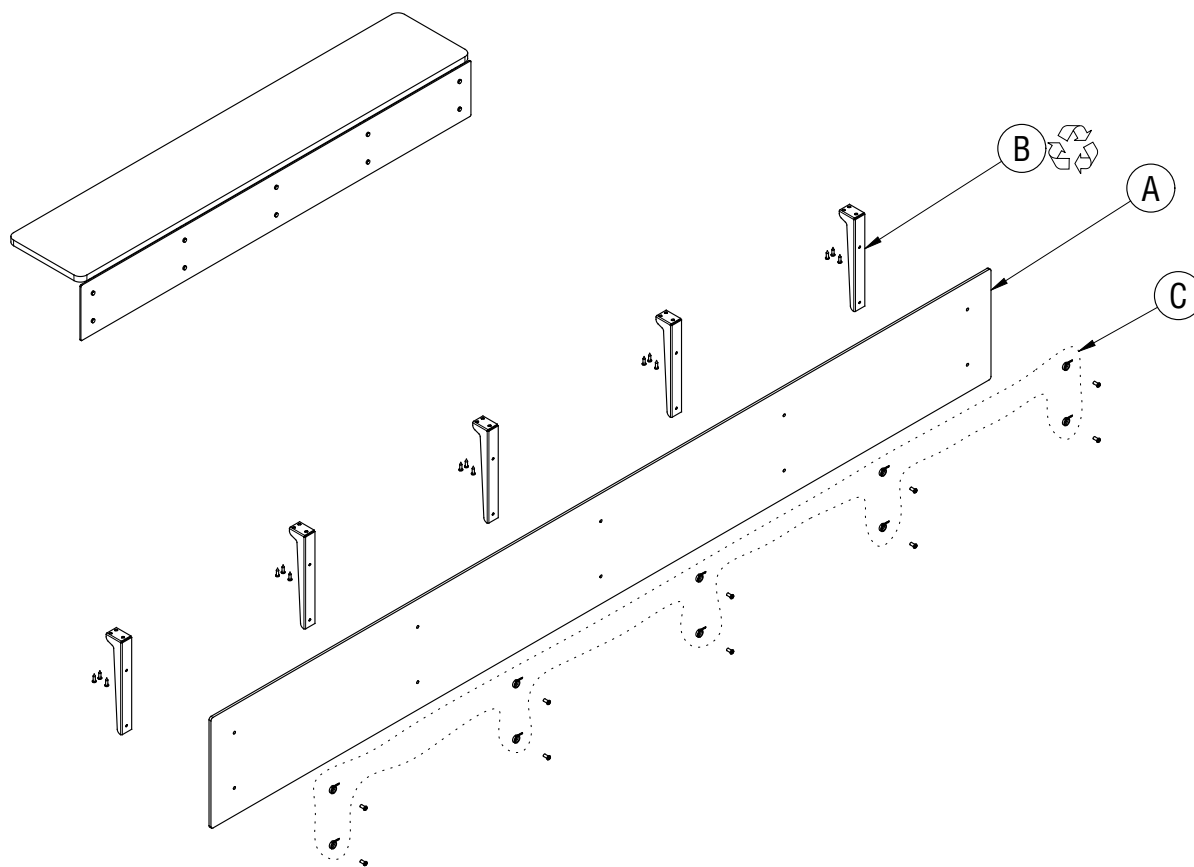

Procedure:

1. Unsnap the caps on the plastic screw covers.
2. Remove the screws attaching the modesty panel to the modesty panel brackets.
3. Remove the modesty panel brackets from bottom of the worksurface.



All fasteners not explicitly tagged or shown are Material Type B: Steel

General Notes:

1. Disassembly time: 15-20 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance



4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at www.ki.com

 
Required Tools



Gloves



Safety Glasses



Phillips Screwdriver