Assembly Guidelines ■

Seminar® Tables & University Seating®
4-Wire Power Infeed Requirements


September 2021








FLOOR INFEED SEMINAR BASIC BASE

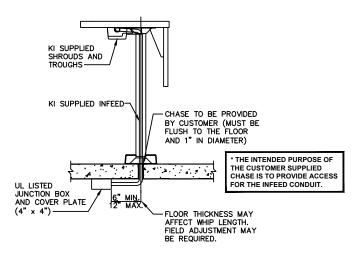

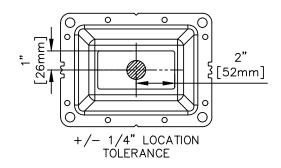


TRUE FLOOR INFEED (JUNCTION BOX BELOW THE FLOOR)

END FLOOR INFEED


CUSTOMER SUPPLIED INFEED KI SUPPLIED INFEED KI SUPPLIED RECEPTACLE & RECEPTACLE SHROUD KI SUPPLIED TROUGH RECEPTACLE CONNECTOR SUPPLIED 4" x 4" x 2 1/8" UL LISTED JUNCTION BOX & COVER PLATE TO BE CENTERED WITH KNOCKOUTS ON KI SUPPLIED INFEED SHROUD AND RECEPTACLE SHROUD. LOCATION OF JUNCTION BOX CAN VARY DEPENDING UPON FIELD CONDITIONS.

TOP VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

CENTER FLOOR INFEED

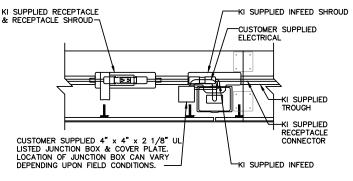


TOP VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

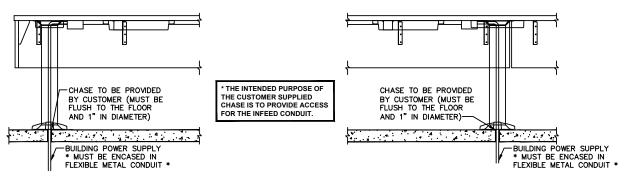


FRONT VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

FRONT VIEW
(JUNCTION BOX MOUNTED UNDER WORK SURFACE)

FLOOR INFEED SEMINAR SELECT BASE

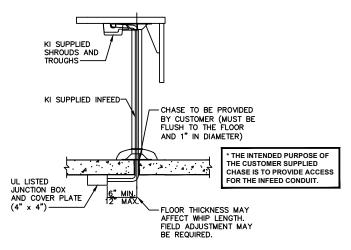

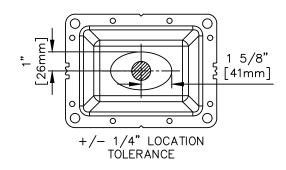


TRUE FLOOR INFEED (JUNCTION BOX BELOW THE FLOOR)

END FLOOR INFEED


CUSTOMER SUPPLIED ELECTRICAL KI SUPPLIED RECEPTACLE & RECEPTACLE SHROUD KI SUPPLIED RECEPTACLE SHROUD KI SUPPLIED RECEPTACLE CONNECTOR CENTERLINE OF KNOCKOUTS ON CUSTOMER SUPPLIED 4" x 4" x 2 1/8" UL LISTED JUNCTION BOX & COVER PLATE TO BE CENTERED WITH KNOCKOUTS ON KI SUPPLIED INFEED SHROUD AND RECEPTACLE SHROUD. LOCATION OF JUNCTION BOX CAN VARY DEPENDING UPON FIELD CONDITIONS.

CENTER FLOOR INFEED

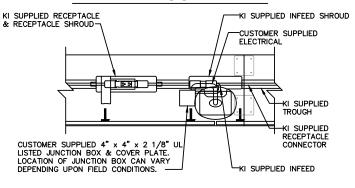

TOP VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)


TOP VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

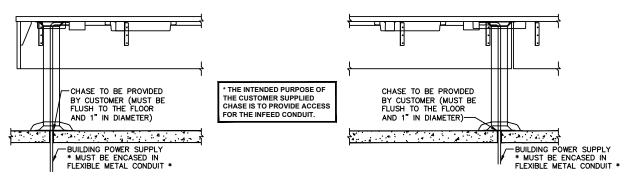


FRONT VIEW
(JUNCTION BOX MOUNTED UNDER WORK SURFACE)

FRONT VIEW
(JUNCTION BOX MOUNTED UNDER WORK SURFACE)

FLOOR INFEED UNIVERSITY BASIC BASE

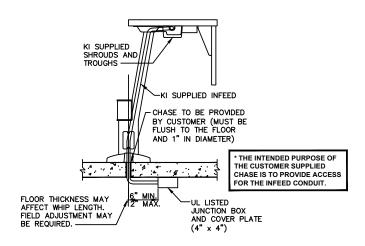


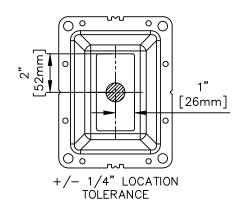


TRUE FLOOR INFEED (JUNCTION BOX BELOW THE FLOOR)

END FLOOR INFEED


CENTER FLOOR INFEED

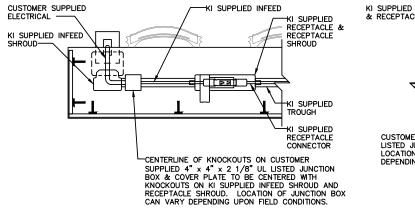

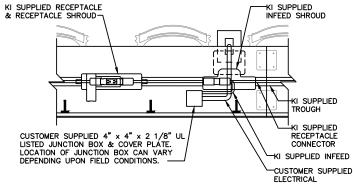

TOP VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)


TOP VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

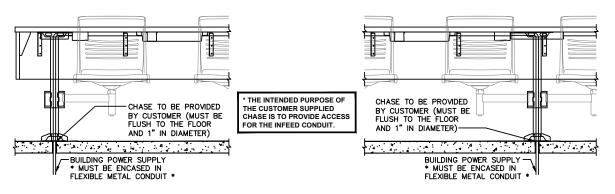


FRONT VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

FRONT VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

FLOOR INFEED UNIVERSITY SELECT BASE

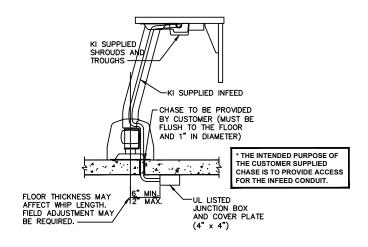

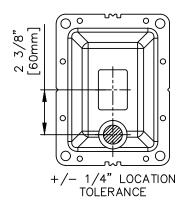


TRUE FLOOR INFEED (JUNCTION BOX BELOW THE FLOOR)

END FLOOR INFEED


CUSTOMER SUPPLIED ELECTRICAL KI SUPPLIED INFEED KI SUPPLIED INFEED KI SUPPLIED INFEED KI SUPPLIED KI SUP

CENTER FLOOR INFEED

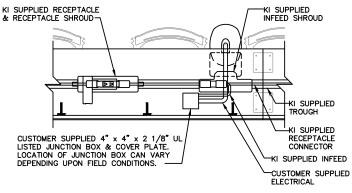

TOP VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)


TOP VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

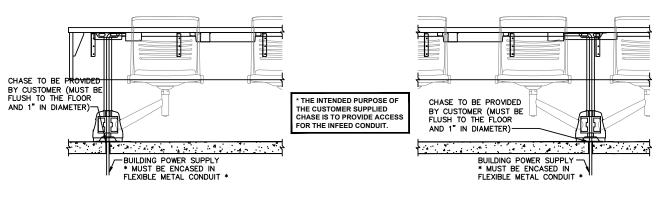


FRONT VIEW
(JUNCTION BOX MOUNTED UNDER WORK SURFACE)

FRONT VIEW (JUNCTION BOX MOUNTED UNDER WORK SURFACE)

SIDE INFEED SEMINAR BASIC BASE

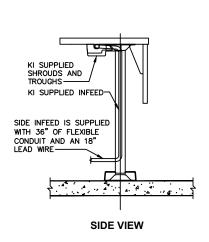


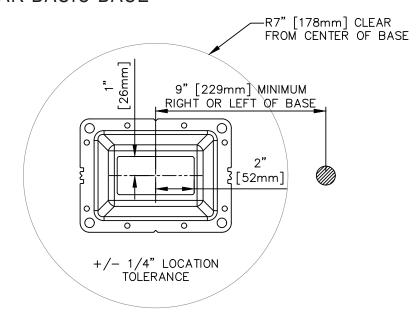

END FLOOR INFEED


KI SUPPLIED INFEED KI SUPPLIED INFEED KI SUPPLIED RECEPTACLE SHROUD KI SUPPLIED TROUGH KI SUPPLIED RECEPTACLE CONNECTOR

CENTER FLOOR INFEED

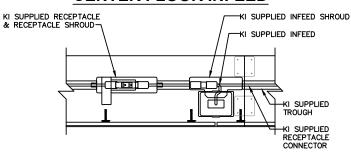


TOP VIEW TOP VIEW

* REFERENCE ASSEMBLY INSTRUCTIONS FOR DETAILED INFORMATION ON CONNECTION AT COVER PLATE. ALL KI SUPPLIED CONDUIT FITTINGS USE 1/2" KNOCKOUTS

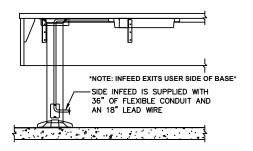



FRONT VIEW
(POWER SUPPLY LOCATIONS VARY
PER FIELD CONDITIONS)

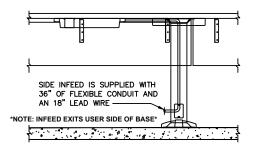

FRONT VIEW
(POWER SUPPLY LOCATIONS VARY
PER FIELD CONDITIONS)

SIDE INFEED SEMINAR SELECT BASE

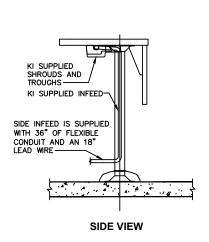


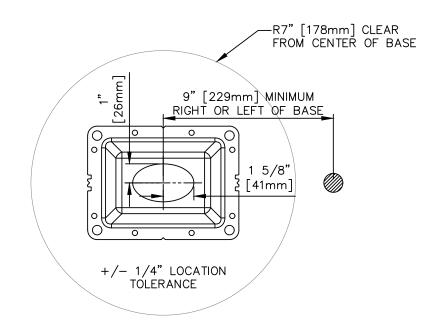

END FLOOR INFEED


KI SUPPLIED INFEED KI SUPPLIED INFEED KI SUPPLIED RECEPTACLE SHROUD KI SUPPLIED TROUGH KI SUPPLIED TROUGH KI SUPPLIED TROUGH KI SUPPLIED TROUGH KI SUPPLIED TROUGH

CENTER FLOOR INFEED

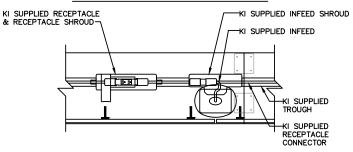


TOP VIEW TOP VIEW

* REFERENCE ASSEMBLY INSTRUCTIONS FOR DETAILED INFORMATION ON CONNECTION AT COVER PLATE. ALL KI SUPPLIED CONDUIT FITTINGS USE 1/2" KNOCKOUTS

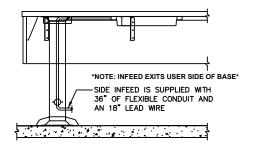



FRONT VIEW
(POWER SUPPLY LOCATIONS VARY

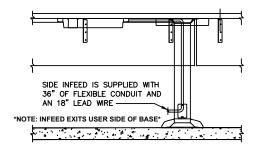

FRONT VIEW (POWER SUPPLY LOCATIONS VARY

SIDE INFEED UNIVERSITY BASIC BASE

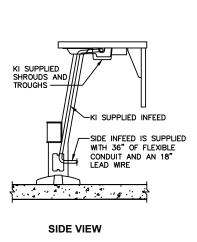


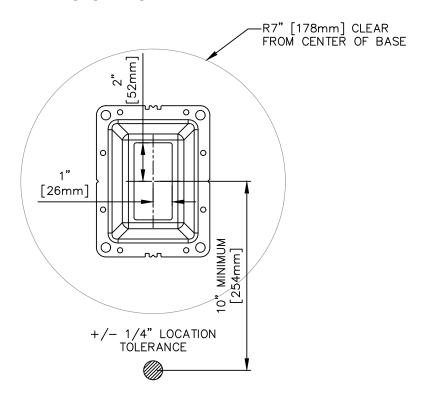


END FLOOR INFEED

KI SUPPLIED INFEED KI SUPPLIED KI SUPPLIED TROUGH KI SUPPLIED RECEPTACLE KI SUPPLIED RECEPTACLE CONNECTOR

CENTER FLOOR INFEED

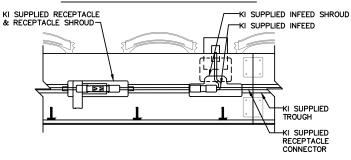


TOP VIEW TOP VIEW

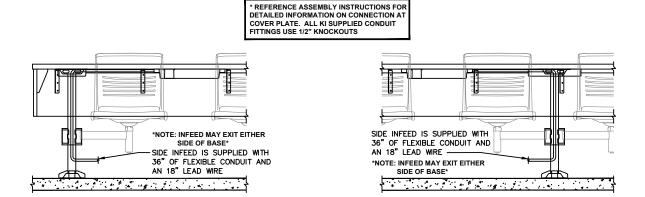


FRONT VIEW
(POWER SUPPLY LOCATIONS VARY


FRONT VIEW
(POWER SUPPLY LOCATIONS VARY

SIDE INFEED UNIVERSITY SELECT BASE

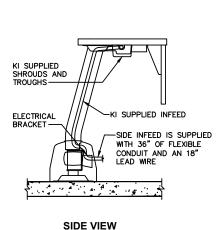


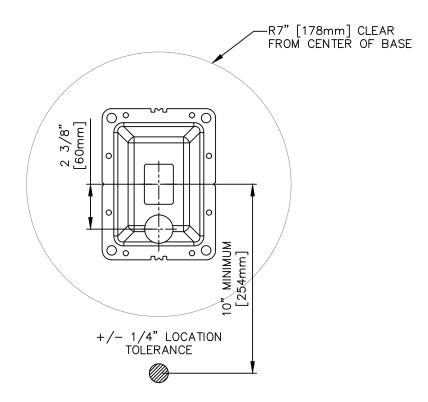


END FLOOR INFEED

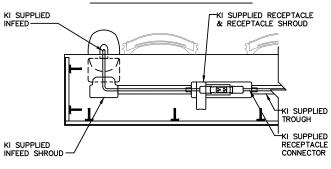

CENTER FLOOR INFEED

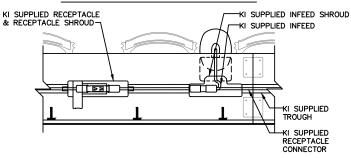

TOP VIEW TOP VIEW

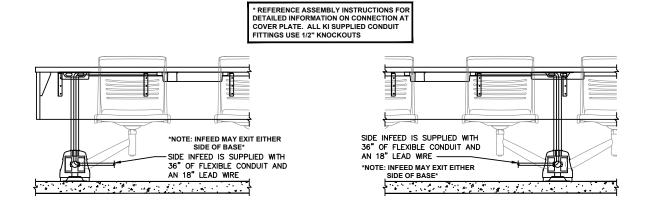

FRONT VIEW
(POWER SUPPLY LOCATIONS VARY
PER FIELD CONDITIONS)

FRONT VIEW
(POWER SUPPLY LOCATIONS VARY
PER FIELD CONDITIONS)

KI 1330 Bellevue Street P.O. Box 8100 Green Bay, Wisconsin 54308-8100 1-800-424-2432 www.ki.com

KI is a registered trademark of Krueger International, Inc.

© 2021 Krueger International, Inc. All Rights Reserved Code KI-AI-000095/KI/PDF/0921

