

Assembly Instructions ■

All Terrain® Screens

April 2017



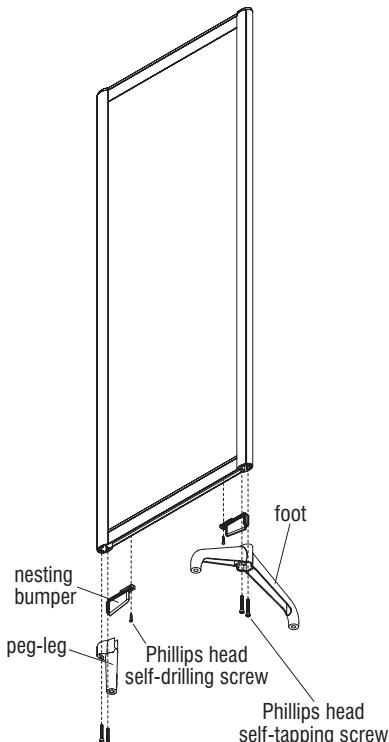


Figure 1

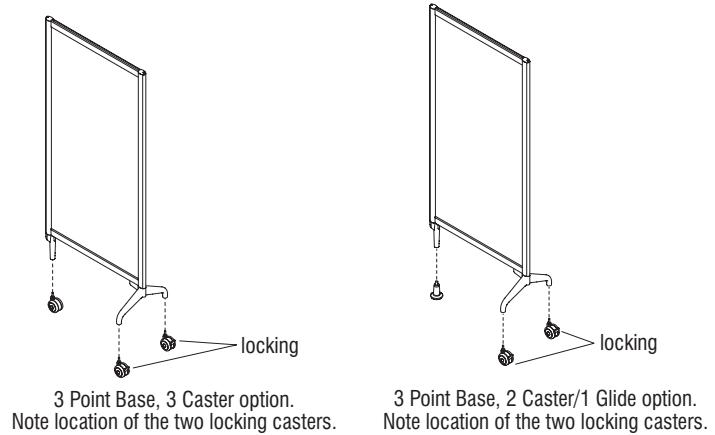


3 Point Base, 3 Caster option.
Note location of the two locking casters.

3 Point Base, 2 Caster/1 Glide option.
Note location of the two locking casters.

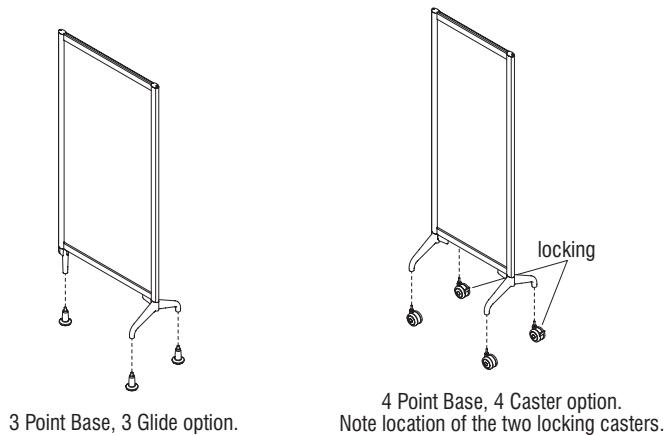


3 Point Base, 3 Glide option.


4 Point Base, 4 Caster option.
Note location of the two locking casters.

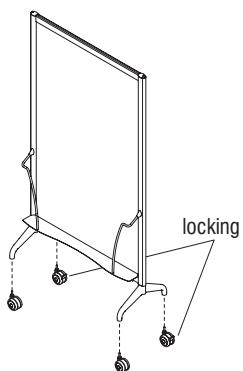

Markerboard Cart.
Note location of the two locking casters

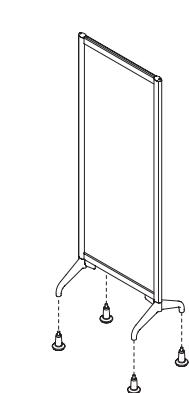


4 Point Base, 4 Glide option.

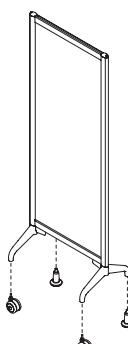

4 Point Base, 2 Caster/ 2 Glide option.
Note location of the two casters and two glides.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

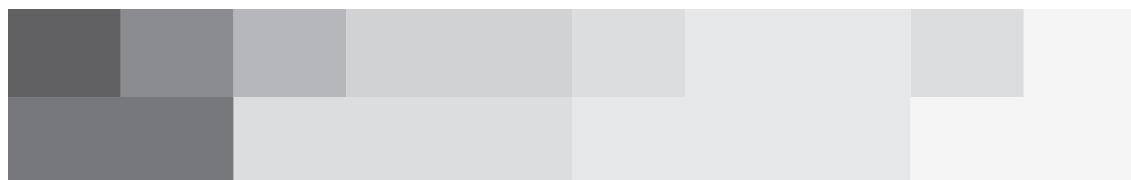

■ All Terrain® Screens

Operating Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Lightweight and Mobile Screens Operating Instructions

Multiple core materials available... translucent, whiteboard or fabric.

Three point base allows for connection of multiple screens at infinite angles.

Four-point base creates a more stable independent unit.

Whiteboards should be used with Sanford® Expo® dry erase markers. Use 100% cotton cloth for cleaning dry erase surface. For stubborn spots wipe clean using a soft cloth and a mixture of hot water and mild soap. Dry the board using a clean, soft cloth.

Translucent plexiglass screen should be cleaned with a standard window cleaner.

